

# USER GUIDE

 
UK DE FR NL IT SW PL GR CZ

## PMR Voxtel R220




**AEG**  
perfekt in form und funktion


P1

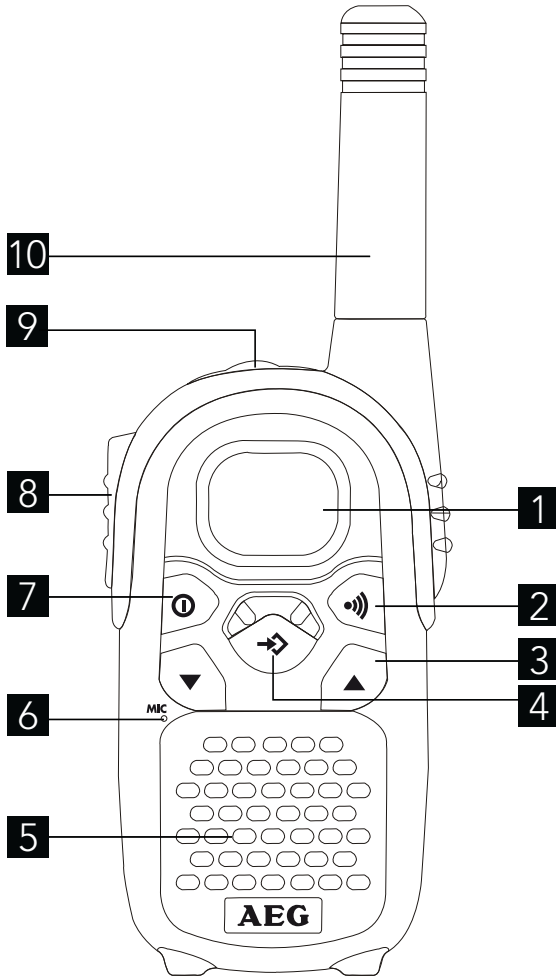


P2

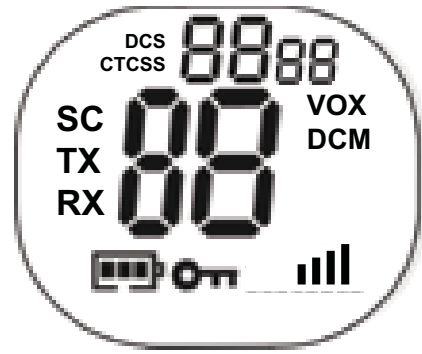 


P3

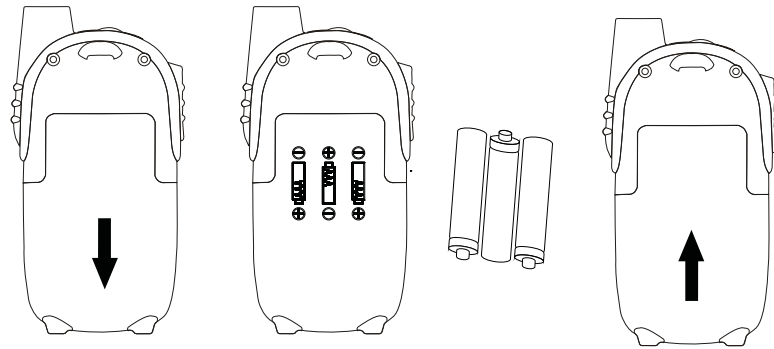 

P4

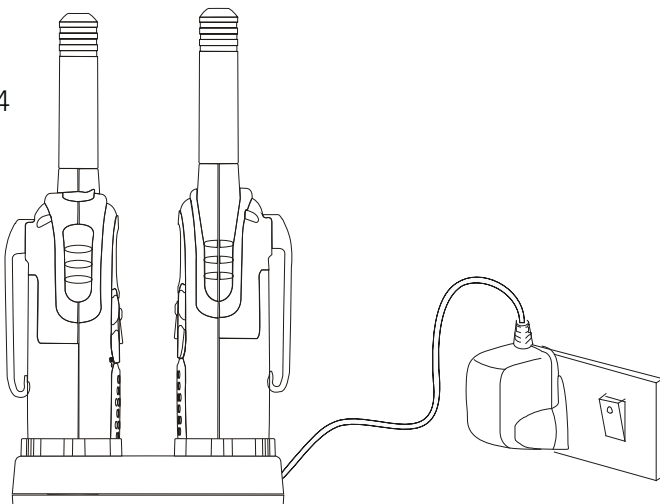 

P5

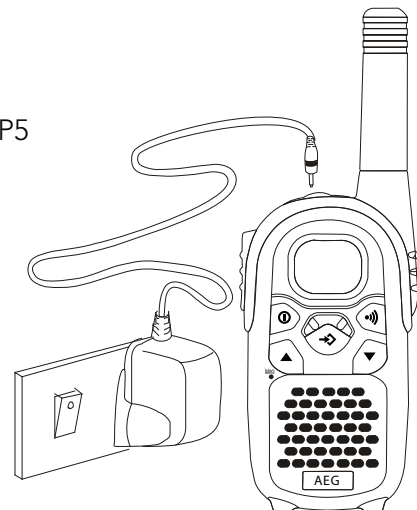 





## 1 BECAUSE WE CARE







Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefor save trees to be cut for making this paper. Thank you for supporting us to protect our environment.

## 2 GETTING TO KNOW YOUR PMR

### 2.1 Handset overview (see P1)

| #  |                                                                                     | Meaning                                                                                                                                                  |
|----|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  |                                                                                     | <b>LCD screen</b> <ul style="list-style-type: none"> <li>• Displays the current channel selection and other radio symbols.</li> </ul>                    |
| 2  |  | <b>Call button</b> <ul style="list-style-type: none"> <li>• Press to send ringing tone to other PMR units.</li> </ul>                                    |
| 3  |  | <b>Up / down buttons</b> <ul style="list-style-type: none"> <li>• Press to change channels, volume and to select settings during programming.</li> </ul> |
| 4  |  | <b>Menu button</b> <ul style="list-style-type: none"> <li>• Press to switch between modes.</li> </ul>                                                    |
| 5  |                                                                                     | <b>Speaker</b>                                                                                                                                           |
| 6  | MIC                                                                                 | <b>Microphone</b>                                                                                                                                        |
| 7  |  | <b>Power button</b> <ul style="list-style-type: none"> <li>• Press and hold to turn the unit on or off.</li> </ul>                                       |
| 8  | PTT                                                                                 | <b>PTT (push to talk) button</b> <ul style="list-style-type: none"> <li>• Press and hold to transmit.</li> </ul>                                         |
| 9  |                                                                                     | <b>Microphone/earphone/charge jack</b>                                                                                                                   |
| 10 |                                                                                     | <b>Antenna</b>                                                                                                                                           |

## 2.2 LCD screen (see P2)

|                                                                                     | Meaning                                                         |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------|
|    | Channel number.<br>Changes from 1 to 8 as selected by the user. |
|    | CTCSS code.<br>Changes from 1 to 38 as selected by the user.    |
|    | Displays the battery charge level.                              |
|    | Displayed when the stop watch function is activated.            |
| <b>TX</b>                                                                           | Displayed when transmitting a signal.                           |
| <b>RX</b>                                                                           | Displayed when receiving a signal.                              |
| <b>DCM</b>                                                                          | Displayed when the dual watch function is turned on.            |
| <b>DCS</b>                                                                          | Displayed when the Digital Code System is turned on.            |
| <b>VOX</b>                                                                          | Displayed when the VOX feature is enabled.                      |
| <b>SC</b>                                                                           | Displays when the PMR is scanning all channels.                 |
|  | Displayed when the key lock feature is activated.               |
|  | Displays the current speaker volume level.                      |

## 3 INSTALLATION

### 3.1 Removing the belt clip

- Pull the belt clip latch forward (away from the PMR).
- While pulling the belt clip latch, push up the belt clip as shown in Fig. 1.

### 3.2 Installing the belt clip

- Slide the belt clip into the slot as shown in Fig. 2.  
>A “click” indicates the belt clip is locked into its position.

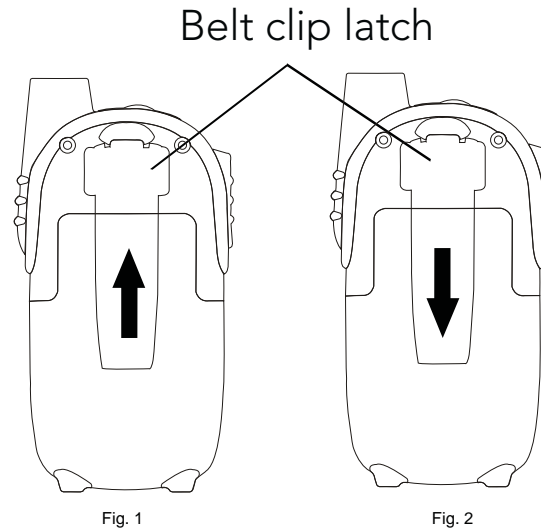 


Fig. 1

Fig. 2

### 3.3 Installing the batteries (see P3)

#### Caution:

Observe the proper battery polarity orientation when installing batteries. Incorrect positioning can damage both the batteries and the unit.

- Slide down the battery compartment cover.
- Insert the rechargeable batteries by following the orientation as shown in P3.
- Replace the battery compartment cover.

#### Important:

#### Read these safety warnings before you charge the batteries.

- Don't try to recharge non-rechargeable batteries.
- Make sure the battery compartment cover is securely locked in place when you are charging the batteries.
- Dispose of used batteries safely and in a way that will not harm the environment, never try to burn them or put them anywhere, they could get burnt or punctured.
- Don't leave dead batteries in your PMR units. They might leak if you do.

### 3.4 Charging the batteries

#### 3.4.1 With duo charger (model R210/R220) (see P4)

- Insert the small plug on the end of the mains adaptor into the power-in connection jack at the back of the desktop charger.

- Plug the mains adaptor into a 220V AC, 50Hz main socket.
- Place the PMR units in the charge cradle in an upright position. The charge LED indicators will light up.
- It takes about 10 hours to fully recharge the batteries if they are completely run down. New batteries take up to 14 hours to fully charge.

**Important:**

- The unit must be charged using the mains adaptor provided. Using any other adaptor will result in non-compliance with EN60950-1 and will invalidate any approvals and warranty.
- Always turn off the PMR units when charging. This will shorten the charging time.




### 3.4.2 Using the adapter (model R200/R210/R220) (see P5)

- Lift the charge socket cover located on the upper side of the PMR.
- Insert the round connector of the 9V DC / 200 mA adaptor into the charge jack.
- Plug the mains adaptor into a 220 V AC, 50 Hz main socket.

## 3.5 Battery meter

The battery meter is located in the left corner of the LCD screen. It appears like a battery with three bars inside. These indicate the amount of power available. When the battery level reaches its minimum level in PMR on mode, the unit will emit two beep tones and automatically the unit will power off.

The unit can detect the battery charge in 4 levels:

|                                                                                     |                                                                                                                    |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
|  | Battery charge at high level.                                                                                      |
|  | Battery charge at medium level.                                                                                    |
|  | Battery charge at low level. At this level, the unit will emit a "beep" sound for every 10 seconds in normal mode. |
|                                                                                     | <b>Important: Charge the unit for 10-14 hours.</b>                                                                 |



Battery charge at very low level. When the battery level reach it minimum level in on mode, unit will emit two beep tone and automatically turn off the power and proceeds to watch mode.

### 3.6 Battery life

The unit has a built in power saver to make the batteries last longer. But when you are not using the units, turn them off to conserve battery power.

## 4 OPERATION

### 4.1 Transmitting range

The talk range depends on the environmental and terrain. It will be reach up to about 8 km in wide open spaces, without obstructions such as hills or buildings. Don't try to use two PMR units which are less than 1,5 m apart. If you do, you may have experience interference.

#### **Important safety warning:**

- To reduce radio frequency exposure when you are using your PMR, hold the unit at least 5 cm away from your face.
- Never use your unit outdoors during a thunderstorm.
- Don't use the unit in the rain.
- If your unit gets wet, turn it off and remove the batteries. Dry the battery compartment and leave the cover off for a few hours. Don't use the unit until it is completely dry.
- Keep the unit out of reach for babies and young children.

### 4.2 Turning the unit on/off

To turn on:

- Press and hold the power button  until the LCD screen turns on and displays the current channel.

To switch off:

- Press and hold the power button  until the LCD screen turns blank.  
> You can hear a tone each time to confirm.

### 4.3 Adjusting the speaker volume

The volume level is shown by vertical bars on the LCD screen. You can change the volume while using your unit, or while the unit is idle (switched on but not in use).

- Press the up button ▲ to increase or press down button ▼ to decrease the speaker volume.

### 4.4 Changing channels

The unit has 8 available channels, to communicate with other PMR users within a range, you must all have your unit tuned to the same channel.

- Press the menu button → once, the current channel number flashes on the LCD screen.
- Press the up ▲ or down ▼ button to select the desired channel.
  - > The channel changes from 1 to 8, or vice versa.
- Press the **PTT** button to confirm the channel setting.

#### Note:

Refer to the "Channel frequency table" section of this owner's manual for detailed frequency listing.

#### 4.4.1 Setting the CTCSS sub-channel

Each channel also has 38 sub-channels to let you set up group of users within the same channel for more private communication. If you have set the sub-channel, you can only communicate with other PMR users tuned to the same channel and sub-channel.




To turn the sub-channel function off, simply set the sub-channel to 0 (zero). You can communicate with any PMR user set to the same channel who also turns off the sub-channel operation.

- Press the menu button → twice, the current CTCSS sub-channel number flashes on the LCD screen.
- Press the up ▲ or down ▼ button to select one of the 38 CTCSS sub-channels.
- Press the **PTT** button to confirm the sub-channel setting.



#### 4.4.2 Setting the DCS advanced digital code

Each channel also has 83 digital codes to let you set up group of users for more secured private communication.

- Press the menu button  3 times. DCS code is blinking on the LCD screen.
- Press the up  or down  button to select the desired DCS code.
- Press the **PTT** button to confirm the DCS channel setting.



#### Transmitting and receiving

- The PMR transmission is "one way-at-a-time." While you are speaking, you can not receive a transmission.
- The PMR is an open-license band. Always identify yourself when transmitting on the same channel.

#### 4.5 Receiving




The unit is continuously in the receive mode when the unit is turned on and not transmitting. When a signal is received on the current channel, **RX** icon will be displayed on the LCD screen

#### 4.6 Transmitting (sending a speech)

- Press and hold the **PTT** (push to talk) button to transmit your voice. **TX** icon will be displayed on the LCD screen.
- Hold the unit in a vertical position with the microphone 5 cm away from the mouth. While holding the **PTT** button, speak into the microphone in a normal tone of voice.
- Release the **PTT** button when you have finished speaking.

#### 4.7 Monitor

You can use the monitor feature to check for weak signals on the current channel.

- Press and hold the menu  and down  buttons at the same time. **RX** icon will be displayed on the LCD screen. Your unit will pick up signals on the current channel, including background noise.
- Press the menu button  to stop the channel monitoring.

## 4.8 Setting the VOX (voice activated) sensitivity

In VOX mode, the unit will transmit a signal only when it is activated by your voice or other sounds around you. The unit will transmit further for 2 seconds even if you stop talking.

The level of VOX sensitivity is shown by a number on the LCD screen. At the highest level, the units will pickup softer noise (including background noise); at the lowest level, it will pick up only louder noise.

- Press the menu button  $\rightarrow$  4 times, **VOX** icon will be displayed and "OF" flashes on the LCD screen.
- Press the up button  $\blacktriangle$  to set the VOX sensitivity into maximum level (the maximum level is 3.)
- To deactivate the VOX function, press the down button  $\blacktriangledown$  until "OF" appears on the LCD screen.
- Press the PTT button to confirm your setting. **VOX** will steady appear on the LCD screen as along as the VOX feature is activated.

### Note:

VOX operation is not recommended if the unit will be used in a noisy or windy environment.

## 4.9 Activating the auto channel scan

Channel scan perform searches for active signals in an endless loop for all 8 channels, 38 CTCSS codes and all 83 DCS codes.


- Press the menu button  $\rightarrow$  5 times, **SC** icon will display on LCD screen.
- Press the up  $\blacktriangle$  or down  $\blacktriangledown$  button to begin scanning channels when an active signal is detected, channel scan pauses on the active channel.
- Press the menu button  $\rightarrow$  six times, CTCSS flashes on the LCD screen press the up  $\blacktriangle$  or down  $\blacktriangledown$  button to begin scanning the CTCSS from 1-38.
- Press the menu button  $\rightarrow$  seven times, DCS flashes on the LCD screen. Press the up  $\blacktriangle$  or down  $\blacktriangledown$  button to begin scanning DCS code 1-83.
- Press the **PTT** button to confirm your setting.

## 4.10 Call alert

Your PMR can alert you to incoming signal by emitting an audible call tone.

### 4.10.1 Call-ring tone




You can send a call-ring tone to other PMR users to give an alert that you want to communicate with them.

- Press the call button .

You will hear a ring tone for about two seconds; **TX** icon appears on the LCD screen. Any other units within the transmitting range and tuned to the same channel and sub-channel (if applicable) will hear the call-ring tone.




### 4.10.2 Selecting a call- ring tone

The unit is equipped with 15 different types of call-ring tones.

- Press the menu button  8 times, the "CA" icon will display and "01" is blinking on the LCD screen.
- Press the up  or down  button to select the desired call-ring tone.
  - > A respective call- ring tone sound will be played when changing from one tone to another.
- Press the **PTT** button to confirm your setting.


## 4.11 Setting the Roger beep

The Roger beep is a tone which is automatically transmitted whenever the **PTT** button is released. This alerts the receiving party to inform that you have intentionally ended the transmission and you are now in receive mode.

- Press the menu button  9 times, the "R0" icon will be displayed while the "ON" icon is blinking on the LCD screen.
- Press the up  or down  button to select the roger beep on/off.
- Press the **PTT** button to confirm your setting.

## 4.12 Setting the key tone on or off

This feature allows the unit to emit a confirmation tone on pressing a button.

- Press the menu button  10 times, the "T0" icon will be displayed while "ON" icon is blinking on the LCD screen.

- Press the up ▲ or down ▼ button to select the key tone on/off.
- Press the **PTT** button to confirm your setting.

### 4.13 Setting the dual watch mode



Your unit is capable of monitoring two channels, the current and another (dual watch) channel. If the unit detects a signal on either channel, it will stop and receive the signal.

- Press the menu button → 11 times, "DCM" icon will be displayed while "OF " flashes on the LCD screen.
- Press the up ▲ or down ▼ button to select the dual watch channel (1-8, except the current channel).
- Continue pressing the menu button → to change the CTCSS code.
- Press the up ▲ or down ▼ button to select the desired CTCSS code (1-38)
- Continue pressing the menu button → to change the DCS code.
- Press the **PTT** button to confirm your setting.

## 5 AUXILIARY FEATURES

### 5.1 Key lock







The key lock feature allows user to disable the up ▲ or down ▼ and menu → buttons so that the PMR settings could not be changed accidentally.

- To activate the key lock feature, press and hold the menu button → until key lock icon  appears on the LCD screen.
- To deactivate the key Lock feature, press and hold the menu button → until key lock icon  disappears on the LCD screen.


#### Note:

The **PTT**, call  and power  buttons will remain functional even if the key lock feature is activated.

## 5.2 Stop watch function

- In standby mode, press and hold the call button  for 3 seconds. The stop watch icons  will appear on the LCD screen.
- Press the up button  once to start the stop watch. to stop press again the up button .
- Press the down button  to reset the timer.
- Press and hold the call button  to exit the stop watch function and return to standby mode.

## 5.3 LCD screen back light

Every time a button is pressed (except **PTT** and call  button), the LCD screen back light will illuminate for 5 seconds.

## 5.4 Microphone/earphone/charge jack

The unit is equipped with an auxiliary microphone, earphone and charge jack located at the top side of the unit. For more information check [www.aegtelphones.eu](http://www.aegtelphones.eu)

# 6 SPECIFICATIONS

|                           |                     |
|---------------------------|---------------------|
| <b>Channels available</b> | 8 channels          |
| <b>CTCSS sub-channel</b>  | 38 for each channel |
| <b>Output power (TX)</b>  | 0,5 W (Max)         |
| <b>Range</b>              | up to 8 km          |

### Channel frequency table

| Channel | Frequency (MHz) | Channel | Frequency (MHz) |
|---------|-----------------|---------|-----------------|
| 1       | 446.00625       | 5       | 446.05625       |
| 2       | 446.01875       | 6       | 446.06875       |
| 3       | 446.03125       | 7       | 446.08125       |
| 4       | 446.03125       | 8       | 446.09375       |

## 7 Safety

|   |                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ! | <b>Damaged antenna</b><br>Do not use any PMR that has a damaged antenna. If a damaged antenna comes in contact with the skin, a minor burn may result.                                                                                                                                                                                                                                                                                 |
| ! | <b>Rechargeable batteries</b><br>All batteries can cause property damage and/or bodily injury such as burns if conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. |
| ! | <b>Warning for vehicles with an air bag</b><br>Do not place your unit in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a unit is placed in the air bag deployment area and the air bag inflates, the device may be propelled with great force and cause serious injury to the occupants of the vehicle.                                                                            |
| ! | <b>Potentially explosive atmospheres</b><br>Turn your unit off when in any area with a potentially explosive atmosphere, unless it is a type especially qualified for such use (for example, factory mutual approved). Sparks in such areas could cause an explosion or fire resulting in injury or even death.                                                                                                                        |
| ! | <b>Batteries</b><br>Do not replace or charge batteries in a potentially explosive atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion.                                                                                                                                                                                                                                                |
| ! | <b>Blasting caps and areas</b><br>To avoid possible interference with blasting operations, turn your device off near electrical blasting caps or in a "blasting area" or in areas posted: "Turn off the two way radio." Obey all signs and instructions.                                                                                                                                                                               |

**NOTE:**

Areas with potentially explosive atmospheres are often, but not always clearly marked. They include fueling areas such as below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## 8 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on:

**[www.aegtelephones.eu](http://www.aegtelephones.eu)**

## 9 DISPOSAL OF THE DEVICE

(ENVIRONMENT) 

At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipments. The symbol on the product, user guide and/or box indicate this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

**Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.**

## 10 CLEANING AND CARE

**Do not clean** any part of your unit with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the guarantee.

**When necessary, clean it with a damp cloth.**

Keep your unit away from **hot, humid conditions or strong sunlight**, and **don't let it get wet.**

## 11 GUARANTEE AND SERVICE

The unit is guaranteed for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

**Please keep your sales (till) receipt this is your proof of guarantee.**

### 11.1 While the unit is under Guarantee

- Pack up all parts of your unit, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter. (if applicable)

### 11.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via **[www.aegtelephones.eu](http://www.aegtelephones.eu)**