

# AKAI

## Walkie Talkie

APMP100



User manual

## Table of contents

<b>1.</b>	<b>Safety</b>	<b>3</b>
1.1	Intended use	3
1.2	Labels in this manual	3
1.3	General safety instructions	4
<b>2.</b>	<b>Preparations for use</b>	<b>4</b>
2.1	Unpacking	4
2.2	Package contents	5
2.3	Insert batteries	6
<b>3.</b>	<b>Functions</b>	<b>7</b>
<b>4.</b>	<b>Operation</b>	<b>8</b>
4.1	Turning the device on and off.	8
4.2	Adjusting the volume	8
4.3	Selecting a channel	9
4.4	Receiving	9
4.5	Transmitting	9
4.6	Call-Ringtone	10
4.7	Roger Beep	10
<b>5.</b>	<b>Cleaning and maintenance</b>	<b>11</b>
<b>6.</b>	<b>Technical data</b>	<b>11</b>
<b>7.</b>	<b>Disposal of used electrical and electronic equipment</b>	<b>12</b>

## Copyright notice

Design and specifications are subject to change without notice.

# 1. Safety

## 1.1 Intended use

The APMP100 is intended for sending voice messages and signals to other APMP100 users.

Read the manual carefully before the first use.

## 1.2 Labels in this manual



### CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

## 1.3

## Algemene veiligheidsvoorschriften



### CAUTION

Do not spill any liquid on the appliance.



## 2. Preparations for use

### 2.1

### Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.

 


We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

## 2.2 Package contents


The following items are included in the received package:

- 2 APMP100
- 1 Quick start guide

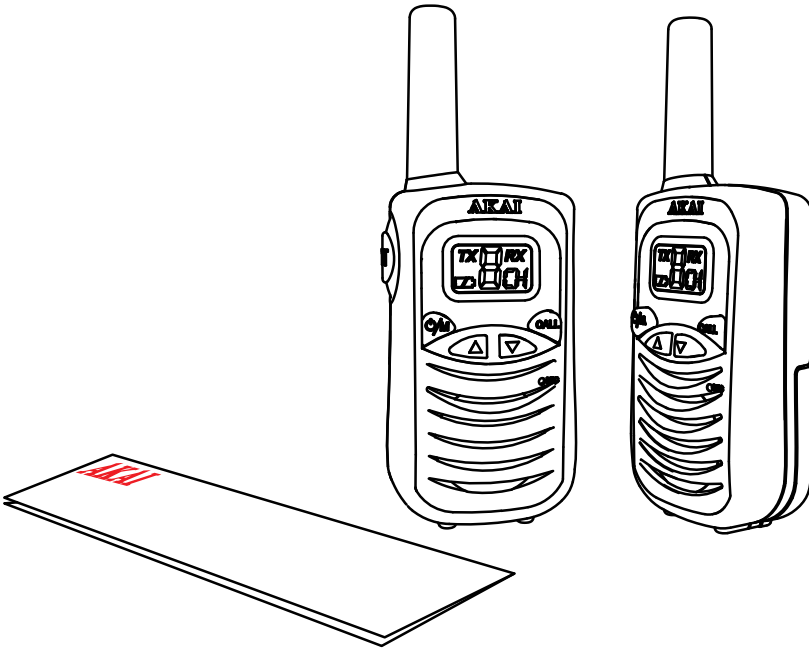

If any item is missing, please contact your reseller.

## 2.3 Insert batteries

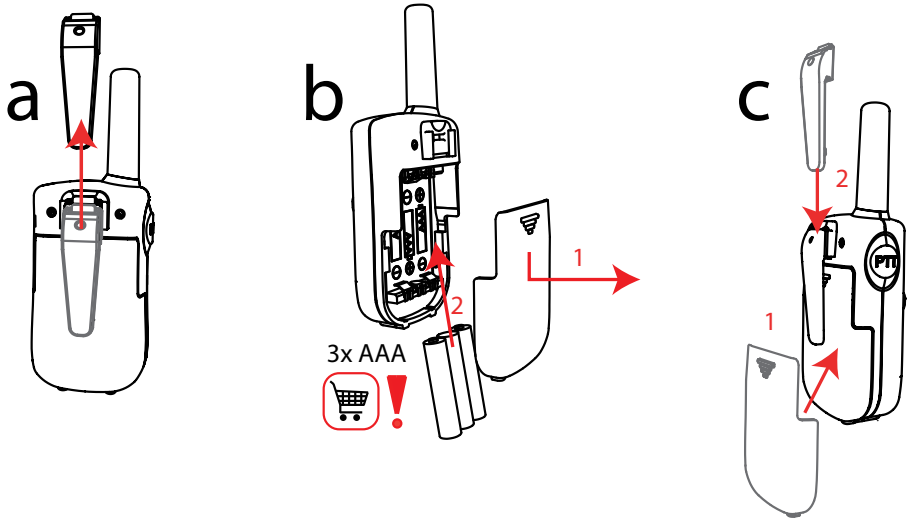 


Insert the batteries (3 x AAA) matching the (+) and (-) polarity markings.



Please note: batteries not included.

### 3. Functions

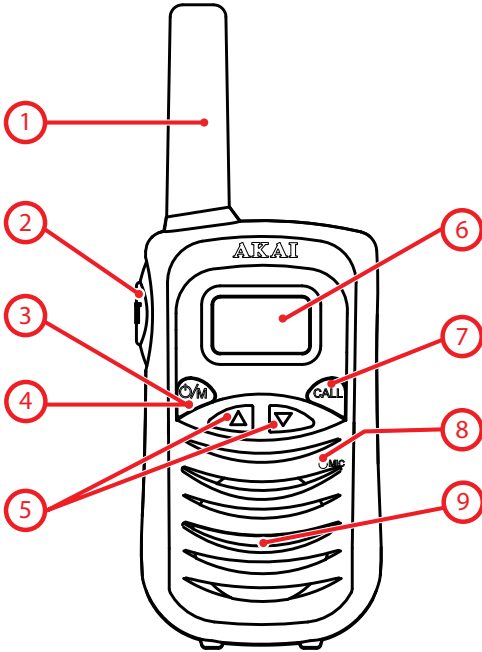 

- 1 Antenna
- 2 Push to talk (PTT)
- 3 POWER key
- 4 MENU key
- 5 UP and DOWN keys
- 6 Display
- 7 CALL key
- 8 Microphone (MIC)
- 9 Speaker

## 4. Operation

 
### 4.1 Turning the device on and off.

- Keep the POWER key (3) pressed down. You will hear a beep. The display (9) lights up. The device has now been turned on.



### 4.2 Adjusting the volume

- Press the UP and DOWN key (5) to adjust the volume.

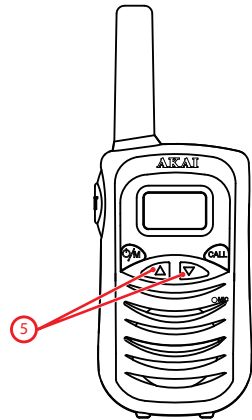




### 4.3 Selecting a channel

The APMP100 has eight channels. In order to communicate with other APMP100 users, all devices must be set to the same channel.

 - Press the MENU key once (4).
- The current channel starts flashing on the display (6).
- Use the UP and DOWN keys (11) to make your selection.
- Press the MENU key (2) to store your settings.

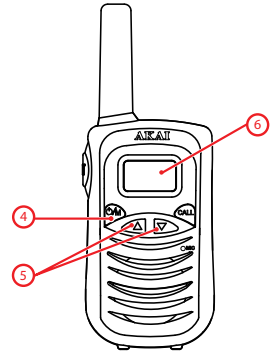


### 4.4 Receiving

Once the device has been turned on, you can start receiving.

### 4.5 Transmitting

 
- Keep the PTT key (2) pressed down in order to send a message.
- Keep the PTT key (2) pressed down in order to send a message.

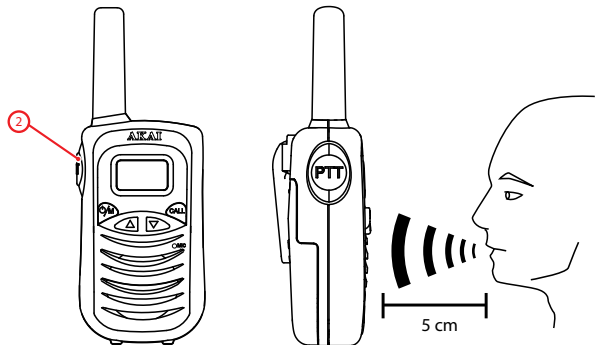

## 4.6 Call-Ringtone

You can use the Call Ringtone to notify other APMP100 users on your channel that you wish to send them a message.

 - To do this, press the CALL key (7).

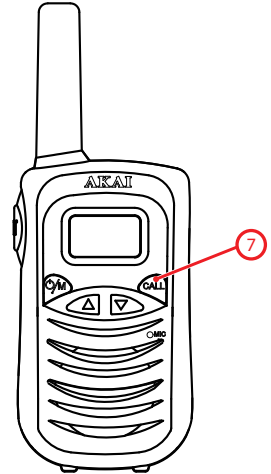

## 4.7 Roger Beep

The Roger Beep is a tone that is automatically transmitted when the PTT key (2) is released.

This way the receiver knows that the message has been completed.

## 5. Cleaning and maintenance

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

## 6. Technical data

Number of channels	8
Frequency band	446Mhz
Transmitting power	500mW
Coverage	MAX 3 km

Digital volume control

Roger Beep; conversation confirmation tone

Call signal

Can be used without a licence in, for instance, the Benelux.

This device may be used in the following countries:

Austria	✓	Finland	✓	Latvia	✓	Spain	✓
Belgium	✓	France	✓	Liechtenstein	✓	Sweden	✓
Bulgaria	✓	Germany	✓	Luxemburg	✓	Switzerland	✓
Croatia	✓	Greece	✓	The Netherlands	✓	Turkey	✓
Cyprus	✓	Hungary	✓	Norway	✓	UK	✓
Czech	✓	Iceland	✓	Poland	✓	Romania	✓
Denmark	✓	Ireland	✓	Portugal	✓		
Estonia	✓	Italy	✓	Slovenia	✓		

## 7. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit:  
**[www.akai.eu](http://www.akai.eu)**