

English: APRC51I



Index

- 1. Safety
 - 1.1. Intended use
 - 1.2. Labels in this manual
 - 1.3. General safety instructions
- 2. Preparations for use
- 3. Installation
- 4. Functions
- 5. Operation
- 6. Cleaning and maintenance
- 7. Technical data
- 8. Disposal of used electrical and electronic equipment

Safety

Intended use

The iPod Music System functions as a docking station to play music from an iPod/iPhone. The appliance also plays music from radio/CD. The clock function includes an alarm and sleep program. Read the manual carefully before the first use.

Labels in this manual



WARNING A warning means that injury or death is possible if the instructions are not obeyed.



CAUTION A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

General safety instructions



WARNING Do not put force on the appliance. The appliance can fall and can cause serious injury.



CAUTION Do not spill any liquid on the appliance.



WARNING Do not insert any objects in the ventilation holes.



CAUTION Do not block the ventilation holes.



This appliance is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate.

Preparations for use

 
Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

Package contents

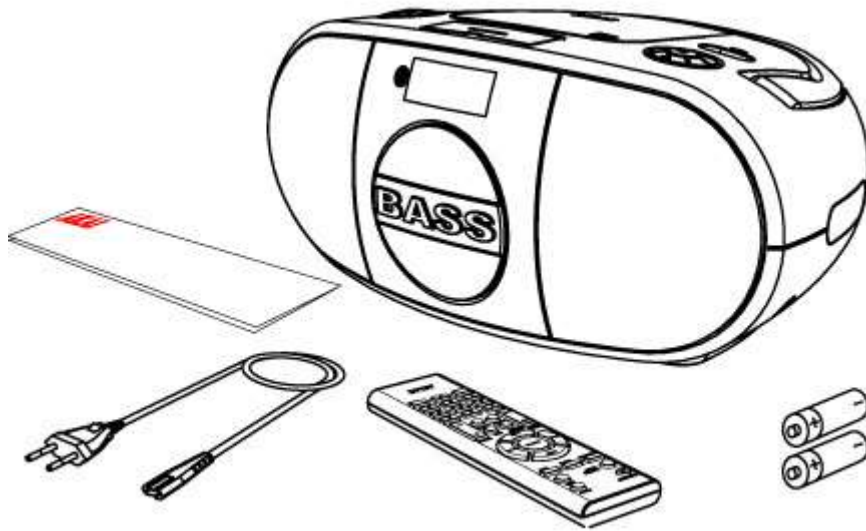

The following items are included in the received package:

- 1 iPod Music System
- 1 Remote control
- 2 Batteries (AAA)
- 1 Quick start guide
- 1 Mains cable



If any item is missing, please contact your reseller.

Installation

- Put the appliance on a horizontal flat surface.
- Connect the appliance to the mains.

 


CAUTION Do not put the appliance near a heat source.
Do not expose the appliance to direct sunlight.



This appliance is equipped with rubber feet to prevent it from moving. The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.


Connecting to the mains

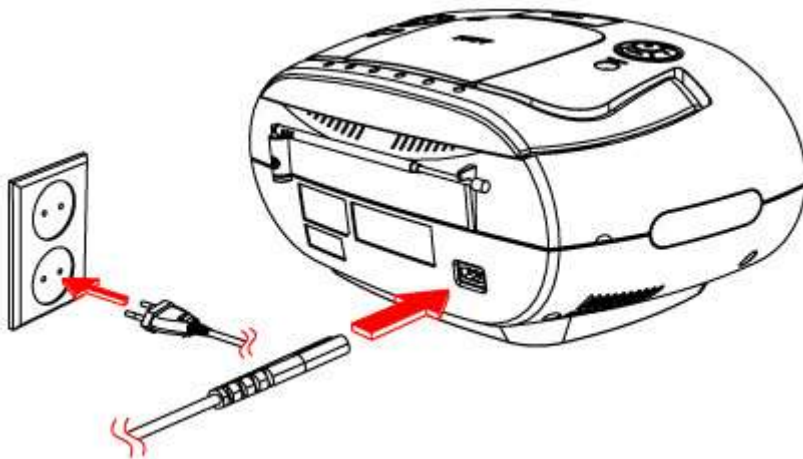

- Connect the female connector on the mains cable to the AC MAINS connection.
- Connect the mains plug to a wall socket.

Install batteries

 Remote control

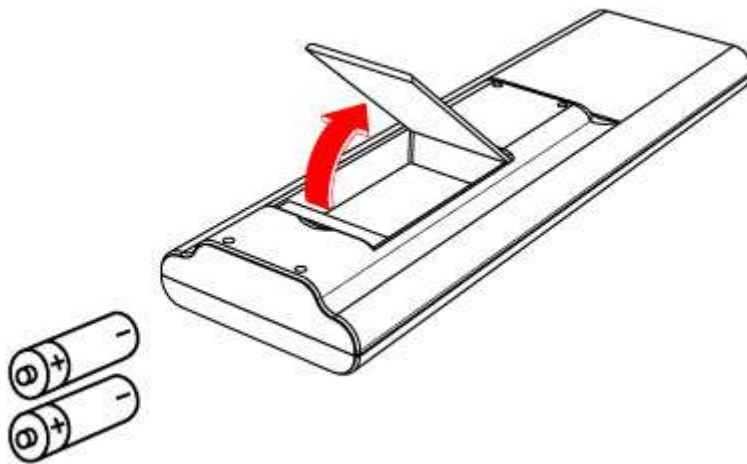


Install batteries

- Remove the battery cover.
- Insert the batteries matching the (+) and (-) polarity markings.
- Re-install the battery cover.



CAUTION Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

 APRC51I

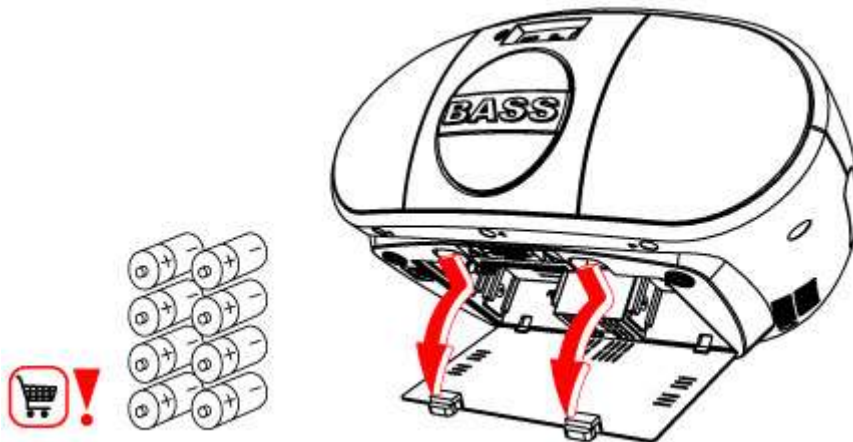

The appliance can also be operated on battery power. For this purpose, the appliance uses six batteries (C).



- Please note: these batteries are not included.
- Batteries are not necessary for normal operation.

Install batteries

- Remove the battery cover.
- Insert the batteries matching the (+) and (-) polarity markings.
- Re-install the battery cover.

 


CAUTION Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.


Functions

Remote control

1. ON/ STANBY button
2. SY./MONO/ID3/ESP DISPLAY button
3. FUNCTION button
4. SOUND button
5. PREV button
6. PLAY/PAUSE button
7. MEMORY/ CLOCK button
8. VOL FOLDER/ PRE. UP, DN- button
9. REPEAT button
10. SLEEP(+/-) button
11. AUX IN button
12. MUTE button
13. BASS button
14. MENU button
15. ENTER button
16. NEXT button
17. STOP button
18. VOLUME +/- button
19. RANDOM+ button
20. Digit buttons
21. TIMER button

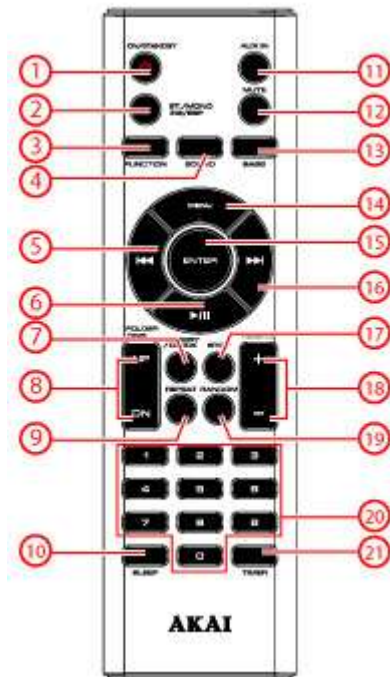

APRC511 Docking Station

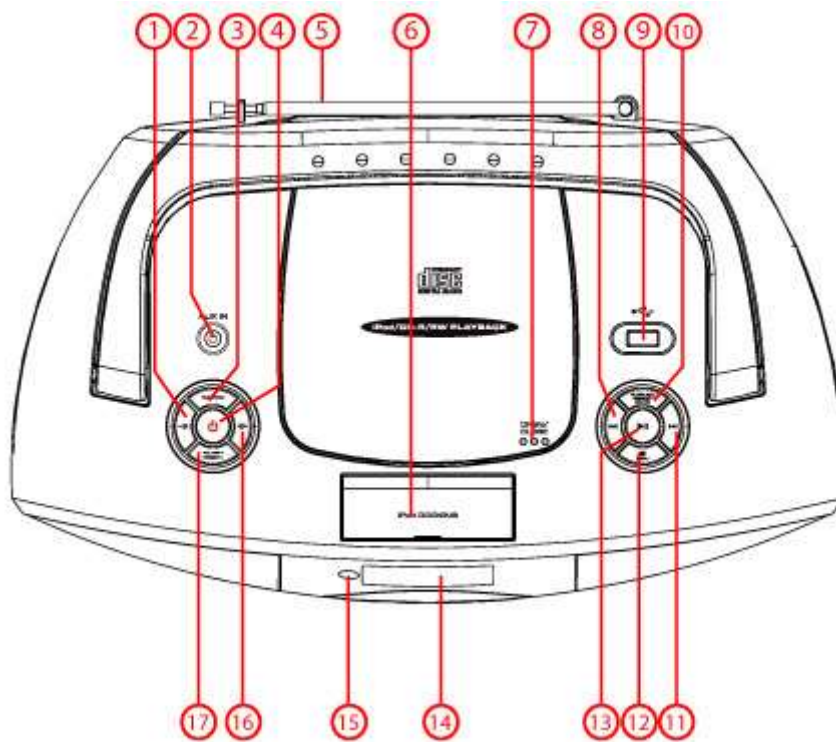 


1. VOLUME - button
2. AUX IN
3. FUNCTION button
4. POWER button
5. FM antenna
6. iPod dock
7. CD compartment
8. PREV button
9. USB port
10. CLOCK ADJ./ MEMORY/ ENTER button
11. NEXT button
12. STOP/ MENU button
13. PLAY/ PAUSE button
14. Display
15. Remote sensor
16. VOLUME + button
17. FOLDER +/ PRESET + button

Operation

All functions of the appliance are accessible using the remote control. All instructions refer to operation with the remote control, unless indicated otherwise.

 Quick start

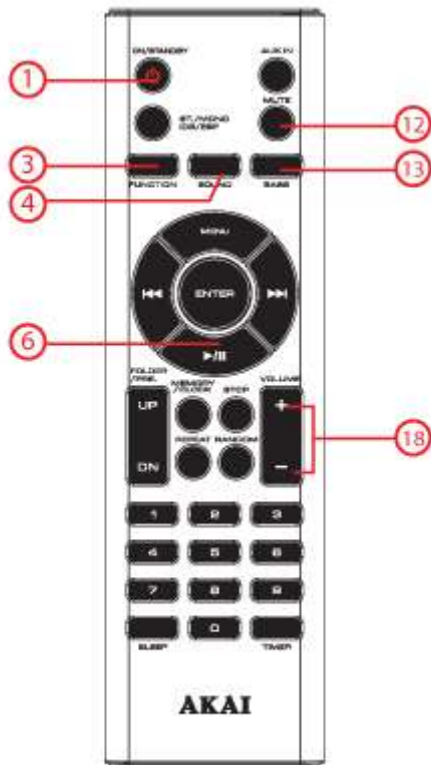

General functions

- To switch on the appliance, press the STANDBY button (1). To switch back to the standby mode, press the STANDBY button (1) again.

To select the source mode (iPod-AUX-TUNER-CD-USB...), press the FUNCTION button (3).

- To adjust the volume, press the VOLUME - button or the VOLUME + button (18). To enable the enhanced bass, press the BASS button (13). Press the button again to disable the enhanced bass.

- To mute or restore sound, press the MUTE button (12).

Use the SOUND (4) button to select the type of music.

You can choose from: FLAT, CLASSIC, ROCK, POP, JAZZ,

iPod/iPhone functions

- Place your iPad/ iPhone in the docking station.

To select the source mode iPod, press the FUNCTION button (3).

- To start playback, press the PLAY/PAUSE button (6) once.
- For extended instructions, read the paragraph "iPod functions" further on in this manual.

Radio functions

- Switch on the appliance. Select the tuner mode.
Use the FUNCTION (3) key for this.
- For extended instructions, read the paragraph "Radio functions" further on in this manual.

CD functions

- To select the source mode CD, press the FUNCTION button (3).

To insert a CD:

- Press the CD compartment to open the appliance
- Insert the CD with the label upwards
- Close the CD compartment

To start playback, press the PLAY/PAUSE button (6) once.

For extended instructions, read the paragraph "CD functions" further on in this manual.

USB functions

To select the source mode USB, press the FUNCTION button (3).

 
Insert the USB device in the slot . The device can only be connected one way.

The USB input is located at the top of the appliance.

To start playback, press the PLAY/PAUSE button (6) once.

For extended instructions, read the paragraph "USB functions" further on in this manual.

iPod functions

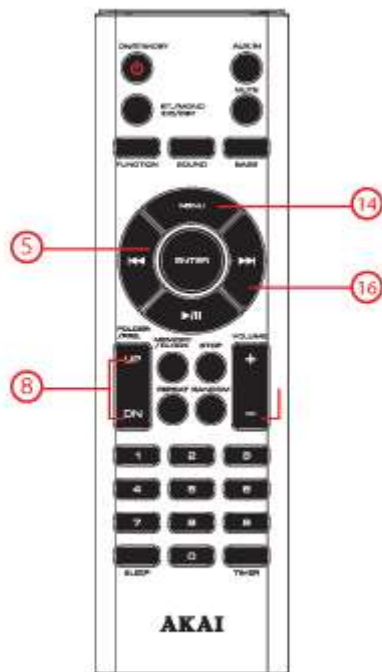


Place your iPod/iPhone in the docking station.

Audio playback

- Press the MENU (14) key to open the menu.
- Press the FOLDER + button or the FOLDER - button (8) to select a folder or a file.
- To select a track, press the PREV button (5) or the NEXT button (16) until the desired track is set.
- To forward or rewind the track, press and hold the PREV button (5) or the NEXT button (16).
- To pause playback, press the PLAY/PAUSE button (6) once; to resume playback, press the button again.

 Radio functions

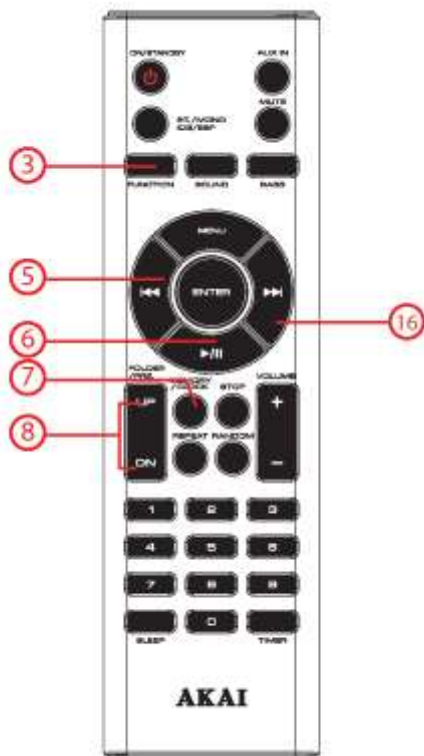


• Switch on the appliance. Select the tuner mode.
Use the FUNCTION (3) key for this.

- Keep the key PREV (5) or the key NEXT (16) 2 pressed for seconds to search automatically. The appliance will search for the next available station.
- To search for a specific frequency, press the PREV button (5) or the NEXT button (16) repeatedly until the desired frequency is set.
- To skip to the next preset station, press the FOLDER UP button or the FOLDER DOWN button (8).

Set pre-set stations

- Search for the desired frequency with the PREV button (5) or the NEXT button (16) .
 - Press the MEMORY button (7).
 - Use the FOLDER UP/DOWN (8) buttons to select your preferred channel.
 - Press the MEMORY button (7) when the desired frequency is found.
 - Repeat the above steps to add more pre-set stations.
-
- To skip to the next preset station, press the FOLDER UP/DOWN buttons (8). You can also use the number keys on your remote control for this.

 CD functions

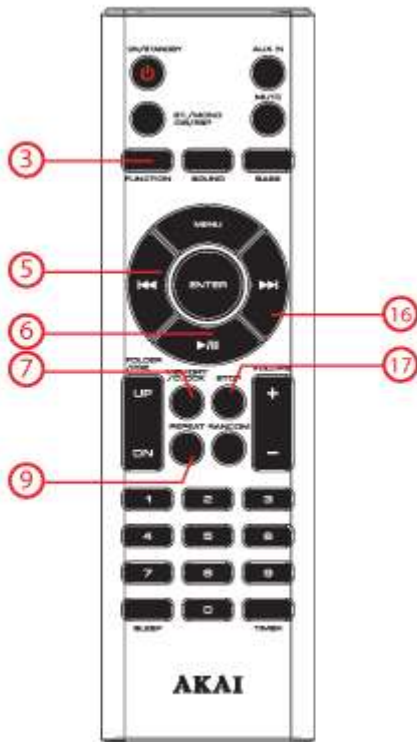

- To select the source mode CD, press the FUNCTION button (3). The display shows the total number of tracks on the CD. To start playback, press the PLAY/ PAUSE button (6) once.

During playback, the following functions are available:

- To select a track, press the PREV button (5) or the NEXT button (16) until the desired track is set.
- To search for a specific point on the disc, hold the PREV button (5) or the NEXT button (16) until the point is reached and release the button.
- To pause playback, press the PLAY/PAUSE button (6) once; to resume playback, press the button again.
- To stop playback, press the STOP button (17).

Using the REPEAT function

This function is available in PLAY and STOP mode.

- Press the REPEAT button (9) once to repeat the current track. The REPEAT indicator is ON.
- Press the button twice to repeat all tracks on the CD. The REPEAT ALL indicator is ON.
- - Press the button once again to exit the REPEAT function.

Using the PROGRAM function

 
To use the PROGRAM function for CD, the playback must be in STOP mode.

To program a CD:

- To play a list of tracks (max. 64) in a program, press the MEMORY button (7).
- Press the PREV button (5) or the NEXT button (16) to select a desired track.
- Press the MEMORY button (7) to confirm the selection. Repeat the previous step to select more tracks and confirm every selection with the MEMORY button (7).

- Press the PLAY/PAUSE button (6) to start the program.
- To play the program again, press the MEMORY button (7) after the program has finished. Press the PLAY/PAUSE button (6) to start the program again.
- To view the program in stop mode, press the MEMORY button (7).
- To stop the program during playback, press the STOP button (17).
- To delete the program during the playback, press the STOP button (17) twice.

USB functions

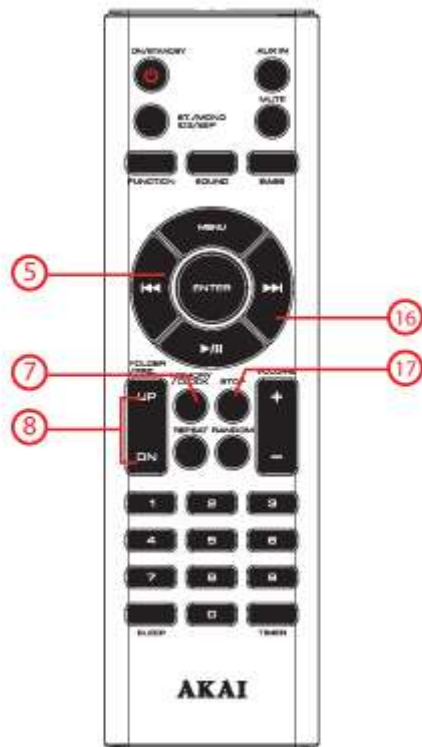

Insert the USB device in the slot . The device can only be connected one way.
The USB input is located at the top of the appliance.

After connecting the appliance, the contents are loaded.
READING appears on the display.
Next, the total number of tracks appears on the display.

- Press the FOLDER UP button or the FOLDER DOWN button (8) to select a folder or a file.
 - Select the desired file using the PREV (5) button or the NEXT (16) button.
- To start playback, press the PLAY/PAUSE button (6) once.

- To stop playback, press the STOP button (17).
- To remove the device, gently pull it out of the slot.



- Due to the great variety of products with USB ports and their sometimes quite manufacturer-specific functions we can neither guarantee that all devices will be recognised, nor that all operating options that are possible in theory will actually work.

Insert the USB device in the slot . The device can only be connected one way.

Using the PROGRAM function

 
To use the PROGRAM USB/MP3 function for USB, the playback must be in STOP mode.

- To play a list of tracks (max. 64) in a program, press the MEMORY button (7).
- Press the PREV (5) button or the NEXT (16) button to select the desired folder.
- Press MEMORY (7) to confirm.
- Press the PREV (5) button or the NEXT (16) button to select the desired file.
- Press MEMORY (7) to confirm.

Repeat the last 4 steps to add to the programme list.

- To start playback, press the PLAY/PAUSE button (6) once.
- To stop playback, press the STOP button (17).

Clock functions

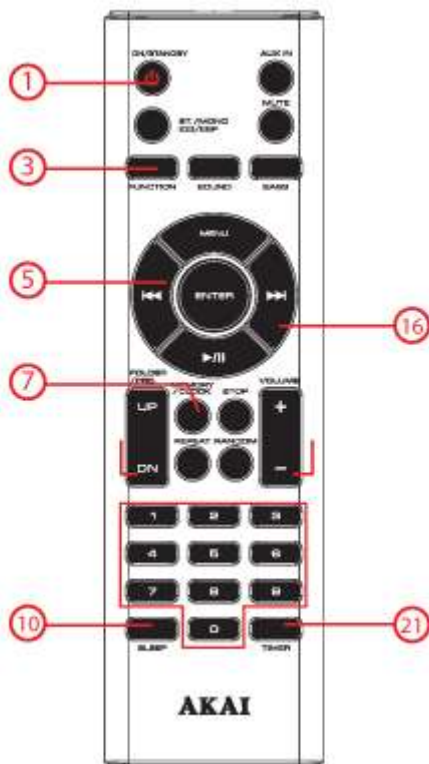

Setting the current time

- Turn the appliance off.
Use the STANDBY (1) key for this.
- Keep key CLOCK (7) pressed for 3 seconds
The time is shown on the display.
- Choose AM/PM
Use the keys PREV (5) en NEXT (16) for this.
- Confirm AM/PM
Use the CLOCK (7) key for this.
The hours are flashing on the display.

- Set the hour

Use the keys PREV (5) en NEXT (16) for this.

- Confirm hour
- To do this, press the CLOCK key (7).

The minutes are flashing on the display.

- Set the minutes

Use the keys PREV (5) en NEXT (16) for this.

- Confirm minutes
- To do this, press the CLOCK key (7).

Setting the alarm time

You can use the alarm to set the time you wish to be woken up and by which source (TUNER, iPod etc.).

You can also set the duration of the alarm.

Keep key TIMER (21) pressed for 2 seconds

The alarm icon appears on the display.

The hours are flashing on the display.

ON appears on the display.

- Set the hour

Use the keys PREV (5) en NEXT (16) for this.

Confirm hour

Use the TIMER (21) key for this.

The minutes are flashing on the display.

- Set the minutes
- Use the keys PREV (5) en NEXT (16) for this.
- Confirm minutes

Use the TIMER (21) key for this.

The ALARM ON time has been set.

OFF appears on the display.

You can now set the ALARM OFF time.

- To do this, repeat the last 4 steps.

CD appears on the display.

- Select the desired source (TUNER, iPod...).

Use the keys PREV (5) en NEXT (16) for this.

Press TIMER (21) to confirm.

- Set the alarm volume.

Use the keys PREV (5) en NEXT (16) for this.

- Press TIMER (21) to confirm.
- Turn the appliance off.

Use the STANDBY (1) key for this.



During a power failure, or when unplugging the appliance, the time settings are lost.

Snooze alarm

The default snooze time is: 9 minutes.

- To snooze the alarm, press any button except the POWER/STANDBY button (1). The alarm sounds again after the snooze time has elapsed.
- To stop the alarm, press the POWER/STANDBY button (1). The alarm is automatically set for the next day.

Using the SLEEP function

- Press the SLEEP button (10).

This key is located on your remote control.

- Press the button repeatedly until the desired setting is found (00, 05, 10... 25, 20, 30, 40 ... 90,, OFF). The SLEEP indicator is ON.
- Press ENTER (15) to confirm.

The appliance stops playing after the chosen time has elapsed.

- Press the SLEEP button repeatedly to turn off the SLEEP function. SLEEP disappears from the display.

Cleaning and maintenance



WARNING Before performing any cleaning or maintenance, switch off and unplug the appliance. Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

Handle and care of a disc

- Hold the disc with fingers. Hold the disc outer edge and/or the centre spindle hole. Do not touch the disc surface.
- Do not bend or press the disc. Do not expose the disc to direct sunlight or heating sources.
- Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently, radially, from centre towards the outer edge.
- Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

Technical data

Voltage: 220VAC / 50 Hz

Power consumption: 80W

Standby power consumption: < 1W

Max power: 2 x 12W

Frequency response: L/R CH (60Hz-20KHz at +1 / -2dB)

Dimensions: 37 x 16,5 x 25,5 cm

Weight: 3,8 KG

Frequency range

FM radio: 87,5 - 108 Mhz

Frequency range: 20 Hz ~ 20 kHz

Signal/noise ratio: > 80 dB (1kHz)

Dynamic range: > 70 dB (1 kHz)

Distortion: < -60 dB (1kHz)

Remote control

Power consumption: 2 x 1,5V

Battery size: Cr2025

Working environment

Operating temperature: - 10 ~ +40 C(elsius)

Relative humidity: 5% ~90%

Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: www.akai.eu



Do not dispose of batteries as household waste but take them to a battery recycling facility.