

AKAI

LED-TV / DVD Combi
with DVB-T tuner

ALED2604T



User manual

Gebruiksaanwijzing

Manuel de l'utilisateur

Manual de instrucciones

Gebrauchsanleitung

Οδηγίες χρήσεως

Brugsanvisning

GB 2

NL 26

FR 52

ES 78

DE 103

EL 129

DA155

AKAI

LED-TV / DVD Combi
with DVB-T tuner

ALED2604T



User manual

Gebruiksaanwijzing

Manuel de l'utilisateur

Manual de instrucciones

Gebrauchsanleitung

Οδηγίες χρήσεως

Brugsanvisning

GB 2

NL 26

FR 52

ES 78

DE 103

EL 129

DA155

Table of contents

1.	Safety	3
1.1	Intended use	3
1.2	Labels in this manual	3
1.3	General safety instructions	3
2.	Preparations for use	4
2.1	Unpacking	4
2.2	Package contents	5
3.	Installation	5
3.1	Mounting the foot	6
3.2	Wall mounting	6
3.3	Connecting random equipment	7
3.4	Connecting to the mains	8
3.5	Remote control	9
4.	Functions	10
4.1	LED TV/DVD Combi	10
4.2	Remote control	11
5.	Operation	13
5.1	Quick start	13
5.2	TV setup menu operation	14
5.3	TV functions	16
5.4	DVD/CD functions	18
5.5	USB functions	21
6.	Cleaning and maintenance	21
6.1	Handle and care of a disc	22
7.	Troubleshooting	22
8.	Technical data	24
9.	Disposal of used electrical and electronic equipment	25

Copyright notice

Design and specifications are subject to change without notice.

1. Safety

1.1 Intended use

The LED TV/DVD Combi plays film and photos from DVD. The appliance also plays music from CD. The appliance can also be used as a TV and as a monitor for a personal computer. Read the manual carefully before the first use.



DVDs and DVD appliances are manufactured under the worldwide agreed DVD regional code system that the appliance will operate only with corresponding disc of the same regional code. If the code number on the label of a DVD does not match that on the label alongside, the DVD will not play on this appliance.



The appliance has built-in copyright protection technology that prevents copying from a disc to any media. If a video recorder is connected to the appliance, the video output image will be distorted during recording.

1.2 Labels in this manual



WARNING

A warning means that injury or death is possible if the instructions are not obeyed.



CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

1.3 General safety instructions



WARNING

Do not put force on the appliance. The appliance can fall and can cause serious injury.

**CAUTION**

Do not spill any liquid on the appliance.

**WARNING**

Do not insert any objects in the ventilation holes.

**CAUTION**

Do not block the ventilation holes.

**WARNING**

This appliance must be earthed. Always check that the mains voltage corresponds to the voltage on the rating plate.



This appliance employs a laser system. To prevent direct exposure to the laser beam, do not open the appliance. Visible laser radiation when open and interlock defeated.

2. Preparations for use

2.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

2.2 Package contents

The following items are included in the received package:

- 1 LED TV/DVD Combi
- 1 Foot
- 1 Mains cable
- 1 Remote control
- 2 Batteries (AAA)
- 1 Operator manual

3. Installation

- Place the appliance on the stand.
Read the paragraph "Mounting the stand".
- Connect the random equipment to the appliance.
Read the paragraph "Connecting random equipment".
- Connect the appliance to the mains.
Read the paragraph "Connecting to the mains".
- Install the batteries in the remote control.
Read the paragraph "Remote control".



CAUTION

- Do not put the appliance near a heat source.
- Do not expose the appliance to direct sunlight.



This appliance is equipped with rubber feet to prevent it from moving. The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.

3.1 Mounting the foot


- Put the appliance on a horizontal flat surface, with the screen flat upside down.
- Hold the foot in front of the socket. Align the screw hole with the hole in the socket.
- Insert the screw into the hole. Tighten the screw securely.
- Put the appliance straight up. Put the appliance on a horizontal flat surface.

3.2 Wall mounting

The appliance can be attached to wall brackets complying with VESA standard. For this purpose, screw holes have been provided in the back.

- Mount the wall bracket to a wall. Refer to the mounting instructions supplied with the wall bracket.
- Remove the socket from the appliance.
- Hold the appliance in front of the wall bracket. Align the screw holes with the holes in the socket.
- Insert the screws into the holes. Tighten the screws securely.

3.3 Connecting random equipment

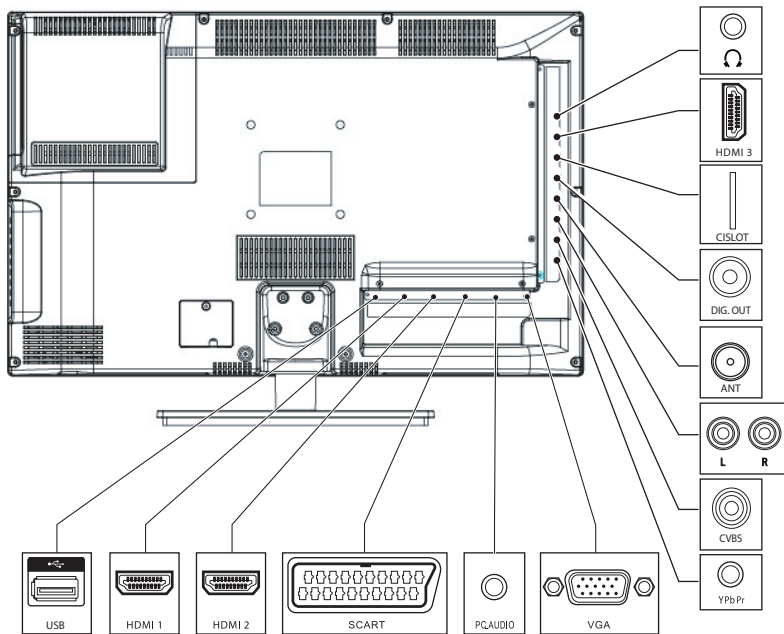

The appliance includes various options for permanent connection of random equipment. Suitable cables can be purchased at your reseller.

Audio connections (input)

- L/R: Connect a suitable cable to the L/R channels of the AUDIO connection.

Video connections

The appliance has the following video outputs (in order of preference):

- HDMI: Connect a suitable cable into the HDMI connection.
- COMPONENT: Connect a suitable cable to the Y/Pb/Pr channels of the COMPONENT connection.
- SCART: Insert a suitable cable into the SCART connection.
- COMPOSITE: Insert a suitable cable into the CVBS connection.

PC connections

The appliance has the following inputs to connect to your personal computer.

- Audio connection: Connect a suitable cable into the PC AUDIO connection.
- Video connection: Connect a suitable cable into the VGA connection.

Cable connection

- Insert a suitable cable into the Dig.out connection.
- Insert a suitable cable into the ANT connection.

CI card connection for DVB-T

With a CI card installed, the appliance can be used for reception of scrambled services, for example pay channels. For further information, consult your provider.

- Insert the CI card into the slot.

Headphone jack

- To connect a headphone, insert the cable plug in the headphone jack.
To prevent hearing damage, remember to adjust the volume to a comfortable level.

3.4 Connecting to the mains

- Connect the female connector on the mains cable to the AC IN connection.
- Connect the mains plug to a wall socket.

3.5 Remote control



Install batteries

- Remove the battery cover.
- Insert the batteries matching the (+) and (-) polarity markings.
- Re-install the battery cover.




CAUTION

Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

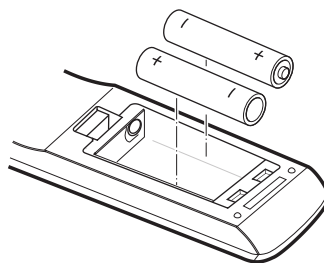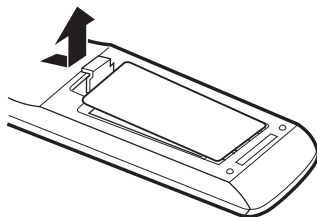

4. Functions

4.1 LED TV/DVD Combi

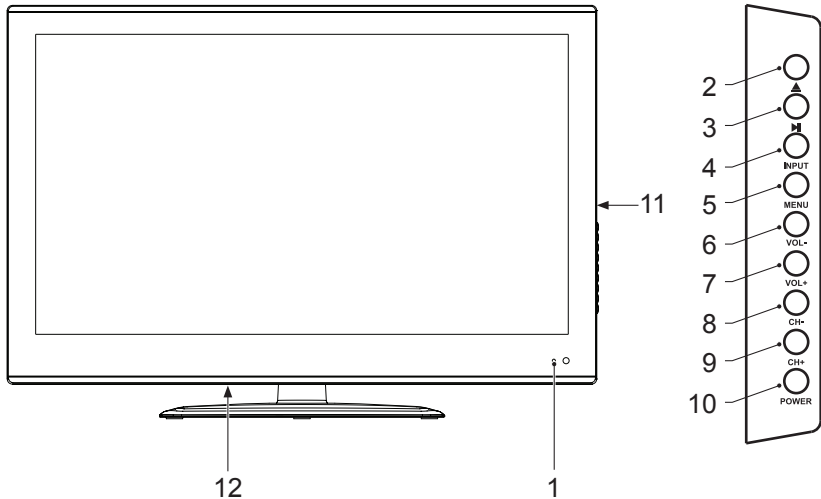


- 1 Remote control sensor / Standby indicator
- 2 EJECT button
- 3 PLAY/PAUSE button
- 4 INPUT button
- 5 MENU button
- 6 VOL - button
- 7 VOL + button
- 8 CH - button
- 9 CH + button
- 10 POWER button
- 11 DVD slot
- 12 USB slot

4.2 Remote control

General functions

- 13 POWER button
- 14 Digit buttons (0-10+)
- 15 VOL + button
- 16 ASPECT button
- 17 VOL - button
- 18 DISP button
- 19 MENU button
- 20 INPUT button
- 21 PMODE button
- 22 FAV button
- 23 FAV- button
- 24 REC button
- 25 TV/RADIO button
- 26 SUBTITLE button
- 27 FAV+ button
- 28 EPG button
- 29 SMODE button
- 30 SLEEP button
- 31 ENTER button
- 32 Arrow buttons
- 33 CH - button
- 34 CH + button
- 35 AUDIO button
- 36 PREVIOUS button
- 37 AUTO button (VGA mode only)
- 38 MUTE button


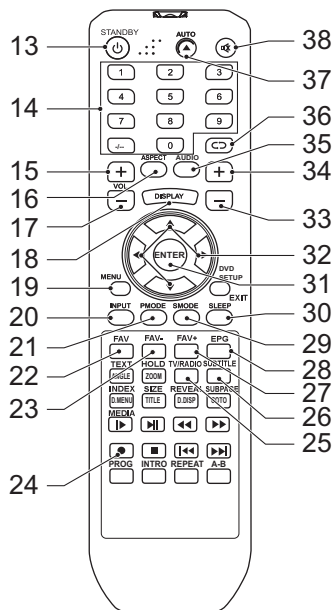


Teletext functions

- 39 TEXT button
- 40 HOLD button
- 41 INDEX button
- 42 SIZE button
- 43 Coloured buttons
- 44 REVEAL button
- 45 SUBPAGE button

DVD functions

- 46 ANGLE button
- 47 ZOOM button
- 48 D.MENU button
- 49 TITLE button
- 50 STEP button
- 51 PLAY/PAUSE button
- 52 STOP button
- 53 PROGRAM button
- 54 INTRO button
- 55 REPEAT button
- 56 A-B button
- 57 PREV button
- 58 NEXT button
- 59 REW button
- 60 FWD button
- 61 DISP button
- 62 GOTO button
- 63 DVD SETUP button
- 64 OPEN button

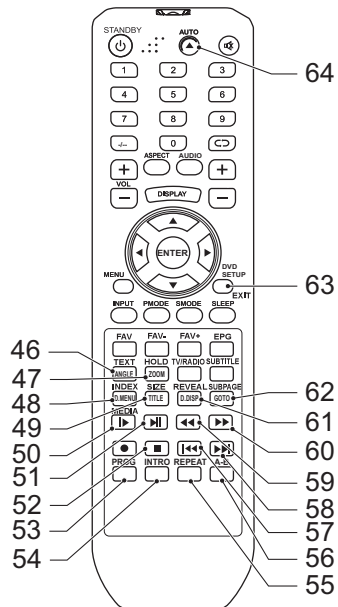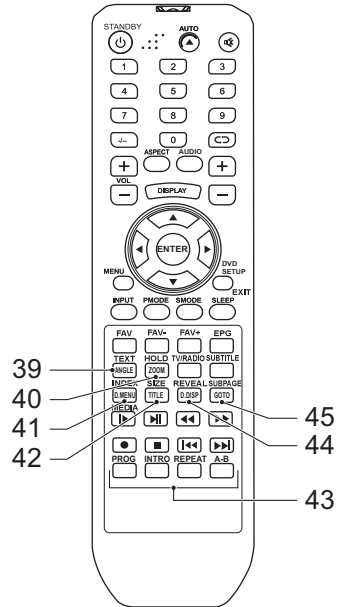

5. Operation

All functions of the appliance are accessible using the remote control. All instructions refer to operation with the remote control, unless indicated otherwise.

5.1 Quick start

General functions

- To switch on the appliance, press the POWER button (13). To switch back to the standby mode, press the POWER button (13) again.
- To select the source mode (ATV/DTV/MEDIA/AV/PC/DVD/COMPONENT/SCART/HDMI1/HDMI2/HDMI3), press the INPUT button (20).
- To adjust the volume, press the VOL + button (15) or the VOL - button (17).
- To mute or restore sound, press the MUTE button (38).
- To set the sleep timer (OFF, 10, 20, 30, 60, 120, 180, 240 min), press the SLEEP button (30).
- To select the screen size (16:9, 4:3, ZOOM1, ZOOM2, AUTO), press the ASPECT button (16).
- To select the desired picture mode (DYNAMIC/STANDARD/MILD/PERSONAL), press the PMODE button (21).
- To select the sound mode (STANDARD/MUSIC/MOVIE/SPORT/PERSONAL), press the SMODE button (29).

TV functions

- Switch on the appliance. If you switch on the appliance for the first time, the automatic scan mode will open automatically.
- To quickly install the channel list:
 - Press the arrow buttons (left and right) (32) to select the OSD language.
 - Press the arrow button down (32) to select the country from which the program is received. The TV system will automatically scan and store all available channels.
- To select a channel, enter the number with the digit buttons (14). Alternatively, use the CH +/- buttons (34/33) to zap through the channel list.
- To recall to the last viewed program, press the PREVIOUS button (36).
- Press the FAV button (22) to add the channel to the favourites list. Press the FAV button (22) again to remove the channel from the favourites list.
- For extended instructions, read the paragraph "TV functions" further on in this manual.

DVD/CD functions

- Switch on the appliance.
- Select the DVD mode.
- Insert a disc in the slot (11) with the label backwards.
- To start playback, press the PLAY/PAUSE button (51) once.
- For extended instructions, read the paragraph "DVD/CD functions" further on in this manual.

USB functions

- Switch on the appliance.
- Insert the USB device in the slot. The device can only be connected one way.
- Select the MEDIA mode, then select the FOTO/MUSIC/FILM TEXT option.
- To start playback, press the PLAY/PAUSE button (51) once.
- For extended instructions, read the paragraph "USB functions" further on in this manual.

5.2 TV setup menu operation

To change the initial settings

The following actions must be carried out with the remote control:

- Press the MENU button (19).
- Press the arrow buttons (up and down) (32) to select a menu.
- Press the arrow buttons (right) (32) to enter the selected menu.
- Press the arrow buttons (up and down) (32) to adjust the setting.
- Press the MENU button (19) to store the setting and exit.

Channel menu (TV mode only)

- AUTO TUNING: to tune for channels automatically.
- ATV MANUAL TUNING/DTV MANUAL TUNING: to tune for channels manually.
- PROGRAMME EDIT: to edit the program.
- SIGNAL INFORMATION: to display the signal details. This function is available in digital TV mode only.
- CI INFORMATION: to display the CI details. This function is available in digital TV mode only.

Picture menu

- PICTURE MODE: to set the picture mode (DYNAMIC/STANDARD/MILD/PERSONAL).
- CONTRAST: to adjust the screen contrast.
- BRIGHTNESS: to adjust the screen brightness.
- COLOUR: to adjust the screen colour.
- TINT: to adjust the screen tint.
- SHARPNESS: to adjust the screen sharpness.
- COLOR TEMP: to set the screen colour temperature (COOL/WARM/NORMAL).
- NOISE REDUCTION: to set the noise reduction (OFF/LOW/MIDDLE/HIGH/DEFAULT).



The picture menu can also be entered by pressing the PMODE button (21).

Sound menu

- SOUND MODE: to set the picture mode (STANDARD/MUSIC/MOVIE/SPORT/PERSONAL).
- TREBLE: to adjust the treble.
- BASS: to adjust the bass.
- BALANCE: to adjust the balance.
- AUTO VOLUME: to set the auto volume.
- SPDIF MODE: to set the SPDIF mode (PCM/AUTO/OFF).
- AD SWITCH: to set the AD switch (ON/OFF).



The sound menu can also be entered by pressing the SMODE button (29).

Time menu

- SLEEP TIMER: to set the sleep timer (OFF, 10, 20, 30, 60, 120, 180, 240 min).
- AUTO STANDBY: to set auto standby (OFF, 3, 4, 5 hr).
- OSD TIMER: to set the OSD timer (OFF, 5, 10, 15, 20, 25, 30 s).

Lock menu

- LOCK SYSTEM: Switch this function ON or OFF. The default password is 0000.
- SET PASSWORD: to set the password

- BLOCK PROGRAM: to lock or unlock programs.
- PARENTAL GUIDANCE: to set parental guidance.
- KEY LOCK: to lock or unlock the TV buttons.

Setup menu

- OSD LANGUAGE: to select the language for the On Screen Display (OSD).
- TTX LANGUAGE: to select the area of the teletext language ((WEST/EAST/RUSSIAN/ARABIC/FARSI)).
- HEARING IMPAIRED: Switch this function ON or OFF.
- PVR FILE SYSTEM: to set the file system of the disk.
- ASPECT RATIO: to set the aspect ratio (16:9, 4:3, ZOOM1, ZOOM2, AUTO).
- BLUE SCREEN: Switch this function ON or OFF.
- FIRST TIME INSTALLATION: to start the first time installation procedure.
- RESET: to restore the default settings.
- SOFTWARE UPDATE: to update the software with USB flash drive.

5.3 TV functions

Teletext functions

- Press the TEXT button (39) to open the Teletext mode.
- To select a page, press in the number using the digit buttons.
- To select the next or previous page, press the CH + button (34) or the CH - button (33).
- To select the index page, press the INDEX button (41).
- To show hidden information, press the REVEAL button (44) (optional for some Teletext pages).
- To select the size of Teletext page:
 - Press the SIZE button (42) once to enlarge the upper half of the page.
 - Press the button once again to enlarge the lower half of the page.
 - Press the button once again to cancel the function.
- To hold a Teletext page, press the HOLD button (40).
- Press a coloured button (43) to select a quick link to a teletext page.

Digital TV functions

- To display the electronic program guide, press the EPG button (28).
- To switch on the subtitles, press the SUBTITLE button (26).
Press the button again to switch off the subtitles.
- To switch to radio broadcast, press the TV/RADIO button (25).
To switch back to television broadcast, press the button again.

Recording functions



This function is available in digital TV mode only.

A USB flash drive can be used to store the recorded program. The maximum file size is 3,9 GB. When the storage space is insufficient, a warning message is displayed and the recording is stopped.

- Press the REC button (24) to record the program.
- Press the STOP button (52) to stop recording.
- To record a program using the electronic program guide, press the EPG button (28):
 - Press the arrow buttons (32) to select a program.
 - Press the red button to record a program.
 - Press the green button to display a program.
 - Press the yellow button to schedule a program.
 - Press the blue button to display a reminder of a program.
- To select the location of the recorded program on the USB flash drive:
 - Press the MENU button (19).
 - Press the arrow buttons (32) to select OPTION.
 - Press the arrow buttons (32) to select PVR FILE SYSTEM.
 - Press the arrow buttons (32) to select SELECT DISK.
 - Select the partition on the USB flash drive.
- To display the recording list, press the INDEX button (41):
 - Press the arrow buttons (32) to navigate.
 - Press the red button to delete a program.
 - Press the green button to display the program details.
 - Press the ENTER button (31) to show the program.



All input possibilities are blocked using PVR RECORD. The TV cannot be switched off during direct recording. The TV can be switched off in standby mode when recording using the EPG.

5.4 DVD/CD functions

After the disc has been loaded, a content menu will display on the TV screen. The disc must be placed with the label backwards.

- Press the arrow buttons (32) to select a menu item.
- Press the ENTER button (31) to enter the selected menu item.

During playback, the following functions are available:

- To select a chapter (DVD) or track (CD), press the digit buttons (14).
- To select the next or previous chapter (DVD) or track (CD), press the NEXT button (58) or the PREV button (57).
- To forward or rewind the DVD, press the FWD button (60) or the REW button (59). The available speeds are: 2x, 4x, 8x, 16x, 32x.
- To pause playback, press the PLAY/PAUSE button (51) once. To resume playback, press the PLAY/PAUSE button (51) again.
- To stop playback temporarily, press the STOP button (52) . To stop playback permanently, press the PLAY/PAUSE button (51).
- To repeat a chapter (DVD) or one or all tracks (CD):
 - Press the REPEAT button (55) once to repeat the current chapter or track.
 - Press the button once again to repeat the current title.
 - Press the button once again to repeat all chapters or tracks.
 - Press the button once again to cancel the function.
- To view a specific title of a DVD, press the TITLE button (49). Use the arrow buttons to select the title.
- To select the audio language of a DVD, press the AUDIO button (35) repeatedly until the desired language is set.
- To select extra information of a DVD or CD (remaining time/passed playtime/track number/chapter number), press the DISP button (61).
- To view an introduction, press the INTRO button (54).
- To return to the main menu, press the D.MENU button (48).



- A DVD that does not match the region code cannot be read by this appliance.

Using the PROGRAM function

- Press the PROGRAM button (53) to enter the PROGRAM function.
- To play tracks from a CD:
 - Press the arrow buttons to highlight and select the titles.
 - Press the numeric buttons to insert the tracks you want to play.
 - Then press the arrows buttons to highlight " START", and press ENTER to play the tracks.
- To play chapters from a DVD:
 - Press the arrow buttons to highlight and select the titles.
 - Press the numeric buttons to insert the titles/chapters you want to play.
 - Repeat the last step to add additional titles/chapters.
 - Then press the arrows buttons to highlight " START", and press ENTER to play the programs.

Using the A-B function

The A-B function can be used to repeat a specific section of a DVD.

- Press the A-B button (56) once to select the starting point (A).
- Press the A-B button again to select the ending point (B). The appliance plays the section repeatedly.
- Press the button once again to cancel the function. The appliance will resume the normal playback.

Using the GOTO function

The GOTO function can be used to select a specific starting point on a DVD or CD.

- Press the GOTO button (62).
- Press the arrow buttons (32) to select an entry.

The possible entries for DVD are:

- Title and Chapter
- Title and Title time
- Chapter and Chapter time

The possible entries for CD are:

- Track time
- Specific track
- Press the digit buttons to set a selection.

Using the MP3/MPEG4 playback function

- Insert an MP3/MPEG4 disc. A content menu will display on the TV screen.
- Press the up/down arrow buttons (32) to select a folder or a file.
- Press the ENTER button (31) to enter the selected folder or file.

Using the JPEG playback function

- Insert a JPEG disc. A content menu will display on the TV screen.
- Press the up/down arrow buttons (32) to select a folder or a file.
Press the ENTER button (31) to start the slide show.
- Press the PLAY/PAUSE button (51) to hold the slide show at the current picture.
- Press the PLAY/PAUSE button (51) to resume the slide show.
- Press the PREV button (57) or the NEXT button (58) to select the previous or next picture.
- To magnify the picture, press the ZOOM button (47). To zoom in or out on the picture, press the FastForward button (60) or FastRewind button (59).
To rotate the picture, press the arrow(32)buttons.



The slide show is paused in the zoom mode. The image rotation and wipe effect functions are not available in the zoom mode.

Using the Video CD playback function

- Insert a Video CD.
- To start playback, press the PLAY/PAUSE button (51) once.
- To select the audio channel during Video CD playback, press the AUDIO button (35).

5.5 USB functions

- Press the arrow buttons (32) to switch between media.
- Press the up/down arrow buttons (32) to select a folder or a file.
- Press the ENTER button (31) to enter the selected folder or file. You can also use the digit buttons (30) to select a folder or to play the file.
- Press the arrow buttons (32) to switch between folders and files. Press ENTER (31) to confirm.
- Press the MENU button (19) to return to the content menu during playback.

During playback, the following functions are available:

- To select a track, press the PREV button (57) or the NEXT button (58) until the desired track is set.
- To pause playback, press the PLAY/PAUSE button (51) once; to resume playback, press the PLAY/PAUSE button (51).
- To stop playback, press the STOP button (52).
- To remove the device, gently pull it out of the slot.



Due to the great variety of products with USB ports and their sometimes quite manufacturer-specific functions we can neither guarantee that all devices will be recognised, nor that all operating options that are possible in theory will actually work.

6. Cleaning and maintenance



WARNING

Before performing any cleaning or maintenance, switch off and unplug the appliance.

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

6.1 Handle and care of a disc

- Hold the disc with fingers. Hold the disc outer edge and/or the centre spindle hole. Do not touch the disc surface.
- Do not bend or press the disc. Do not expose the disc to direct sunlight or heating sources.
- Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently, radially, from centre towards the outer edge.
- Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

7. Troubleshooting

Trouble	Action
No sound or incomplete audio	Check if the random equipment are switched on and set correctly. Check cables for connection problems. Check if the correct source is selected. Check volume or mute setting.
No picture	Check if the TV is switched on and set to the correct A/V input. Check cables for connection problems.
No power	Check if the power cord has been properly connected to the power outlet.
Malfunction	Should the appliance develop a serious malfunction, unplug the appliance for 30 minutes. After this, power on the appliance and restore to factory default.

DVD/CD

Trouble	Action
No playback	There is no disc inserted. Load a disc in the appliance. Disc is loaded label facing forward. Place the disc with the label facing backward. Rating level of the disc is higher than the rating level setting of the appliance.

	<p>Invalid region code.</p> <p>Incorrect type of disc.</p> <p>Disc may be damaged or dirty, clean the disc or try another disc.</p> <p>Moisture may have condensed inside the appliance. Remove the disc and leave the appliance powered on for one or two hours.</p>
No sound or incomplete audio	<p>Select another audio track.</p> <p>During SCAN, SLOW MOTION or SINGLE STEP the sound is muted.</p> <p>Check if the disc is in fast forward or fast rewind mode. Press the PLAY/PAUSE button (51).</p>
No scan or skip possible	<p>Some discs are programmed to refuse user action at certain sections. This is no malfunction. Single chapter or track discs do not allow skip function.</p>
Picture distorted or noisy	<p>Disc may be damaged or dirty, clean the disc or try another disc.</p> <p>Check TV system setting (PAL/NTSC).</p> <p>A VCR is connected between the appliance and the random equipment. Connect the appliance to a A/V directly.</p> <p>Clean the disc.</p>
Picture not full screen	<p>Select the screen format from the appliances setup menu.</p> <p>Select screen format in disc start menu.</p>

USB playback

Trouble	Action
No playback	<p>USB device is not installed or installed incorrectly. Insert USB device into slot.</p> <p>Incompatible USB device used. Playback using any USB device cannot be guaranteed. Please try another USB device.</p>

Remote control (RC)

Trouble	Action
RC does not function	<p>Check the battery installation.</p> <p>Point the RC at the remote control sensor.</p> <p>Stay within 8 metres of the appliance.</p>

8. Technical data

Parameter	Value
Voltage	100 ~ 240 V _{AC} / 50 ~ 60 Hz
Power consumption	70 W
Standby power consumption	<1 W
Max power output	2 x 9 W
Headphones output impedance	32 Ω
Dimensions (W x H x D)	
without foot	644 x 414 x 45 mm
with foot	644 x 460 x 165 mm
Weight	5.8 kg

LED screen

Parameter	Value
Diagonal size	66 cm (26")
Ratio	16:9
Resolution	1366 x 768 pixels
Brightness	400 cd/m ²
Contrast ratio	3000:1
Response time	6.5 ms
Viewing angle horizontally / vertically	178°/178°
Television system	PAL/SECAM

Set-up

Parameter	Value
Wall mountable	VESA standard (100 x 100 mm)

Remote control

Parameter	Value
Power consumption	2 x 1.5 V
Battery size	AAA

9. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: www.akai.eu