

AKAI

Walkie Talkie

APMP300



User manual

Table of contents

1.	Safety	1
1.1	Intended use	3
1.2	Labels in this manual	3
2.	Preparations for use	2
2.1	Unpacking	4
2.2	Package contents	5
2.3	Charge the battery	6
2.4	Insert batteries	6
3.	Functions	7
4.	Operation	8
4.1	Turning the device on and off	8
4.2	Adjusting the volume	8
4.3	Selecting a channel	9
4.6	Receiving	9
4.7	Transmitting	9
4.8	Monitor	10
4.10	Auto Channel Scan	10
4.11	Call-Ringtone	11
4.12	Roger Beep	11
4.15	Key lock	11
5.	Cleaning and maintenance	12
6.	Technical data	12
7.	Disposal of used electrical and electronic equipment	13

Copyright notice

Design and specifications are subject to change without notice.

1. Safety

1.1 Intended use

The APMP300 is intended for sending voice messages and signals to other APMP users.

Read the manual carefully before the first use.

1.2 Labels in this manual



CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

2. Preparations for use

2.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.

 


We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

2.2 Package contents



The following items are included in the received package:

- 2 APMP300
- 6 Rechargeable batteries
- 1 Lader
- 1 Adapter
- 1 Quick start guide

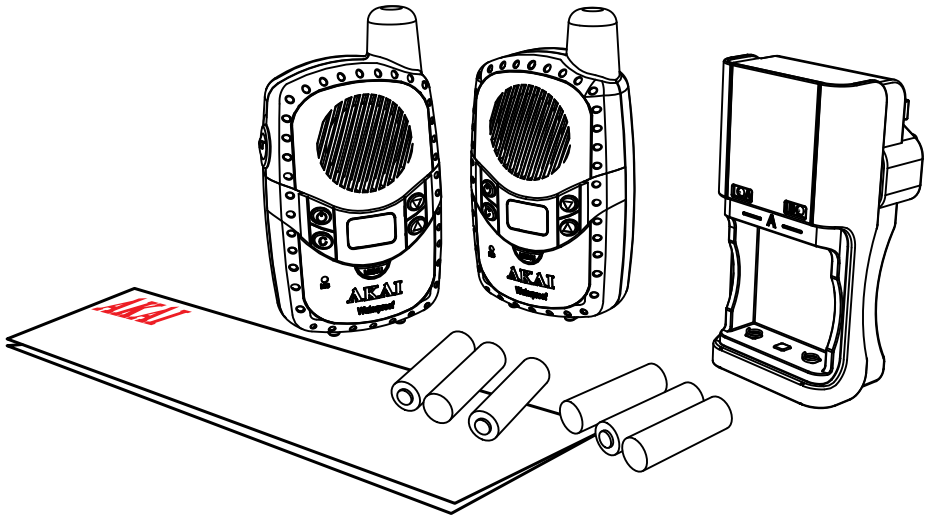

If any item is missing, please contact your reseller.

  2.3 Charge the batteries



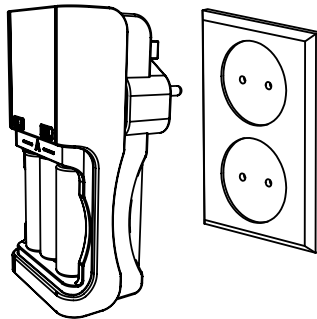
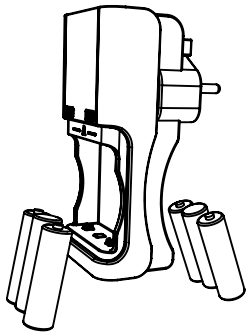


min. 10h




Insert the batteries matching the (+) and (-) polarity markings.

    2.4 Insert batteries

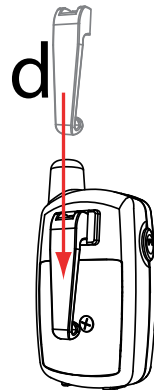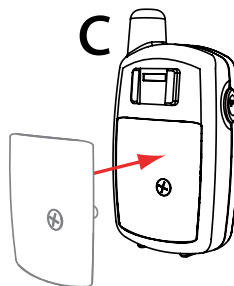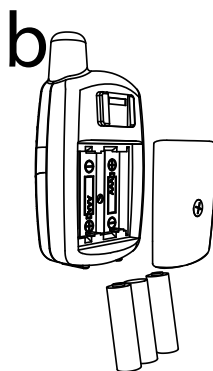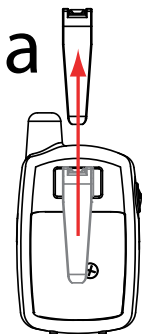

Insert the batteries matching the (+) and (-) polarity markings.

 3. Functions

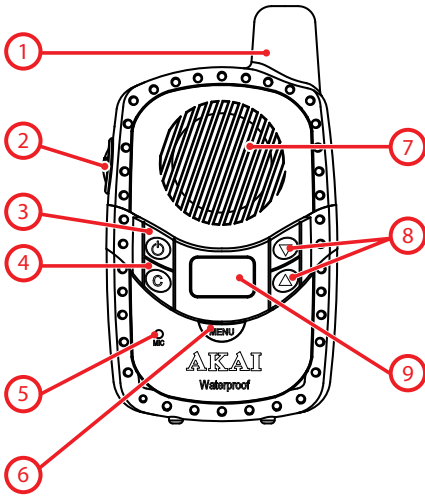


- 1 Antenna
- 2 Push to talk (PTT)
- 3 POWER key
- 4 CALL key
- 5 Microphone (MIC)
- 6 MENU key
- 7 Loudspeaker
- 8 UP and DOWN keys
- 9 Display

4. Operation


4.1 Turning the device on and off

 - Keep the POWER key (3) pressed down. You will hear a beep. The display (9) lights up. The device has now been turned on.

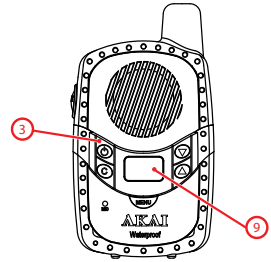

4.2 Adjusting the volume

 
- Press the UP or DOWN key (8) to adjust the volume.

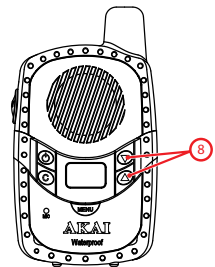

4.3 Selecting a channel

The APMP300 has eight channels. In order to communicate with other APMP300 users, all devices must be set to the same channel.

 - Press the MENU key once (6).
- The current channel starts flashing on the display (9).
- Use the UP and DOWN keys (8) to make your selection.
- Press the MENU key (6) to store your settings.

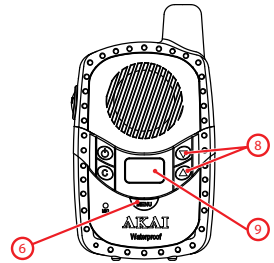


4.4 Receiving

Once the device has been turned on, you can start receiving signals.

4.5 Transmitting

 
- Keep the PTT key (2) pressed down in order to send a message.
- Release the PTT key when you have finished talking.

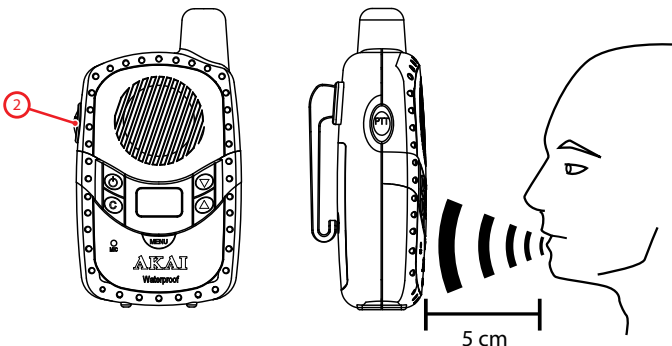

4.6 Monitor

You can use the Monitor function to search for weak signals on the channel you have selected.

 - Keep the MENU and the UP key (6 + 10) pressed down at the same time.
- Press the MENU key (6) to stop the Monitor function.

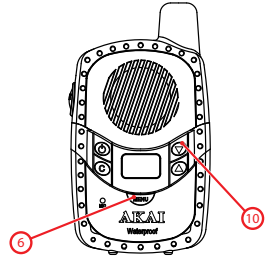

4.7 Auto Channel Scan

Channel Scan searches for signals on all 8 channels.

 
Scan Channel

- Keep the UP and the DOWN key (10 + 11) pressed down at the same time.

On the display (9) you will see the channel number change quickly.

When the APMP300 detects a signal it will automatically pause.


- Press the PTT key (2) to store your settings.
- Press the “Up” and “Down” keys (10 + 11) to start the scan.
- Press the MENU key (6) to stop the scan function.

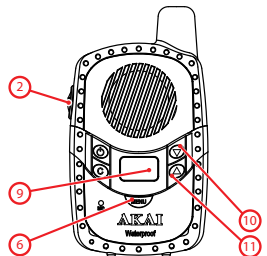

4.8 Call-Ringtone

You can use the Call Ringtone to notify other APMP300 users on your channel that you wish to send them a message.

 - To do this, press the CALL key (4).

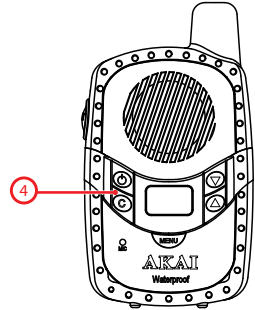

4.9 Roger Beep

The Roger Beep is a tone that is automatically transmitted when the PTT key (2) is released. This way the receiver knows that the message has been completed.

 
4.10 Key lock

The key lock function locks the following keys UP, DOWN, MENU.

- Keep the MENU key (6) pressed down until the key symbol appears on the display (9).

The key lock function has now been enabled.

- Keep the MENU key (6) pressed down once more in order to disable the key lock.

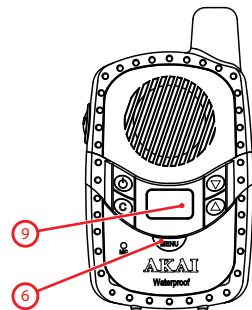

5. Cleaning and maintenance

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

6. Technical data

Number of channels 8
Frequency band 446Mhz
Transmitting power 500mW
Coverage max 3 km

Digital volume control

Roger Beep; conversation confirmation tone

Channel scan function

Call signal

Water resistant up to 1 meter

Accessories

Rechargeable batteries with charger station

Can be used without a licence in, for instance, the Benelux.
This device may be used in the following countries:

Austria	✓	Finland	✓	Latvia	✓	Spain	✓
Belgium	✓	France	✓	Liechtenstein	✓	Sweden	✓
Bulgaria	✓	Germany	✓	Luxemburg	✓	Switzerland	✓
Croatia	✓	Greece	✓	The Netherlands	✓	Turkey	✓
Cyprus	✓	Hungary	✓	Norway	✓	UK	✓
Czech	✓	Iceland	✓	Poland	✓	Romania	✓
Denmark	✓	Ireland	✓	Portugal	✓		
Estonia	✓	Italy	✓	Slovenia	✓		

7. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit:
www.akai.eu