

# AKAI

## Pocket radio

APR25



User manual

Gebruiksaanwijzing

Manuel de l'utilisateur

Manual de instrucciones

Gebrauchsanleitung

Οδηγίες χρήσεως

Brugsanvisning

GB 2

NL 9

FR 16

ES 23

DE 30

EL 37

DA 44

## Table of contents

<b>1.</b>	<b>Safety</b> .....	<b>3</b>
	1.1 Intended use .....	3
	1.2 Labels in this manual .....	3
	1.3 General safety instructions .....	3
<b>2.</b>	<b>Installation</b> .....	<b>4</b>
	2.1 Pocket radio .....	4
<b>3.</b>	<b>Components</b> .....	<b>5</b>
<b>4.</b>	<b>Operation</b> .....	<b>5</b>
	4.1 General functions .....	5
<b>5.</b>	<b>Cleaning and maintenance</b> .....	<b>6</b>
<b>6.</b>	<b>Troubleshooting</b> .....	<b>7</b>
<b>7.</b>	<b>Technical data</b> .....	<b>7</b>
<b>8.</b>	<b>Disposal of used electrical and electronic equipment</b> .....	<b>8</b>

## Copyright notice

Design and specifications are subject to change without notice.

# 1. Safety

## 1.1 Intended use

The operator manual shows the use of the pocket radio. Read the manual carefully before first use.

## 1.2 Labels in this manual



### WARNING

A warning means that injury or death is possible if the instructions are not obeyed.



### CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

## 1.3 General safety instructions



### WARNING

Do not put force on the appliance. The appliance can fall and can cause serious injury.



### CAUTION

Do not spill any liquid on the appliance.



### WARNING

Do not insert any objects in the ventilation holes.



### CAUTION

Do not block the ventilation holes.

## 2. Installation

### 2.1 Pocket radio

- Unpack the appliance carefully.
- Put the packaging in a storage place.
- Remove the labels from the front panel carefully.



#### CAUTION

Do not put the appliance near a heat source. This can cause damage to the equipment.



- Batteries are not included with this appliance.

#### Installing the batteries

- Remove the battery cover.
- Insert the batteries matching the (+) and (-) polarity markings.
- Install the battery cover.



#### CAUTION


Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

## 3. Components

- 1 POWER button
- 2 AM frequency button
- 3 FM frequency button
- 4 AL SET button
- 5 ALARM ON/OFF button
- 6 Speaker
- 7 TIME button
- 8 HOUR button
- 9 MINUTE button
- 10 Display
- 11 TUNING dial
- 12 Antenna
- 13 Headphone jack (output channel)
- 14 VOLUME dial
- 15 Battery cover

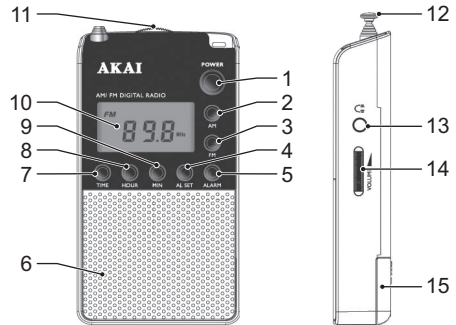

## 4. Operation

### 4.1 General functions

- To switch on the appliance, press the POWER button (1). To switch to stand-by mode, press the POWER button (1) again.
- To select the AM frequency, press the AM frequency button (2).
- To select the FM frequency, press the FM frequency button (3).
- To select a specific frequency or radio station, turn the TUNING dial (11) until the desired frequency is set. The display (10) shows the selected frequency.
- To adjust the volume level, turn the VOLUME dial (14) until the desired level is set.
- To connect a headphone (not included), insert the headphone plug in the headphone jack (13).
- To set the time, read "Set the time".
- To switch on the alarm, read "Alarm function".



- When switching on, the appliance receives the FM frequency automatically.
- To improve the reception of the FM frequency, extend the aerial antenna (12). To improve the reception of the AM frequency, turn the appliance.
- It is not necessary to extend the aerial antenna if a headphone is used.

### **Set the time**

- Switch off the appliance.
- Press and hold the TIME button (7).
- Press and hold the HOUR button (8) and press the TIME button (7) repeatedly until the desired hour is set.
- Press and hold the MINUTE button (9) and press the TIME button (7) repeatedly until the desired minutes are set.

### **Alarm function**

- Switch off the appliance.
- Press the ALARM ON/OFF button (5) to switch on the alarm.
- Press and hold the AL SET button (4) to set the alarm.
- Press and hold the HOUR button (8) and press the AL SET button (4) repeatedly until the desired hour is set.
- Press and hold the MINUTE button (9) and press the AL SET button (4) repeatedly until the desired minutes are set.



- After the alarm has been set, the ALARM indicator on the display lights up.
- The appliance switches off automatically one hour after the preset time.

## **5. Cleaning and maintenance**

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

## 6. Troubleshooting

Trouble	Action
No display	Switch on the appliance. Choose the correct frequency with the AM or FM frequency buttons (2 & 3).
No sound	Check the battery. Adjust the volume. Adjust tuning control.

## 7. Technical data

Parameter	Value
Voltage	2 x 1.5 V <sub>DC</sub>
Power consumption	12 W
Noise sensitivity	Limited
Single signal selection	> 20 dB(A)
Radio bands	AM/FM
Frequency range	
AM radio	540 kHz - 1,610 kHz
FM radio	88 MHz - 108 MHz
Dimensions (W x H x D)	54 x 96 x 19 mm
Weight (excl. batteries)	83 g

## 8. Disposal of used electrical and electronic equipment




The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: [www.akai.eu](http://www.akai.eu)





**For more information, please visit  
[www.akai.eu](http://www.akai.eu)**