 


# AKAI

## Portable Radio/CD-player

### APRC8

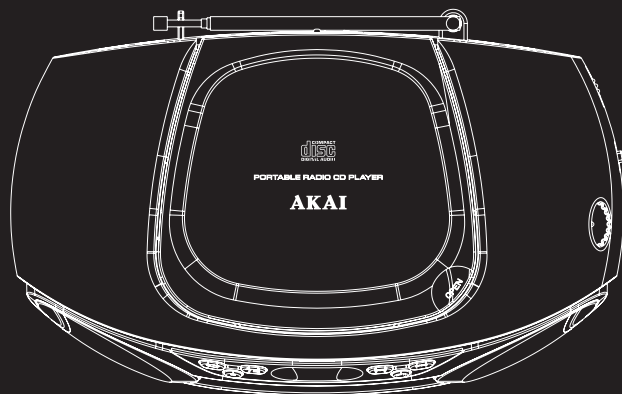

User manual

Gebruiksaanwijzing

Manuel de l'utilisateur

Brugsanvisning

GB 2

NL 13

FR 24

DA 35

## Table of contents

<b>1.</b>	<b>Safety</b> .....	<b>3</b>
	1.1 Intended use .....	3
	1.2 Labels in this manual .....	3
	1.3 General safety instructions .....	3
<b>2.</b>	<b>Preparations for use</b> .....	<b>4</b>
	2.1 Unpacking .....	4
	2.2 Package contents .....	4
<b>3.</b>	<b>Installation</b> .....	<b>5</b>
	3.1 Connecting to the mains .....	5
	3.2 Battery power .....	6
<b>4.</b>	<b>Functions</b> .....	<b>7</b>
<b>5.</b>	<b>Operation</b> .....	<b>8</b>
	5.1 Master power switch .....	8
	5.2 General functions .....	8
	5.3 Radio functions .....	8
	5.4 CD functions .....	9
<b>6.</b>	<b>Cleaning and maintenance</b> .....	<b>10</b>
	6.1 Handle and care of a disc .....	10
<b>7.</b>	<b>Troubleshooting</b> .....	<b>10</b>
<b>8.</b>	<b>Technical data</b> .....	<b>11</b>
<b>9.</b>	<b>Disposal of used electrical and electronic equipment</b> .....	<b>12</b>

## Copyright notice

Design and specifications are subject to change without notice.

# 1. Safety

## 1.1 Intended use

The radio/CD player plays music from CD and radio. Read the manual carefully before the first use.

## 1.2 Labels in this manual



### WARNING

A warning means that injury or death is possible if the instructions are not obeyed.



### CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

## 1.3 General safety instructions



### WARNING

Do not put force on the appliance. The appliance can fall and can cause serious injury.



### CAUTION

Do not spill any liquid on the appliance.



### WARNING

Do not insert any objects in the ventilation holes.



### CAUTION

Do not block the ventilation holes.



This appliance is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate.



This appliance employs a laser system. To prevent direct exposure to the laser beam, do not open the appliance. Visible laser radiation when open and interlock defeated.

## 2. Preparations for use

### 2.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

### 2.2 Package contents

The following items are included in the received package:

- 1 Radio/CD player
- 1 Mains cable
- 1 Operator manual



If any item is missing, please contact your reseller.

## 3. Installation

- Put the appliance on a horizontal flat surface.
- Connect the appliance to the mains.  
Read the paragraph "Connecting to the mains".



### CAUTION

 
- Do not put the appliance near a heat source.
- Do not expose the appliance to direct sunlight.



This appliance is equipped with rubber feet to prevent it from moving. The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.

### 3.1 Connecting to the mains

- Connect the female connector on the mains cable to the AC MAINS connection.
- Connect the mains plug to a wall socket.

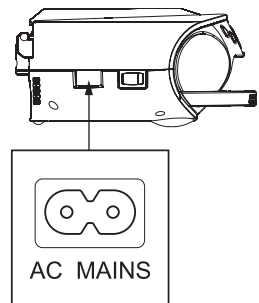

## 3.2 Battery power

The appliance can also be operated on battery power. For this purpose, the appliance uses six batteries (C).



 
 
- Batteries are not included with this appliance.
- Batteries are not necessary for normal operation.

### Install batteries


- Remove the battery cover.
- Insert the batteries matching the (+) and (-) polarity markings.
- Re-install the battery cover.



**CAUTION**  
Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

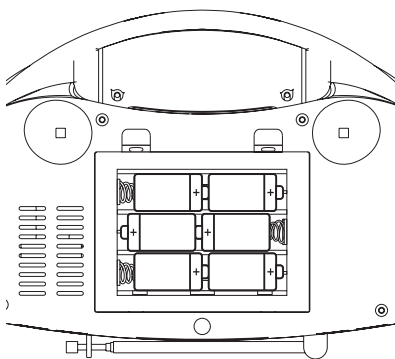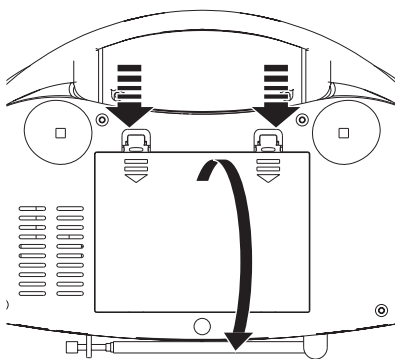

## 4. Functions

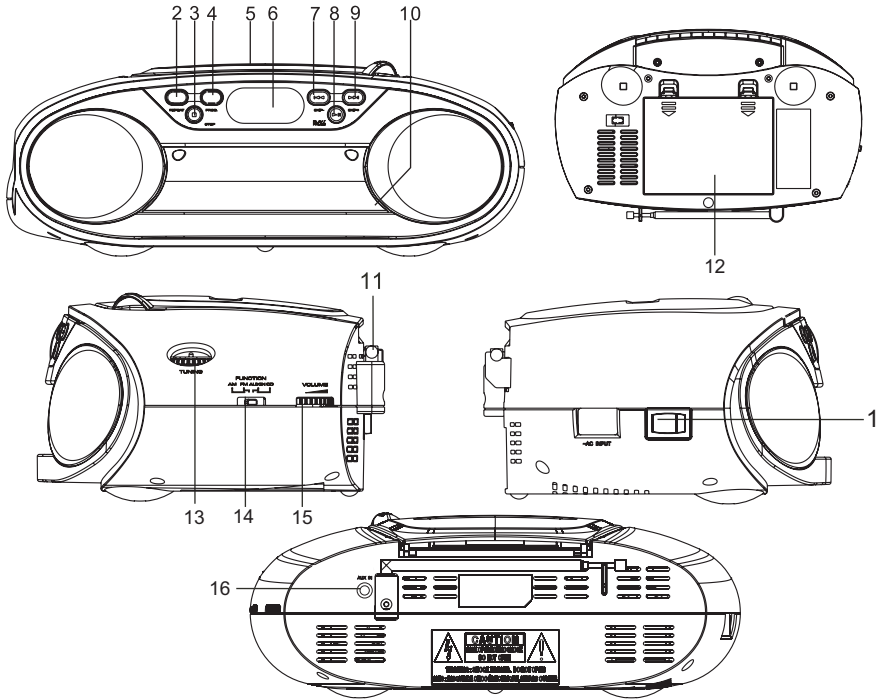 

- |   |  |
|---|--|
| <p>① ON/OFF SWITCH<br/>- to switch ON or OFF the unit.</p> <p>② REPEAT<br/>- repeats a track/CD/program.</p> <p>③ STOP<br/>- stops CD playback; erases a CD program.</p> <p>④ PROGRAM<br/>CD: -programs and reviews programmde track numbers.</p> <p>⑤ CD DOOR<br/>- open or close the CD play.</p> <p>⑥ DISPLAY<br/>- shows the CD functions.</p> <p>⑦ SKIP ◀◀<br/>CD: - skips track backwards.</p> <p>⑧ PRESS TO PLAY/PAUSE<br/>- starts or pauses CD play.</p> | <p>⑨ SKIP ▶▶<br/>CD: - skips track forward.</p> <p>⑩ CARRYING HANDLE</p> <p>⑪ TELESCOPIC ANTENNA<br/>- to improve FM reception</p> <p>⑫ Battery Door<br/>-battery compartment</p> <p>⑬ TUNNG CONTROL<br/>- selects AM/ FM stations.</p> <p>⑭ FUNCTION SELECTOR<br/>- selects source of sound AM/FM/AUX IN/CD</p> <p>⑮ VOLUME<br/>- adjusts volume level.</p> <p>⑯ AUX-IN JACK<br/>- Listen to other Audio devices.</p> |
|---|--|

## 5. Operation

### 5.1 Master power switch

The appliance is equipped with a master power switch located at the side panel.

- Set the switch into the ON position prior to taking the appliance into operation.
- Set the switch into the OFF position prior to disconnecting from the mains.



- When the appliance is not in use for longer period, we recommend to switch the appliance off at the master power switch.
- The master power switch does not switch off the power if there are batteries installed. In order to minimise power consumption, always set the FUNCTION switch to the AUX position after use.

### 5.2 General functions

- To select the source mode (AM/FM/AUX IN/CD), slide the FUNCTION switch to the desired position. To switch off the appliance, slide the switch to the AUX position.
- To adjust the volume level, turn the VOLUME dial until the desired level is set.
- To connect an external audio device, insert the cable plug in the AUX IN jack .

### 5.3 Radio functions

- To select the radio band, slide the FUNCTION switch to the AM or FM position.
- To select a frequency or radio station, turn the TUNING dial until the desired frequency is set.



To improve the reception of the FM frequency, extend the aerial antenna. To improve the reception of the AM frequency, turn the appliance.



## 5.4 CD functions

- To select the CD function, slide the FUNCTION switch to the CD position.
- To insert a CD:
  - Press the CD compartment to open the appliance.
  - Insert the CD with the label upwards.
  - Close the CD compartment.

The display shows the total number of tracks on the CD.

- To start playback, press the PLAY/PAUSE button once.

During playback, the following functions are available:

- To select a track, press the SKIP- button or the SKIP+ button until the desired track is set.
- To search for a specific point on the disc, hold the SKIP- button or the SKIP+ button until the point is reached and release the button.
- To pause playback, press the PLAY/PAUSE button once; to resume playback, press the button again.
- To stop playback, press the STOP button .

### Using the REPEAT function

This function is available in PLAY and STOP mode.

- Press the REPEAT button once to repeat the current track. The REPEAT indicator is ON.
- Press the button twice to repeat all tracks on the CD. The REPEAT ALL indicator is ON.
- Press the button once again to exit the REPEAT function.

### Using the PROGRAM function

To use the PROGRAM function for CD, the playback must be in STOP mode.

- To play a list of tracks (max. 20) in a program, press the PROGRAM button .
- To program a CD:
  - Press the SKIP- button or the SKIP+ button to select a desired track.
  - Press the PROGRAM button to confirm the selection. Repeat the previous step to select more tracks and confirm every selection with the PROGRAM button .
- Press the PLAY/PAUSE button to start the program.
- To play the program again, press the PROGRAM button after the program has finished. Press the PLAY/PAUSE button to start the program again.
- To view the program in stop mode, press the PROGRAM button.
- To stop the program during playback, press the STOP button .
- To delete the program during the playback, press the STOP button twice.

## 6. Cleaning and maintenance



### WARNING

Before performing any cleaning or maintenance, switch off and unplug the appliance.

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.
- Clean the lens with a camera lens brush/blower (not included) if the lens is dirty.

### 6.1 Handle and care of a disc

- Hold the disc with fingers. Hold the disc outer edge and/or the centre spindle hole. Do not touch the disc surface.
- Do not bend or press the disc. Do not expose the disc to direct sunlight or heating sources.
- Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently, radially, from centre towards the outer edge.
- Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

## 7. Troubleshooting

Trouble	Action
No display	Switch on the appliance. Connect the appliance properly. Select the correct function with the FUNCTION switch .
No sound	Connect the appliance properly. Adjust the volume. Adjust tuning control. Check if the CD is inserted with the label upwards. Clean the lens.

## 8. Technical data

Parameter	Value
Voltage	230 V <sub>AC</sub> ~ 50 Hz
Power consumption	12 W
Max power output	2 X 3 W (2 x 1 W RMS)
Radio bands	AM/FM
Dimensions (W x H x D)	269 x 98 x 168 mm
Weight	1,9 kg

### Frequency range

Parameter	Value
AM radio	540 - 1600 kHz
FM radio	88 - 108 mHz

### Battery power

Parameter	Value
Power consumption	6 x 1,5 V
Battery size	C

## 9. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: [www.akai.eu](http://www.akai.eu)

## Inhoudsopgave

<b>1.</b>	<b>Veiligheid .....</b>	<b>14</b>
	1.1 Beoogd gebruik.....	14
	1.2 Pictogrammen in deze handleiding.....	14
	1.3 Algemene veiligheidsvoorschriften .....	14
<b>2.</b>	<b>Vorbereidingen voor gebruik.....</b>	<b>15</b>
	2.1 Uitpakken .....	15
	2.2 Inhoud van de verpakking.....	15
<b>3.</b>	<b>Installatie .....</b>	<b>16</b>
	3.1 Aansluiten op het lichtnet.....	16
	3.2 Batterijstroom.....	17
<b>4.</b>	<b>Functies .....</b>	<b>18</b>
<b>5.</b>	<b>Bediening .....</b>	<b>19</b>
	5.1 Hoofdvoedingsschakelaar.....	19
	5.2 Algemene functies .....	19
	5.3 Radiofuncties .....	19
	5.4 CD-functies .....	20
<b>6.</b>	<b>Reiniging en onderhoud .....</b>	<b>21</b>
	6.1 Behandeling en verzorging van schijven .....	21
<b>7.</b>	<b>Problemen oplossen .....</b>	<b>22</b>
<b>8.</b>	<b>Technische gegevens.....</b>	<b>22</b>
<b>9.</b>	<b>Afvoer van gebruikte elektrische en elektronische apparatuur.....</b>	<b>23</b>

## Verklaring met betrekking tot auteursrechten

Het ontwerp en de specificaties kunnen zonder mededeling worden gewijzigd.