

# AKAI

## Klokradio

AR130WE



User manual  
Gebruiksaanwijzing  
Manuel de l'utilisateur  
Brugsanvisning

GB 2

NL 12

FR 22

DA 32

## Table of contents

<b>1.</b>	<b>Safety</b> .....	<b>3</b>
	1.1 Intended use .....	3
	1.2 Labels in this manual .....	3
	1.3 General safety instructions .....	3
<b>2.</b>	<b>Preparations for use</b> .....	<b>4</b>
	2.1 Unpacking .....	4
	2.2 Package contents .....	4
<b>3.</b>	<b>Installation</b> .....	<b>4</b>
	3.1 Connecting to the mains .....	5
	3.2 Battery backup .....	5
<b>4.</b>	<b>Functions</b> .....	<b>6</b>
<b>5.</b>	<b>Operation</b> .....	<b>7</b>
	5.1 Clock functions .....	7
	5.2 Radio functions .....	8
	5.3 Setting the SLEEP function .....	8
	5.4 Alarm function .....	8
<b>6.</b>	<b>Cleaning and maintenance</b> .....	<b>9</b>
<b>7.</b>	<b>Troubleshooting</b> .....	<b>9</b>
<b>8.</b>	<b>Technical data</b> .....	<b>10</b>
<b>9.</b>	<b>Disposal of used electrical and electronic equipment</b> .....	<b>11</b>

## Copyright notice

Design and specifications are subject to change without notice.

# 1. Safety

## 1.1 Intended use

The Clockradio wakes you up with music from radio broadcast. The clock function includes an alarm and sleep program. Read the manual carefully before the first use.

## 1.2 Labels in this manual



### WARNING

A warning means that injury or death is possible if the instructions are not obeyed.



### CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

## 1.3 General safety instructions



### WARNING

Do not put force on the appliance. The appliance can fall and can cause serious injury.



### CAUTION

Do not spill any liquid on the appliance.



### WARNING

Do not insert any objects in the ventilation holes.



### CAUTION

Do not block the ventilation holes.



This appliance is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate.

## 2. Preparations for use

### 2.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

### 2.2 Package contents

The following items are included in the received package:

- 1 Clockradio
- 1 AC/DC adaptor + cable
- 1 Operator manual



If any item is missing, please contact your reseller.

## 3. Installation

- Put the appliance on a horizontal flat surface.
- Connect the appliance to the mains.  
Read the paragraph "Connecting to the mains".



### CAUTION

- Do not put the appliance near a heat source.
- Do not expose the appliance to direct sunlight.



This appliance is equipped with rubber feet to prevent it from moving. The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.

### 3.1 Connecting to the mains

- Connect the adaptor plug on the adaptor cable to the AC IN 7.5 V connection.
- Connect the mains plug to a wall socket.

### 3.2 Battery backup

In case of a power failure, the appliance relies on battery backup. For this purpose, the appliance uses one battery (9 V). The appliance remembers the time, but does not display it.



- Batteries are not included with this appliance.
- Batteries are not necessary for normal operation.

#### Installing the battery



- Remove the battery cover.
- Insert the battery matching the (+) and (-) polarity markings.
- Re-install the battery cover.



#### CAUTION

Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

## 4. Functions

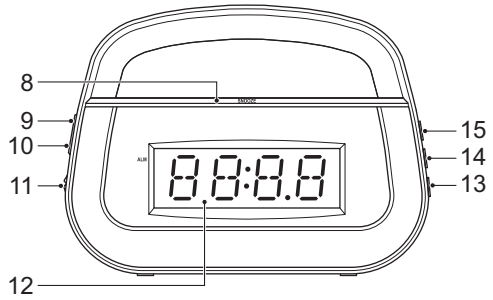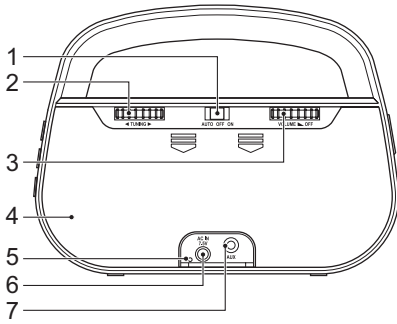

- 1 AUTO-OFF-ON switch
- 2 TUNING dial
- 3 VOLUME dial
- 4 Battery compartment
- 5 FM antenna
- 6 AC IN 7.5 V connection
- 7 AUX connection
- 8 SNOOZE button

- 9 MIN button
- 10 HOUR button
- 11 AM/FM switch
- 12 Display
- 13 SLEEP button
- 14 TIME button
- 15 ALARM/OFF button

## 5. Operation

- To switch on the appliance, slide the AUTO-OFF-ON switch (1) to the ON position. To switch off the appliance, slide the AUTO-OFF-ON switch (1) to the OFF position.
- To adjust the volume level, turn the VOLUME dial (3) to the required position.

### Audio connections (input)

The AUX connection allows you to receive audio signal from a connected MP3 or CD player. Suitable cables can be purchased at your reseller.

- To connect an external audio device, insert the cable plug in the AUX receptacle (7).
- To switch on the appliance, slide the AUTO-OFF-ON switch (1) to the AUTO position.
- Adjust volume to the desired level.

## 5.1 Clock functions

### Setting the current time

- Press and hold the TIME button (11).
- Press the HOUR button (10) or the MIN button (9) until the desired time is set.

### Setting the alarm time

- Press and hold the ALARM/OFF button (15).
- Press the HOUR button (10) or the MIN button (9) until the desired time is set.



During a power failure, or when unplugging the appliance, the time settings are lost, unless backup batteries are installed.

## 5.2 Radio functions

- To select the radio band, slide the AM/FM switch (11) to the AM or FM position.
- To select a frequency or radio station, turn the TUNING dial (2) until the required frequency is set.



To improve the reception of the FM frequency, extend the aerial antenna. To improve the reception of the AM frequency, turn the appliance.

## 5.3 Setting the SLEEP function

- Slide the AUTO-OFF-ON switch (1) to the AUTO position.
- Select the desired radio station.
- Press the SLEEP button (13). The sleep time (59 min) flashes on the display.
- Press the HOUR button (10) or the MIN button (9) until the desired time is set (1:59, 1:58, 1:57 .. 0:01).

The appliance stops playing after the chosen time has elapsed.

- To cancel the SLEEP function, press the SNOOZE button (8).

## 5.4 Alarm function

This function is available in radio, AUX and tone mode.

- For radio alarm:
  - Switch on the appliance.
  - Select the desired radio station.
  - Adjust the volume.
- For AUX alarm:
  - Connect the audio source to the appliance. Switch on the audio source.
  - Switch on the appliance.
  - Adjust the volume.
- For tone alarm:
  - Turn the VOLUME dial (3) to the OFF position. The dial is locked in position when you hear a click.
- To activate the alarm, set the AUTO-OFF-ON switch (1) to the AUTO position.
- To cancel the alarm, set the AUTO-OFF-ON switch (1) to the OFF position.



## Snooze alarm

The default snooze time is: 9 minutes.

- To snooze the alarm, press the SNOOZE button (8) once. The alarm sounds again after the snooze time has elapsed.
- To stop the alarm, press the ALARM/OFF button (15). The alarm is automatically set for the next day.

## 6. Cleaning and maintenance



### WARNING

Before performing any cleaning or maintenance, switch off and unplug the appliance.

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

## 7. Troubleshooting

Trouble	Action
No display	Switch on the appliance. Connect the appliance properly.
No sound	Select the correct function with the ON/OFF switch (1). Connect the appliance properly. Adjust the volume. Adjust the tuning control.

## 8. Technical data

Parameter	Value
Voltage	230 V <sub>AC</sub> ~ 50 Hz
Backup voltage	9 V
Power consumption	2.040 W
Standby power consumption	1.039 W
Max power output	0.5 W
Radio bands	FM
Dimensions (W x H x D)	153 x 114 x 76 mm
Weight	260 g

### Frequency range

Parameter	Value
AM radio	540 - 1600 kHz
FM radio	88 - 108 mHz

## 9. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: [www.akai.eu](http://www.akai.eu)