

# AKAI

## CLOCK RADIO




### AR150D

Gebruiksaanwijzing.....	1-3
Mode d'emploi.....	4-5
Instruction manual.....	6-7

**USER GUIDE**

**DESCRIPTION**

1. FAST SET
2. SLOW SET
3. ALARM/OFF SET
4. AM-FM SWITCH
5. AL1/AL1+2/AL2 SWITCH
6. AUTO-OFF-ON SWITCH
7. VOLUME/OFF KNOB
8. ALARM SET
9. TIME SET
10. SLEEP SET
11. SNOOZE SET
12. DIAL POINTER
13. DISPLAY
14. TUNING KNOB
15. SPEAKER

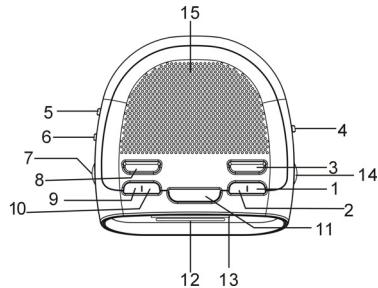

THE NORMAL FUNCTION OF THE PRODUCT MAYBE DISTURBED BY STRONG ELECTRO MAGNETIC INTERFERENCE. IF SO, SIMPLY RESET THE PRODUCT TO RESUME NORMAL OPERATION BY FOLLOWING THE INSTRUCTION MANUAL. IN CASE THE FUNCTION COULD NOT RESUME, PLEASE USE THE PRODUCT IN OTHER LOCATION.

**CONNECTING THE RADIO**

PLUG THE AC CORD INTO THE POWER OUTLET. WHEN ELECTRICAL POWER HAS BEEN INTERRUPTED AND RESTORED, THE CLOCK DISPLAY WILL BLINK. MAKE SURE TO RESET BOTH THE CORRECT TIME AND ALARM TIME FOR PROPER OPERATION. THE AC MAINS PLUG IS USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.

**TIME SETTING**

PRESS AND HOLD THE TIME SET (9). KEEP PRESSING THE SLOW SET (2) OR FAST SET (1) TO SET THE CLOCK DISPLAY TO THE CORRECT TIME.

PRESS FAST SET (1) THE TIME WILL ADVANCE FAST FORWARD, PRESS THE SLOW SET (2) THE TIME WILL ADVANCE SLOWLY. RELEASE THE FAST SET (1) OR SLOW SET (2) WHEN FINISHED THE SETTING.

**RADIO OPERATION**

SLIDE THE "AUTO-OFF-ON" SWITCH (6) TO "ON" AND TURN ON THE VOLUME. SLIDE THE "AM-FM" SWITCH (4) TO "AM" OR "FM" POSITION. ADJUST TUNING KNOB (14) AND VOLUME/OFF (7) FOR THE DESIRED FREQUENCY AND LISTENING LEVEL.

**SLEEP TO MUSIC**

SLIDE THE "AUTO-OFF-ON" (6) TO EITHER "OFF" OR "AUTO". PRESS THE SLEEP SET (10) ONCE. YOU CAN HAVE 59 MINUTES PLAYING THE RADIO TO ACCOMPANY YOU TO SLEEP. SET FOR A DESIRED PERIOD OF SLEEP, SIMPLY PRESS AND HOLD SLEEP SET (10) AND THEN PRESS FAST SET (1) OR SLOW SET (2) TO SET THE DESIRED PERIOD OF THE SLEEP FUNCTION. IF YOU WANT TO TURN OFF THE RADIO BEFORE SLEEP TIME HAS EXPIRED, PRESS SNOOZE SET (11) ONCE.

**ALARM TIME SETTING**

**AL1 OR AL2 SETTING:** SLIDE THE AUTO-OFF-ON SWITCH (6) TO "AUTO" POSITION. SLIDE THE "AL1/AL1+2/AL2" SWITCH (5) TO "AL1" POSITION OR "AL2" POSITION. KEEP PRESSING THE ALARM SET, AND THEN PRESS THE SLOW SET (2) OR FAST SET (1) TO SET THE ALARM TIME.

**DUAL ALARM SETTING:** REPEAT THE ABOVE STEPS (**AL1 OR AL2 SETTING**) TO SET THE ALARM 1 TIME AND ALARM 2 TIME, THEN SLIDE THE "AL1/AL1+2/AL2" SWITCH (5) TO "AL1+2" POSITION. PRESS ALARM SET (8) THE DISPLAY WILL SHOW THE ALARM 2 TIME.

**WAKE TO MUSIC**

1. SLIDE THE FUNCTION SWITCH (6) TO "ON" POSITION. SET THE "AM-FM" SWITCH TO "AM" OR "FM" POSITION. ADJUST THE TUNING KNOB (14) AND VOLUME KNOB (7) TO A DESIRED FREQUENCY AND LISTENING LEVEL.
2. SET THE ALARM TIME AS SHOWN ABOVE.
3. THE RADIO WILL PLAY AUTOMATICALLY AT THE PRESET TIME.

**WAKE TO BUZZER ALARM**

1. SET THE ALARM TIME AS SHOWN ABOVE.
2. TURN OFF THE VOLUME. YOU WILL BE AWAKENED BY THE BUZZER ALARM.

**SNOOZE OPERATION**

WHEN THE ALARM IS ON, PRESS SNOOZE SET (11) ONCE. AFTER 7 MINUTES, THE ALARM WILL BE ON AGAIN.

**TURN THE ALARM OFF**

PRESS ALARM/OFF SET (3) ONCE TO STOP THE ALARM AND ALARM WILL RESUME IN 24 HOURS (THE OTHER DAY). TO STOP THE ALARM COMPLETELY, SLIDE THE FUNCTION SWITCH (6) TO "OFF" POSITION.

**TO GO TO SLEEP AND WAKE TO MUSIC**

REPEAT THE STEPS OF "WAKE TO MUSIC". PRESS SLEEP SET (10) TO SET FOR A DESIRED PERIOD OF RADIO PLAYING BEFORE SLEEP. THE RADIO WILL STOP AUTOMATICALLY AND WILL START AGAIN AT THE PRESET WAKE UP TIME.

**BATTERY BACKUP**

THIS CLOCK HAS A BACKUP POWER SYSTEM TO ENSURE CONTINUOUS OPERATION DURING POWER FAILURE. INSERT ONE 9-VOLT BATTERY AND THE CLOCK MECHANISM WILL CONTINUE TO MAINTAIN THE CURRENT TIME AND ALARM PROGRAM.

**DРИPPING & VENTILATION WARNING**

THE PRODUCT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE PRODUCT. THE NORMAL VENTILATION OF THE PRODUCT SHALL NOT BE IMPEDED FOR INTENDED USE.

**Disposal of Used Electrical & Electronic Equipment**

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**Importer AKAI Benelux – Elmarc B.V.**

Information : [www.akai.eu](http://www.akai.eu)

Power consumption: 5W (wattage: Back up 9V)  
Standby power consumption: 1W

Corrosion, oxidation, battery-leakage and any other gradually acidic defect of this nature will invalidate the guarantee.