





- EN For more information see [www.akai.eu](http://www.akai.eu)
- NL Voor meer informatie zie [www.akai.eu](http://www.akai.eu)
- D Für weitere Informationen siehe [www.akai.eu](http://www.akai.eu)
- F Pour plus d'informations, veuillez consulter le site [www.akai.eu](http://www.akai.eu)
- E Para más información, visite [www.akai.eu](http://www.akai.eu)
- DK For mere information besøg [www.akai.eu](http://www.akai.eu)
- FI Lisätietoja löydät osoitteesta [www.akai.eu](http://www.akai.eu)





## 1 Connect to the mains

Sluit op het lichtnet aan  
Schließen Sie die Netzspannung an  
Raccordez au réseau électrique  
Conecte a la red eléctrica  
Tilslut til lysnettet  
Kytke verkkovirtaan

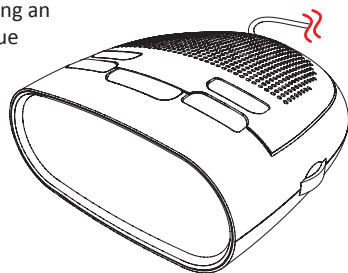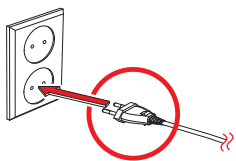

## 2 Insert the battery

 
De batterij plaatsen  
Batterie einsetzen  
Installer la batterie  
Instalación de las pila  
Batteriet sættes i ud.  
Aseta paristo

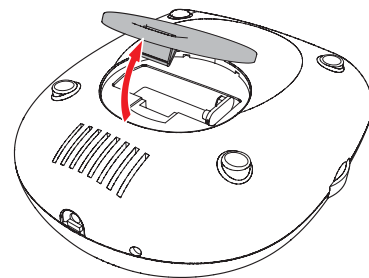

## 3 The buttons

De knoppen  
Die Tasten  
Les boutons  
Los botones  
Knapperne  
Painikkeet

1	AM/FM/ON/OFF
2	HOUR/TU-
3	MIN/TU+
4	SLEEP/SNOOZE/DIMMER HI/LOW
5	AL 1 / VOL-
6	AL2/VOL+
7	SET/PRE/M+

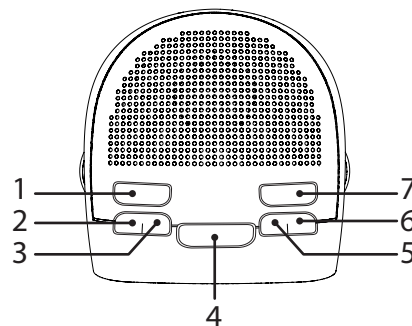

## 4 Setting the time


Tijd instellen  
Zeit einstellen  
Régler l'heure  
Configuración del tiempo  
Indstil tid  
Aseta aika



SET/PRE/M+



HOUR/TU-

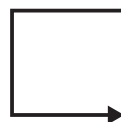


MIN/TU+



## 5 Switch to radio mode, AM/FM



Schakel naar de radiomodus, AM/FM  
Schalten Sie in den Radiomodus, AM/FM  
Basculez en mode radio, AM/FM  
Cambio a modo radio, AM/FM  
Skift over til radiomodus, AM/FM  
Siirry radiotilaan, AM/FM

AM/FM/ON/OFF

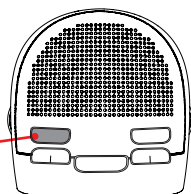

## 6 Adjust the frequency manually

Handmatig frequentie aanpassen  
Frequenz manuell anpassen  
Régler manuellement la fréquence  
Ajustar frecuencia manualmente  
Frekvensen justeres manuelt  
Säädä taajuus käsin

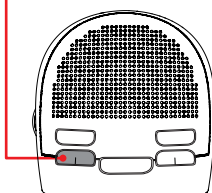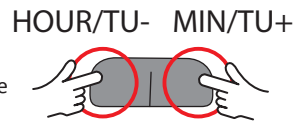

# 7

## Save a radiostation into the memory (max. 10)


Radiozender opslaan in het geheugen (max. 10)  
 Radiosender im Speicher speichern (max. 10)  
 Enregistrer la station de radio dans la mémoire (max. 10)  
 Guardar una emisora de radio en la memoria (max. 10)  
 Radiosender gemmes i hukommelsen (max. 10)  
 Tallenna asema muistiin (max. 10)



# 8

## Select a radiostation


Kies een radiostation  
 Choose a radiostation  
 Choisissez une station radio  
 Elegir una emisora de radio  
 Vælg en radiostation  
 Valitse radioasema

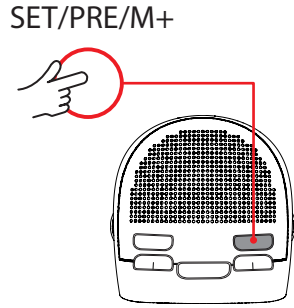

# 9

## Snooze function


Sluimeralarm  
 Schlummerfunktion  
 Rappel d'alarme  
 Alarma de repetición  
 Slumrealarm  
 Torckkuherätys

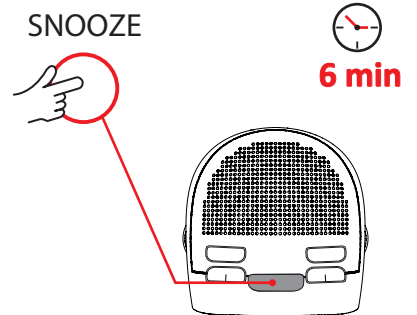

# 10

## Setting the alarm time 1 (buzzer or radio)

De alarmtijd instellen  
 Einstellen der Alarmzeit  
 Réglage de l'heure de l'alarme  
 Ajuste de la hora de alarma  
 Alarmtidspunktet indstilles  
 Säädä herätysaika

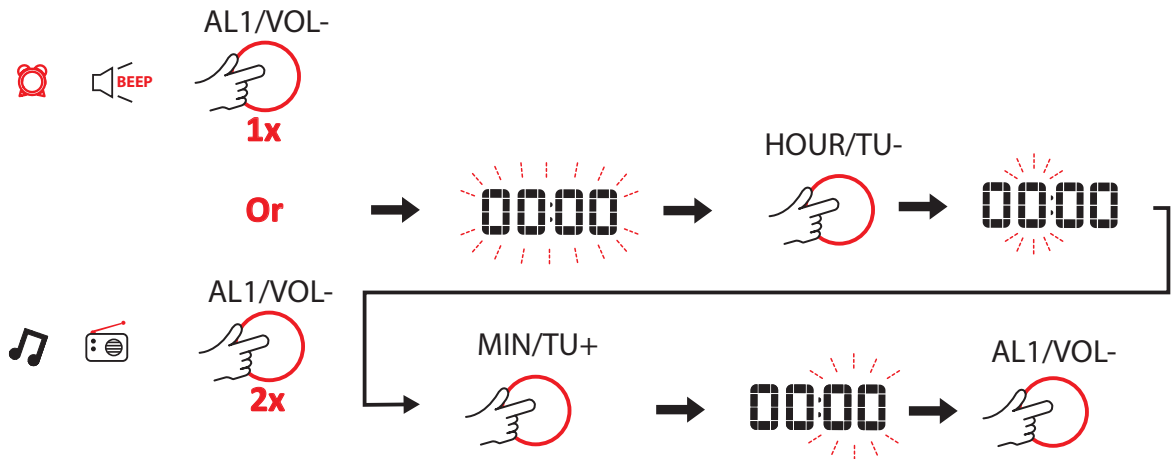

Specifications	Specificaties	Technische Daten	Spécifications	Especificaciones	Specifikationer	Tekniset tiedot
Power supply: AC 230V ~ 50 Hz	Stroomvoeding: AC 230V ~ 50 Hz	Stromzufuhr: AC 230V ~ 50 Hz	Alimentation électrique : AC 230V ~ 50 Hz	Fuente de alimentación: AC 230V ~ 50 Hz	Strømforsyning: AC 230V ~ 50 Hz	Syöttövirta: AC 230V ~ 50 Hz
LCD Display Batteries: 1 x 9V (Batteries not included)	LCD display Batterij: 1 x 9V (Batterijen zijn niet bijgeleverd)	LCD-Display Batterie: 1 x 9V (Die Batterien sind im Lieferumfang nicht enthalten)	Affichage LCD Batterie: 1 x 9V (Les piles ne sont pas livrées)	Pantalla LCD Batería: 1 x 9V (Las pilas no están incluidas)	LCD-display Batteriet: 1 x 9V (Batterier er ikke inkluderet)	Nestekidenäyttö Paristo: 1 x 9V (Paristoja ei ole mukana)
Digital FM Radio FM tuner, frequency range: 87,5 - 108 MHz AM tuner, frequency range: 552 - 1620 MHz Dimensions: 14,5 x 6,5 x 14 cm Alarm clock Weight: 474 g	Digitale FM radio FM-tuner, FM frequentiebereik: 87,5 - 108 MHz AM-tuner, FM frequentiebereik: 552 - 1620 MHz Afmetingen: 14,5 x 6,5 x 14 cm Alarmklok Gewicht: 474 g	Digitales FM-Radio FM-Tuner, Frequenz-bereich: 87,5 - 108 MHz AM-Tuner, Frequenz-bereich: 552 - 1620 MHz Abmessungen: 14,5 x 6,5 x 14 cm Wecker Gewicht: 474 g	Radio FM numérique FM-Tuner, Plage de fréquence: 87,5 - 108 MHz AM-Tuner, Plage de fréquence: 552 - 1620 MHz Dimensions : 14,5 x 6,5 x 14 cm Horloge alarme Poids: 474 g	Radio FM digital Sintonizador FM, Intervalo de frecuencia: 87,5 - 108 MHz Sintonizador AM, Intervalo de frecuencia: 552 - 1620 MHz Dimensiones : 14,5 x 6,5 x 14 cm Reloj alarma Peso: 474 g	Digital FM-radio Digital FM-radio FM-tuner, Frekvensområde: 87,5 - 108 MHz AM-tuner, Frekvensområde: 552 - 1620 MHz Dimensioner: 14,5 x 6,5 x 14 cm Alarmur Vægt: 474 g	Digitaalinen FM-radio FM-viritin, Taajuusalue: 87,5 - 108 MHz AM-viritin, Taajuusalue: 552 - 1620 MHz Mitat: 14,5 x 6,5 x 14 cm Herätyskello Paino: 474 g