




- (EN) For more information see www.akai.eu
- (NL) Voor meer informatie zie www.akai.eu
- (D) Für weitere Informationen siehe www.akai.eu
- (F) Pour plus d'informations, veuillez consulter le site www.akai.eu
- (E) Para más información, visite www.akai.eu
- (DK) For mere information besøg www.akai.eu
- (FI) Lisätietoja löydät osoitteesta www.akai.eu





1 Check the contents

Controleer de inhoud
Kontrollieren Sie den Inhalt
Vérifiez le contenu
Revise el contenido
Kontroller indholdet
Tarkista sisältö

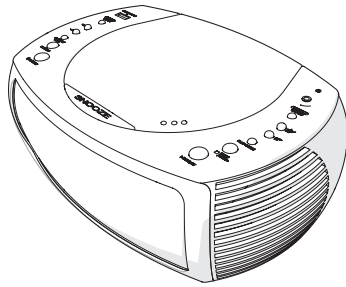


2 Connect to the mains

Sluit op het lichtnet aan
Schließen Sie die Netzspannung an
Raccordez au réseau électrique
Conecte a la red eléctrica
Tilslut til lysnettet
Kytke verkkovirtaan

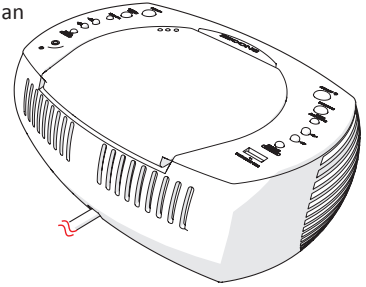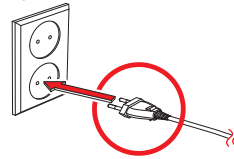



3 Insert the batteries

Plaats de batterijen
Legen Sie die Batterien ein
Placez les piles
Coloque las pilas
Sæt batteriet i
Parištojen asettaminen

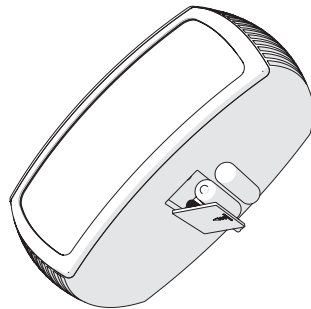


4 USB connection to charge device

USB aansluiting om apparaat te laden
USB-Anschluss, um Gerät zu laden
Connexion USB pour charger un appareil
Conexión USB para cargar el aparato
USB til at lade apparatet op
USB-liitäntä laitteen lataamista varten

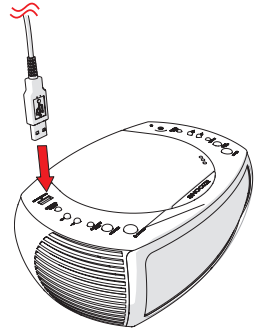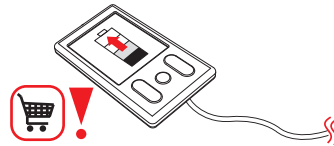


5 Setting the time

Tijd instellen
Zeit einstellen
Régler l'heure
Configuración del tiempo
Indstil tid
Aseta aika

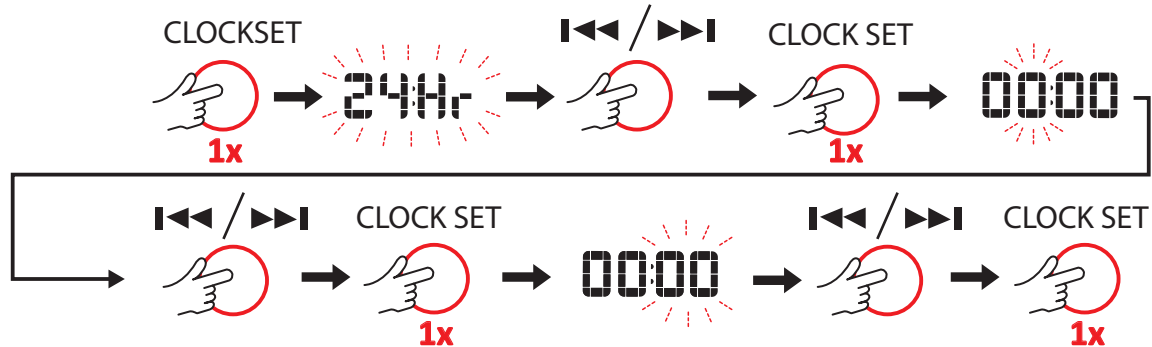


6 The FUNCTION button

De toets FUNCTION
Die Taste FUNCTION
La touche FUNCTION
Los botones FUNCTION
Knappen FUNCTION
Painike FUNCTION

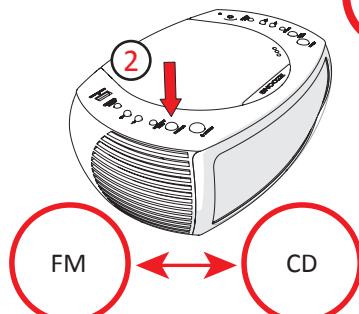

7 CD functions


CD functies
CD-Funktionen
Fonctions CD
Funciones del CD
CD-funktioner
CD-toiminno

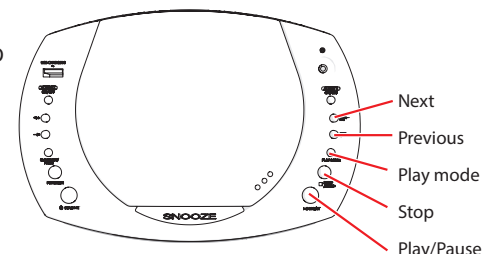

8

Choose frequency automatically

Pas automatisch de frequentie aan
Ändern Sie die Frequenz automatisch
Adaptez la fréquence automatiquement
Ajuste automático de frecuencia
Indstil frekvensen automatisk
Säädä taajuus automaattisesti

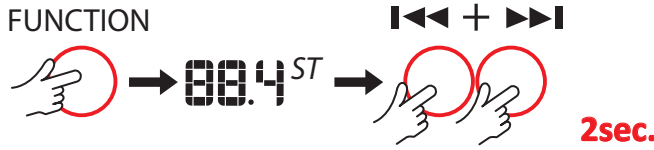

9

Adjust the frequency manually


Handmatig frequentie aanpassen
Frequenz manuell anpassen
Régler manuellement la fréquence
Ajustar frecuencia manualmente
Frekvensen justeres manuelt
Säädä taajuus käsin



10

Save a radiostation into the memory (max. 20)


Radiozender opslaan in het geheugen (max. 20)
Radiosender im Speicher speichern (max. 20)
Enregistrer la station de radio dans la mémoire (max. 20)
Guardar una emisora de radio en la memoria (max. 20)
Radiosender gemmes i hukommelsen (max. 20)
Tallenna asema muistiin (max. 20)

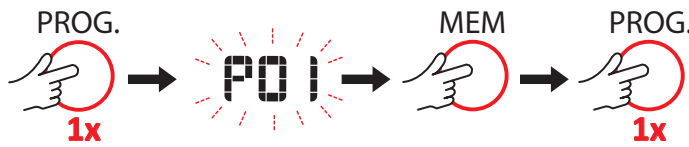

11

Snooze function


Sluimeralarm
Schlummerfunktion
Rappel d'alarme
Alarma de repetición
Slumrealarm
Torkkuherätys

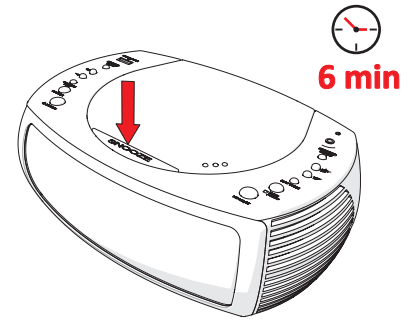

12


Setting the alarm time

De alarmtijd instellen
Einstellen der Alarmzeit
Réglage de l'heure de l'alarme
Ajuste de la hora de alarma
Alarmtidspunktet indstilles
Säädä herätysaika

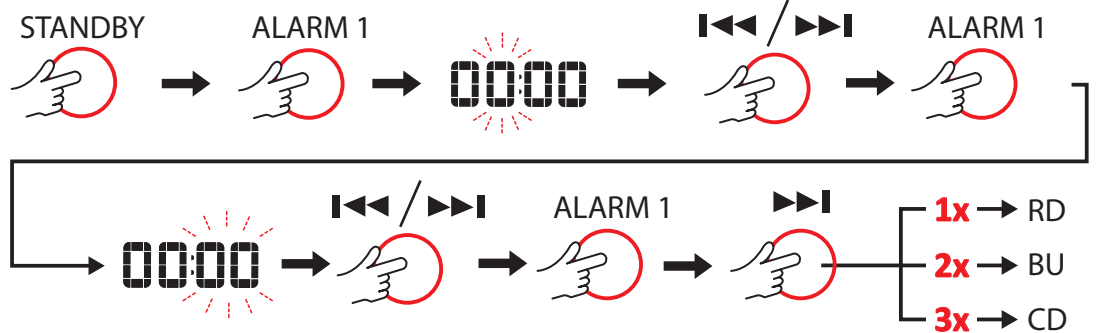

13

Sleep timer

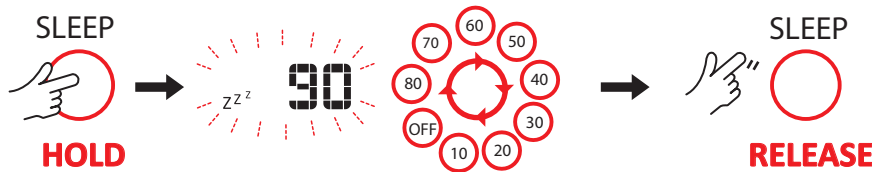

Specifications

Specificaties

Technische Daten

Spécifications

Especificaciones

Specifikationer

Tekniset tiedot

Power supply:
AC 230V ~ 50 Hz
Power consumption: 36W
Standby: <1W
LCD Display
USB slot
Line in jack: 3.5 mm
CD Player

Stroomvoeding:
AC 230V ~ 50 Hz
Energieverbruik: 36W
Standby: <1W
LCD Display
USB aansluiting
Line-in aansluiting: 3,5 mm
CD-speler

Stromzufuhr:
AC 230V ~ 50 Hz
Energieverbrauch: 36W
Standby-Betrieb: <1W
LCD-Display
USB Anschluss
Line-in-Buchse: 3,5 mm
CD-Player

Alimentation électrique:
AC 230V ~ 50 Hz
Consommation électrique:
36W
En veille: <1W
Affichage LCD
Port USB
Prise entrée de ligne: 3,5 mm
Lecteur CD

Fuente de alimentación:
AC 230V ~ 50 Hz
Consumo de energía: 36W
Stand-by: <1W
Pantalla LCD
Conexión USB
Port USB
Toma de entrada de línea: 3,5 mm
reproductor de CD

Strømforsyning:
AC 230V ~ 50 Hz
Energiforbrug: 36W
Stand-by: <1W
LCD-display
USB tilslutning
Line-in stik: 3,5 mm
cd-afspiller

Syöttövirta:
AC 230V ~ 50 Hz
Tehonkulutus: 36W
Virrankulutus: <1W
Nestekidenäyttö
USB -liitäntä
Linjaliitin: 3,5 mm
CD-soitin

Dimensions:
22,6 x 7,6 x 15,8 cm
Digital FM Radio
Alarm clock
Speaker output:
2 x 0,8 W
Weight: 1240 g

Afmetingen:
22,6 x 7,6 x 15,8 cm
Digitale FM-radio
Alarmsklok
Luidspreker output:
2 x 0,8 W
Gewicht: 1240 g

Abmessungen:
22,6 x 7,6 x 15,8 cm
Digitales FM-Radio
Wecker
Lautsprecher-Output:
2 x 0,8 W
Gewicht: 1240 g

Dimensions:
22,6 x 7,6 x 15,8 cm
Radio FM numérique
Horloge alarme
Sortie haut-parleur: 2 x 0,8 W
Poids: 1240 g

Dimensiones:
22,6 x 7,6 x 15,8 cm
Radio FM digital
Reloj alarma
Salida-altavoz: 2 x 0,8 W
Peso: 1240 g

Dimensioner:
22,6 x 7,6 x 15,8 cm
Digital FM-radio
Alarmur
Højttaler-output:
2 x 0,8 W
Vægt: 1240 g

Mitat:
22,6 x 7,6 x 15,8 cm
Digitaalinen FM-radio
Herätyskello
Kaiuttimät:
2 x 0,8 W
Paino: 1240 g