 


AKAI

iPod/iPhone speaker

ASB4I

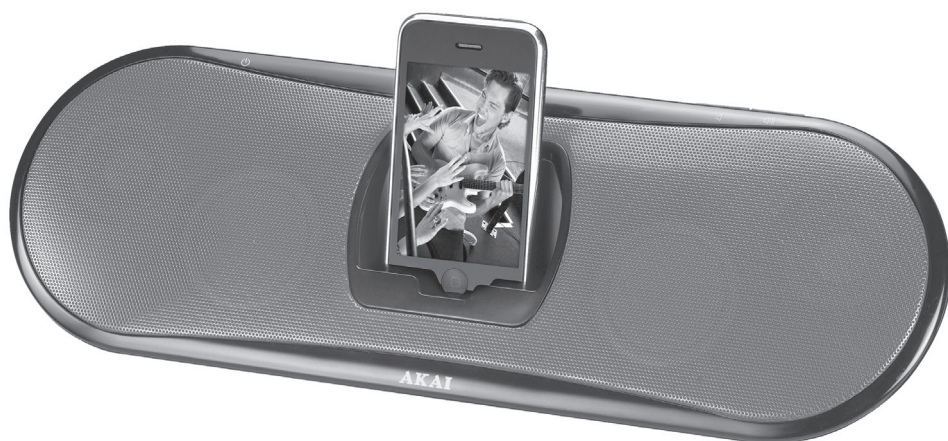

User manual

Gebruiksaanwijzing

Manuel de l'utilisateur

Manual de instrucciones

Gebrauchsanleitung

Οδηγίες χρήσεως

Brugsanvisning

GB 2

NL 13

FR 25

ES 37

DE 49

EL 62

DA 75

Table of contents

1.	Safety	3
	1.1 Intended use	3
	1.2 Labels in this manual	3
	1.3 General safety instructions	3
2.	Preparations for use	4
	2.1 Unpacking	4
	2.2 Package contents	4
3.	Installation	4
	3.1 Connecting random equipment	5
	3.2 Connecting to the mains	6
	3.3 Remote control	6
4.	Functions	7
	4.1 iPod Music System	7
5.	Operation	8
	5.1 Quick start	8
6.	Cleaning and maintenance	10
7.	Troubleshooting	11
8.	Technical data	11
9.	Disposal of used electrical and electronic equipment	12

Copyright notice

Design and specifications are subject to change without notice.

1. Safety

1.1 Intended use

The iPod Music System functions as a docking station to play music from an iPod/iPhone. Read the manual carefully before first use.

1.2 Labels in this manual



WARNING

A warning means that injury or death is possible if the instructions are not obeyed.



CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

1.3 General safety instructions



WARNING

Do not put force on the appliance. The appliance can fall and can cause serious injury.



CAUTION

Do not spill any liquid on the appliance.



WARNING

Do not insert any objects in the ventilation holes.



CAUTION

Do not block the ventilation holes.



This appliance is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate.

2. Preparations for use

2.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

2.2 Package contents

The following items are included in the received package:

- 1 iPod Music System
- 1 Remote control
- 1 Battery cell (CR2032)
- 1 Operator manual



If any item is missing, please contact your reseller.

3. Installation

- Put the appliance on a horizontal flat surface.
- Connect the random equipment to the appliance.
Read the paragraph "Connecting random equipment".
- Connect the appliance to the mains.
- Install the batteries in the remote control.
Read the paragraph "Remote control".



 
CAUTION

- Do not put the appliance near a heat source.
- Do not expose the appliance to direct sunlight.



This appliance is equipped with rubber feet to prevent it from moving. The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.

3.1 Connecting random equipment

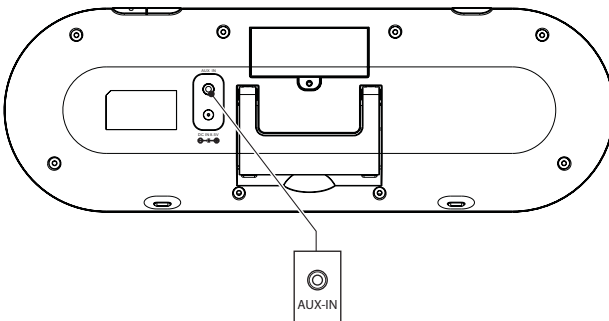


Audio connections (input)

These connections allow you to receive audio signal from a connected CD/DVD player or amplifier.

- Insert a suitable cable into the AUX IN connection.

 3.2 Connecting to the mains

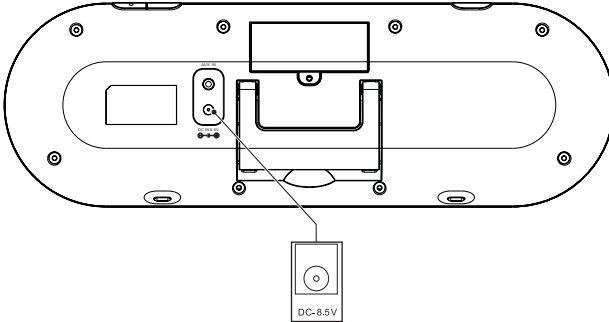


- Connect the adaptor plug on the adaptor cable to the DC 8,5 V input connection.
- Connect the mains plug to a wall socket.

3.3 Remote control


Installing the battery

 - Press the catch and at the same time pull out the battery tray.
- Insert 1 lithium battery, type CR2032 3 V battery with the stamped (+) mark facing upward.
- Insert the battery tray into the remote control.

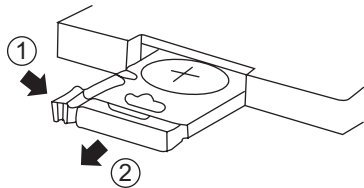

4. Functions

 4.1 iPod Music System

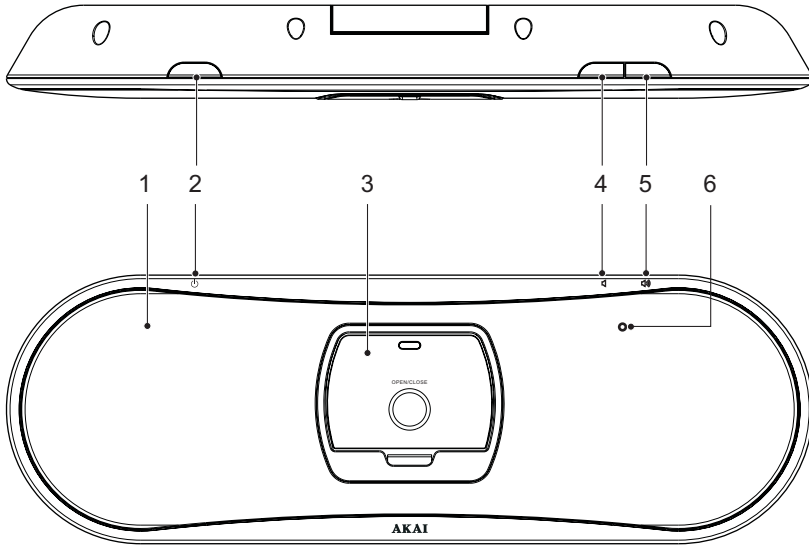


- 1 Power/Battery indicator
- 2 ON/OFF/PLAY/PAUSE button
- 3 Docking station
- 4 VOL- button
- 5 VOL+ button
- 6 Remote control sensor

Remote control

- 7 STANDBY button
- 8 M- button
- 9 MENU button
- 10 PREV button
- 11 ENTER button
- 12 PLAY/PAUSE button
- 13 SOUND button
- 14 VOL- button
- 15 VOL+ button
- 16 NEXT button
- 17 M+ button
- 18 MUTE button



 The M+ button, the M- button, the PREV button and the NEXT button function as arrow buttons for navigation in the iPod/iPhone menus.

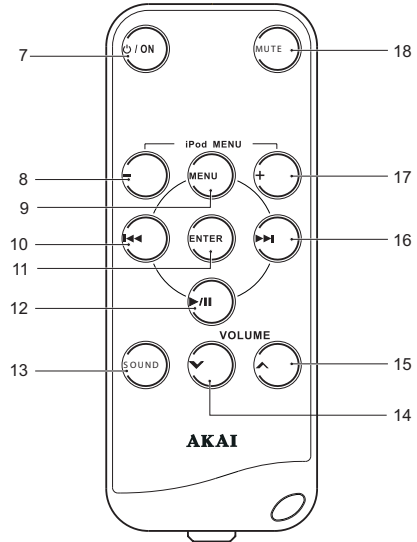

5. Operation

All functions of the appliance are accessible using the remote control. All instructions refer to operation with the remote control, unless indicated otherwise.

5.1 Quick start

General functions

- To switch on the appliance, press the STANDBY button (7). To switch off the appliance, press the STANDBY button (7) again.
- To adjust the volume, press the VOL+ button (15) or the VOL- button (14).
- To enable the surround, press the SOUND button (13). To disable the surround, press the SOUND button (13) again.
- To mute or restore sound, press the MUTE button (18).

iPod/iPhone functions

- Place the iPod/iPhone in the docking station.
- Switch on the appliance.
- For iPod touch and iPhone select the iPod mode.
- To start playback, press the PLAY/PAUSE button (12) once.
- For extended instructions, read the paragraph "iPod functions" further on in this manual.

Installing and removing an iPod/iPhone

- To install an iPod/iPhone:
 - Insert the iPod/iPhone into the docking station.
- To remove an iPod/iPhone:
 - Pull the iPod/iPhone gently out of the docking station.



Whilst the iPod/Phone is docked in the system, its battery is charged automatically. When the battery is fully charged, the charging process is completed.

Support models

Model	Memory
iPod mini	4 GB & 6 GB
iPod (4th generation)	20 GB & 40 GB
iPod colour (4th generation)	20 GB, 30 GB, 40 GB & 60 GB
iPod video (5th generation)	30 GB, 60 GB & 80 GB
iPod nano (1st generation)	1 GB, 2 GB & 4 GB
iPod nano (2nd generation)	2 GB, 4 GB & 8 GB
iPod nano (3rd generation)	4 GB & 8 GB
iPod nano (4th & 5th generation)	8 GB & 16 GB
iPod classic (1st generation)	80 GB & 160 GB
iPod classic (2nd generation)	120 GB
iPod touch (1st & 2nd generation)	8 GB, 16 GB & 32 GB
iPhone	4 GB, 8 GB & 16 GB
3G iPhone	8 GB & 16 GB
3GS iPhone	16 GB & 32 GB

Audio playback

During playback, the following functions are available:

- To select a track, press the PREV button (10) or the NEXT button (16) until the desired track is set.
- To forward or rewind the track, press and hold the PREV button (10) or the NEXT button (16).
- To pause playback, press the PLAY/PAUSE button (12) once.
To resume playback, press the PLAY/PAUSE button (12) again.

In order to operate the following functions, the iPod/iPhone must be unlocked.

- To select a playlist, press the MENU button (9).
- To enter the iPod menu, press the MENU button (9).
- To enter and navigate through the menu:
 - Press the M+ button (17) or the M- button (8) to select a submenu.
 - Press the ENTER button (11) to select a setting.

Charging the appliance

The appliance is fitted with an internal battery. Whilst the appliance is connected to the power source, its battery is charged automatically.

The power/battery indicator provides the information regarding the power:

blue: the appliance is switched on.

- green: the battery is fully charged.

- orange: the battery is charging.

- red: the battery is almost empty.

- Connect the adaptor plug on the adaptor cable to the DC 8.5 V input connection.
- Connect the mains plug to a wall socket.

6. Cleaning and maintenance



WARNING

Before performing any cleaning or maintenance, switch off and unplug the appliance.

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

7. Troubleshooting

Trouble	Action
No sound or incomplete audio	Check if the correct source is selected. Check volume or mute setting. Check if the random equipment are switched on and set correctly.
No power	Check cables for connection problems. Check if the power cord has been properly connected to the power outlet.
The operation keys do not work	Internal error. Reset the appliance.

iPod/iPhone

Trouble	Action
iPod/iPhone volume control does not increase audio volume	iPod/iPhone volume control only controls the volume output to the headphone jack. Set the unit volume control when the iPod/iPhone is docked on the unit.
No response to MENU function.	iPod/iPhone does not support these functions.

AUX

Trouble	Action
No sound on the unit system	Input source is low. Increase the volume level on the audio source device.
No picture	Check if the TV is switched on and set to the correct A/V input. Check cables for connection problems. Check cables for damage.

8. Technical data

Parameter	Value
Voltage	8.5 V _{DC}
Input voltage	100 ~ 240 V _{AC} / 50 ~ 60 Hz
Power consumption	25 W
Max. power output	2 x 4 W

Dimensions (W x H x D)	130x46x390 mm
Weight	0.76 kg

Remote control

Parameter	Value
Power consumption	3 V
Battery size	CR2032

9. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: www.akai.eu