

AKAI

Microset: Radio/CD player

QXA6630



User manual

Gebruiksaanwijzing

Manuel de l'utilisateur

Manual de instrucciones

Gebrauchsanleitung

Οδηγίες χρήσεως

Brugsanvisning

GB 2

NL 15

FR 28

ES 41

DE 54

EL 67

DA 80

Table of contents

1.	Safety	3
	1.1 Intended use	3
	1.2 Labels in this manual	3
	1.3 General safety instructions	3
2.	Preparations for use	4
	2.1 Unpacking	4
	2.2 Package contents	4
3.	Installation	4
	3.1 Installing the speakers	5
	3.2 Remote control	6
4.	Functions	7
	4.1 Front panel	7
	4.2 Remote control	8
5.	Operation	8
	5.1 Master power switch	8
	5.2 General functions	9
	5.3 Radio functions	9
	5.4 CD functions	9
6.	Cleaning and maintenance	11
	6.1 Handle and care of a disc	11
7.	Troubleshooting	12
8.	Technical data	13
9.	Disposal of used electrical and electronic equipment	14

Copyright notice

Design and specifications are subject to change without notice.

1. Safety

1.1 Intended use

The Micro Music System plays music from CD and radio. Read the manual carefully before first use.

1.2 Labels in this manual



WARNING

A warning means that injury or death is possible if the instructions are not obeyed.



CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

1.3 General safety instructions



WARNING

Do not put force on the appliance. The appliance can fall and can cause serious injury.



CAUTION

Do not spill any liquid on the appliance.



WARNING

Do not insert any objects in the ventilation holes.



CAUTION

Do not block the ventilation holes.



This appliance is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate.



This appliance employs a laser system. To prevent direct exposure to the laser beam, do not open the appliance. Visible laser radiation when open and interlock defeated.

2. Preparations for use

2.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

2.2 Package contents

The following items are included in the received package:

- 1 Micro Music System
- 2 Speakers
- 1 Remote control
- 2 Batteries (AAA)
- 1 Operator manual



If any item is missing, please contact your reseller.

3. Installation

- Put the appliance on a horizontal flat surface.
- Connect the speakers to the appliance.
Read the paragraph "Installing the speakers".
- Connect the appliance to the mains.
- Install the batteries in the remote control.
Read the paragraph "Remote control".



CAUTION

- Do not put the appliance near a heat source.
- Do not expose the appliance to direct sunlight.



This appliance is equipped with rubber feet to prevent it from moving. The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.

 
3.1 Installing the speakers

The cables and terminals are colour-coded:

- Red wires connect to red terminals (+).
- Black wires connect to black terminals (-).
- Place the speakers on a horizontal flat surface. Place the speakers close enough to the appliance to be able to connect the wires.

Connection to the appliance

- Lift the latches to open the terminals.
- Connect the wire ends of the speakers to the appliance matching the (+) and (-) polarity markings.
- Press the latches to lock the wire ends.

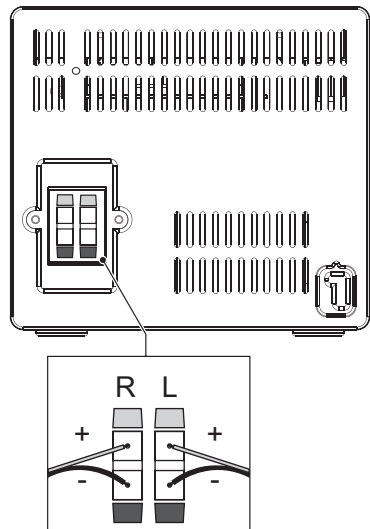

3.2 Remote control

 
Install batteries

- Remove the battery cover.
- Insert the batteries matching the (+) and (-) polarity markings.
- Re-install the battery cover.



CAUTION


Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

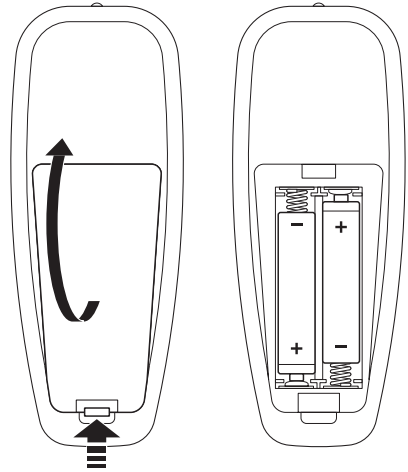

4. Functions


4.1 Front panel

 - 1 FUNCTION switch
- 2 NEXT button
- 3 PROGRAM button
- 4 PREV button
- 5 AUX IN jack
- 6 VOLUME dial
- 7 Headphone jack
- 8 STOP button
- 9 REPEAT button
- 10 PLAY/PAUSE button
- 11 TUNING dial
- 12 Display
- 13 Remote control sensor
- 14 CD compartment
- 15 OPEN button

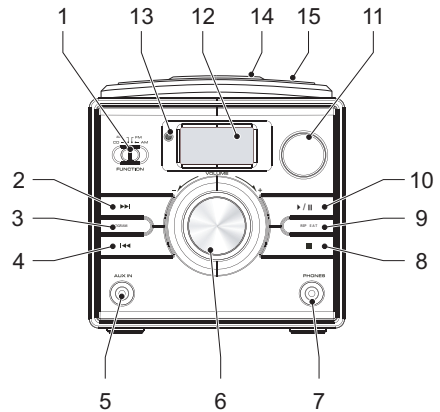


Back panel

 - 16 Master power switch

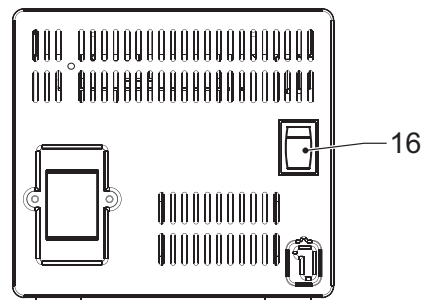

4.2 Remote control

 - 17 PROGRAM button
- 18 PLAY/PAUSE button
- 19 PREV button
- 20 REPEAT button
- 21 STOP button
- 22 NEXT button

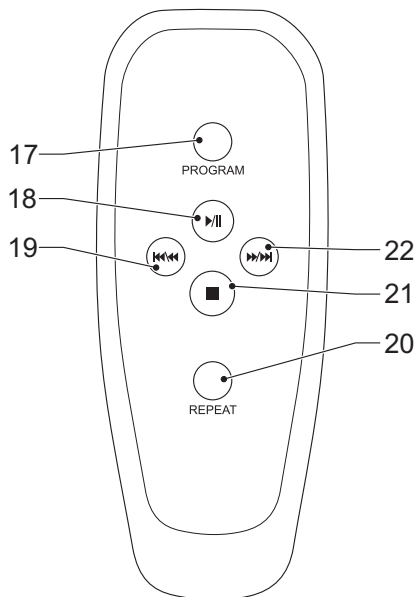

5. Operation

5.1 Master power switch

The appliance is equipped with a master power switch (16) located at the back panel.

- Set the switch into the ON position prior to taking the appliance into operation.
- Set the switch into the OFF position prior to disconnecting from the mains.



When the appliance is not in use, we recommend to switch the appliance off at the master power switch.

5.2 General functions

- To switch on the appliance, slide the switch (16) to the ON position.
To switch off the appliance, slide the switch (16) to the OFF position.
- To select the source mode (CD, AUX IN, AM, FM), slide the FUNCTION switch (1) to the desired position.
- To adjust the volume level, turn the VOLUME dial (6) until the desired level is set.
- To connect an external audio device, insert the cable plug in the AUX IN jack (5).
- To connect a headphone, insert the cable plug in the headphone jack (7).

5.3 Radio functions

- To select the radio band, slide the FUNCTION switch (1) to the AM or FM position.
- To select a frequency or radio station, turn the TUNING dial (11) until the desired frequency is set.



To improve the reception of the FM frequency, extend the aerial antenna. To improve the reception of the AM frequency, turn the appliance.

5.4 CD functions

- To select the CD function, slide the FUNCTION switch (1) to the CD position.
- To insert a CD:
 - Press the OPEN button (15) to open the CD compartment (14).
 - Insert the CD with the label upwards.
 - Close the CD compartment (14).

The display shows the total number of tracks on the CD.

- To start playback, press the PLAY/PAUSE button (10) once.

During playback, the following functions are available:

- To select a track, press the PREV button (4) or the NEXT button (2) until the desired track is set.
- To search for a specific point on the disc, hold the PREV button (4) or the NEXT button (2) until the point is reached and release the button.

- To pause playback, press the PLAY/PAUSE button (10) once. To resume playback, press the PLAY/PAUSE button (10) again.
- To stop playback, press the STOP button (8).



The CD functions can also be operated with the remote control.

Using the REPEAT function

- Press the REPEAT button (9) (during play) to repeat the current track.
- Press the REPEAT button (9) again to repeat all tracks.
- Press the REPEAT button (9) again to exit the function.

Using the PROGRAM function

To use the PROGRAM function for CD, the playback must be in STOP mode.

- To play a list of tracks (max. 20) in a program, press the PROGRAM button (3).
- Press the PREV button (4) or the NEXT button (2) to select a desired track.
- Press the PROGRAM button (3) to confirm the selection. Repeat the previous step to select more tracks and confirm every selection with the PROGRAM button (3).
- Press the PLAY/PAUSE button (10) to start the program.
- To play the program again, press the PROGRAM button (3) after the program has finished. Press the PLAY/PAUSE button (10) to start the program again.
- To view the program in stop mode, press the PROGRAM button (3).
- To stop the program during playback, press the STOP button (8) once.
- To delete the program during the playback, press the STOP button (8) twice.



A program is also deleted when the CD compartment is opened.

6. Cleaning and maintenance



WARNING

Before performing any cleaning or maintenance, switch off and unplug the appliance.

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.
- Clean the lens with a camera lens brush/blower (not included) if the lens is dirty.

6.1 Handle and care of a disc

- Hold the disc with fingers. Hold the disc outer edge and/or the centre spindle hole. Do not touch the disc surface.
- Do not bend or press the disc. Do not expose the disc to direct sunlight or heating sources.
- Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently, radially, from centre towards the outer edge.
- Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

7. Troubleshooting

Trouble	Action
No display	Switch on the appliance. Connect the appliance properly.
No sound	Select the correct function with the FUNCTION switch (1). Connect the appliance properly. Adjust the volume. Adjust tuning control. Check if the CD is inserted with the label upwards. Clean the lens.

MP3 playback

Trouble	Action
No sound or incomplete audio	If MP3 data is mixed with other files on CD, the appliance may play the non-MP3 files as noise or without sound or it rejects the disc. Check if the played file is in MP3 format or select another file to play.

Remote control (RC)

Trouble	Action
RC does not function	Check the battery installation. Point the RC at the remote control sensor. Stay within 8 metres of the appliance.

8. Technical data

Parameter	Value
Voltage	230 V _{AC} ~ 50 Hz
Power consumption	15 W
Max power output	2 x 1.0 W RMS
Headphones output impedance	32 Ω
Disc size	5"/3"
Radio bands	AM/FM
Dimensions (W x H x D)	140 x 129 x 194 mm
Weight	1.20 kg

Frequency range

Parameter	Value
AM radio	540 kHz - 1600 kHz
FM radio	88 MHz - 108 MHz

Speaker system

Parameter	Value
Impedance	8 Ω
Cabinet material	Wood
Wire length	180 cm
Dimensions (W x H x D)	120 x 129 x 125 mm
Weight	930 g

Remote control

Parameter	Value
Power consumption	2 x 1.5 V
Battery size	AAA

9. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: www.akai.eu