



www.brabantia-appliances.com | follow us on /brabantialife

# brabantia



## TECHNICAL DATA

220-240V~50/60Hz  
Power: 1800-2150W  
3 year guarantee  
Model number: BBEK1013KWH

## TECHNISCHE GEGEVENS

220-240V~50/60Hz  
Voeding: 1800-2150W  
3 jaar garantie  
Modelnummer: BBEK1013KWH

## SPÉCIFICATION

220-240V~50/60Hz  
Puissance : 1800-2150W  
3 ans de garantie  
Modèle : BBEK1013KWH

## TECHNISCHE DATEN

220-240V~50/60Hz  
Spannung: 1800-2150W  
3 Jahre Garantie  
Modellnummer: BBEK1013KWH

EN INSTRUCTION MANUAL  
CORDLESS KETTLE

NL HANDLEIDING  
SNOERLOZE WATERKOKER

FR NOTICE D'UTILISATION  
BOUILLIRE SANS FIL

DE BEDIENUNGSANLEITUNG  
SCHNURLOSER WASSERKOCHER

**EN**

## **IMPORTANT SAFEGUARDS**

1. Please read the following safety precautions carefully before switching the kettle on.
2. Keep this instruction manual in a safe place for future reference. Keep the sales receipt and, if possible, the gift box with the inner packaging.
3. Failure to follow all the instructions listed may result in electric shock, fire or serious personal injury.
4. Before plugging the kettle into the mains electrical supply, check that the voltage and power supply comply with the specifications indicated on the rating plate of the appliance.
5. Always place the kettle on a stable, flat, heat-resistant surface. Ensure that the surface can take the weight of the unit during use. Do not operate the kettle on an inclined plane.
6. The kettle is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. The kettle is intended for domestic use only and should not be used for commercial purposes. The kettle should only be used for its intended purpose which is to only boil water.
8. Always keep the kettle out of the reach of children. Close adult supervision is necessary when the kettle is used by or near children.
9. Do not leave the kettle unattended when in use.
10. Do not move or lift the kettle while it is operating or when it is connected to the mains electrical supply.
11. The use of attachments not specifically recommended by the manufacturer must not be used, as they may cause personal injury or damage to the appliance.
12. Care should be taken when using the kettle as it reaches very high temperatures.
13. Do not operate the kettle if the plug or power cord has been damaged or if the kettle is not working properly or has been dropped.
14. Check the kettle's power cord regularly for damage. If the power cord is damaged in any way, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid an electrical hazard.
15. Do not allow the power cord to hang over sharp edges or come into contact with hot surfaces.

16. Make sure that the kettle is switched off and remove the plug from the mains electrical supply when it is not in use, before it is cleaned and while it is being repaired.
17. To prevent the risk of electrical shock, do not immerse the power cord, plug, or any non-removable parts of this kettle in water or any other liquid.
18. The kettle must not be submerged in water as any contact with the electrical parts will create a malfunction and/ or an electric shock. Never use the appliance with damp or wet hands.
19. Avoid spilling liquids onto the connector. There is the potential for injury to occur from misuse of product.
20. Do not use the kettle outdoors.
21. To unplug the appliance, grasp the plug firmly and remove it from the mains electrical supply. Do not pull on the cord.
22. Never use the kettle if it is damaged in any way.
23. All repairs should be done by a qualified electrician. Improper repairs may place the user at risk.
24. When handing this kettle over to a third party, ensure that this instruction manual is supplied with the appliance.

## KNOW YOUR CORDLESS KETTLE



- 1: Spout
- 2: Base station
- 3: Lid
- 4: Lid opener

- 5: Handle
- 6: Water level
- 7: On/ off switch

## **BEFORE FIRST USE**

### **NOTE:**

1. The kettle must only be used with the supplied power base.
2. Remove all the packaging material.
3. Place the power base on a dry level surface.
4. The kettle must be washed and rinsed thoroughly before first use.

## **USING THE CORDLESS KETTLE**

1. Place the kettle on a flat surface.
2. Press the lid opener (4) on the handle to open the kettle. Fill the kettle with water as per the water level indicator. Do not overfill the kettle. The filled water capacity must be in between the 1.7L (MAX) and 0.5L (MIN). If the kettle is overfilled boiling water may be ejected.
3. Close the lid by releasing the lid opener on the kettle. Place the kettle flush on the base.

### **Electrical connection**

4. Switch the kettle on using the on/ off switch. The indicator light will illuminate.
5. The kettle will switch off automatically when the water is boiled.
6. Disconnect the kettle from the main power supply.
7. Always hold the lid closed when pouring water.

**CAUTION:** Beware of scalding!

**CAUTION:** Heating element surface is subject to residual heat after use.

## **DESCALING**

"Furring" is a common problem in hard water areas, therefore the kettle should be regularly descaled.

1. To descale, fill the kettle with 1L cold water and add approximately 75ml vinegar.
2. Boil the water and allow it to stand overnight.
3. Re-boil the water the next day.
4. Discard the re-boiled water and refill the kettle with fresh water.
5. Boil the fresh water. This boiled water must also be discarded.

**NOTE:** Normal commercial descalers for kettles may also be used. Follow the commercial descaler instructions carefully.

## **CLEANING AND MAINTENANCE**

1. Remove the mains plug from the mains electrical supply before cleaning.
2. Do not immerse the kettle in water or any other liquid.
3. Avoid the use of solvents, polish, abrasives or aerosol cleaners as they may damage the surface of the kettle.
4. Clean the exterior by wiping with a slightly dampened soft cloth.
5. The inside of the kettle may be cleaned using a mild detergent. It must be thoroughly rinsed before use.
6. The removable mesh filter prevents scale from falling into your cup when pouring. This filter neither treats nor removes the hardness of the water. Never remove the filter when the kettle is full of hot water.
7. It is important to clean the filter regularly.
8. Remove the filter and place it under a running tap while wet. Dry and gently brush the filter before re-inserting it into the spout.

NOTE: Make sure that the kettle is thoroughly dried before reconnecting it to the mains electrical supply.

## **SPECIFICATIONS**

Rated voltage/ Frequency: 220-240V~50/60Hz

Rated power: 1800-2150W

Capacity: 1.7L

## **WARRANTY EXCLUSIONS**

THE WARRANTY WILL ONLY BE VALID IF THE PRODUCT IS RETURNED WITH A PROOF OF PURCHASE TILL SLIP AND ORIGINAL PACKAGING.

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
2. The product has been used for any purpose other than its intended function.
3. The damage or malfunction of the product is caused by any of the following:
  - Incorrect voltage
  - Accidents (including liquid or moisture damage)
  - Misuse or abuse of the product
  - Faulty or improper installation
  - Mains supply problems, including power spikes or lightning damage

- Infestation by insects
- Tampering or modification of the product by persons other than authorised service personnel
- Exposure to abnormally corrosive materials
- Insertion of foreign objects into the unit
- Usage with accessories not pre-approved by Brabantia

Please refer to and heed all warnings and precautions in the instruction manual.

Due to continuous product development, specifications may be subject to change without prior notification.

## **ENVIRONMENT FRIENDLY DISPOSAL**



This marking indicates that this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material resources. To dispose of your appliance correctly, please contact or take it to your local refuse/recycling centre. Alternatively, contact your local council for information on your local re-use centre.



Should you experience any technical difficulty in setting up or using your new product, please feel free to contact our dedicated customer service help desk.

For Customer from Netherlands and Belgium please contact Elmarc B.V.

**Elmarc B.V.**

Kolenbranderstraat 28

2984 AT Ridderkerk

Tel: (NL) 09003555333

(BE) 070355505

E-mail: [helpdesk@elmarc.nl](mailto:helpdesk@elmarc.nl)

Wishing you many years of pure pleasure with your new Brabantia appliance.