


OBS1040-BL
Bluetooth Speaker



1 Check the contents

Controleer de inhoud
Kontrollieren Sie den Inhalt
Vérifiez le contenu
Revise el contenido
Kontroller indholdet
Tarkista sisältö

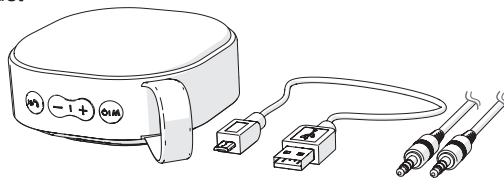



2 USB connection to charge device

USB aansluiting om apparaat te laden
USB-Anschluss, um Gerät zu laden
Connexion USB pour charger un appareil
Conexión USB para cargar el aparato
USB til at lade apparatet op
USB-liitäntä laitteen lataamista varten



3 Main parts


Belangrijkste onderdelen
Hauptkomponenten
Pièces principales
Partes principales
Hoveddele
Pääosat

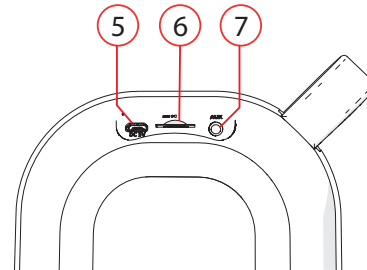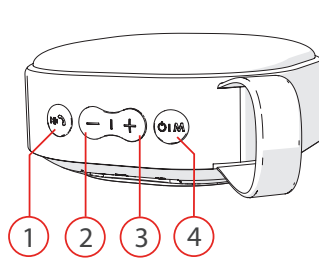

1	PLAY/PAUSE/CALL
2	VOLUME DOWN/PREVIOUS
3	VOLUME UP/NEXT
4	POWER/MODE
5	MICRO USB
6	MICRO SD SLOT
7	AUX IN


4 Turn on the device

Schakel het apparaat in
Schalten Sie das Gerät ein
Mettez l'appareil en marche
Encienda el aparato
Tænd for apparatet
Kytke laite toimintaan

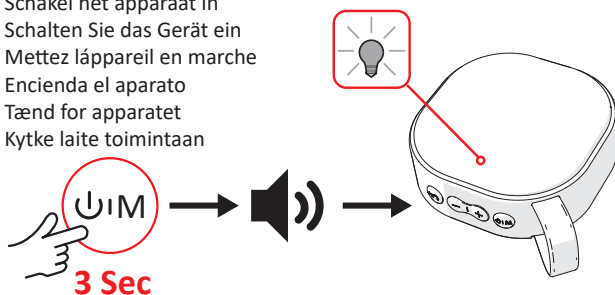

5 Bluetooth connection

Bluetooth verbinding
Bluetooth-Verbindung
Connexion Bluetooth
Conexión Bluetooth
Bluetooth tilslutning
Bluetooth-yhteys

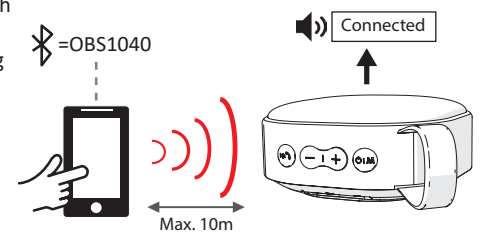


6 Play/pause

Afspelen/pauzeren
Wiedergabe/pause
Lecture/pause
Jugar/pausar
Spille/pause
Pelata/tauko



7 Select a song


Selecteer een nummer
Wählen Sie einen Song
Sélectionnez une chanson
Selecciona una canción
Vælg en sang
Valitse kappale

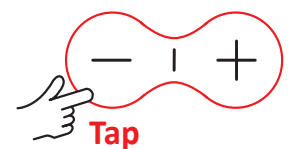

8

Adjust the volume


Pas het volume aan
 Passen Sie die Lautstärke an
 Régler le volume
 Ajuste el volumen
 Indstil volumen
 Säädä äänen voimakkuutta

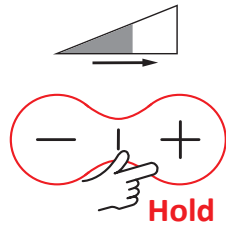

9

Answer incoming calls


Inkomende oproepen beantwoorden
 Beantworten Sie eingehende Anrufe
 Répondre aux appels entrants
 Responda las llamadas entrantes
 Besvar indgående opkald
 Vastaa tuleviin puheluihin

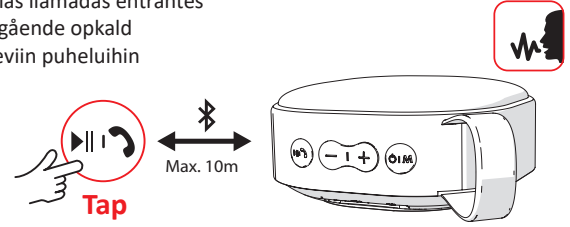

10

Switch between modes


Schakelen tussen modi
 Wechseln zwischen den Modi
 Basculer entre les modes
 Alternar entre modos
 Skift mellem tilstande
 Vaihtaa tilat

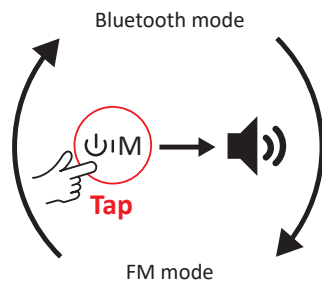

11

FM mode

FM-modus
 FM-modus
 Mode FM
 Modo FM
 FM-modus
 FM-tilaan

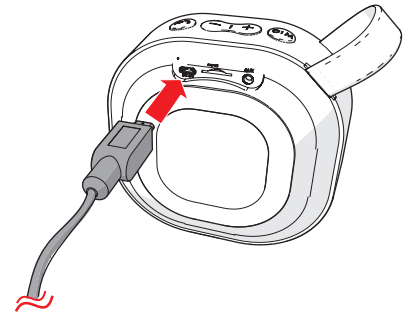


! FM mode only works with charging cable as antenna

12

Adjust the frequency manually


Handmatig frequentie aanpassen
 Frequenz manuell anpassen
 Régler manuellement la fréquence
 Ajustar frecuencia manualmente
 Frekvensen justeres manuelt
 Säädä taajuus käsin

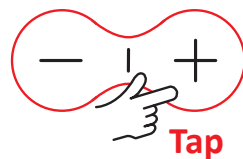

OR

Adjust the frequency automatically


Pas automatisch de frequentie aan
 Ändern Sie die Frequenz automatisch
 Adaptez la fréquence automatiquement
 Ajuste automático de frecuencia
 Indstil frekvensen automatisk
 Säädä taajuus automaattisesti

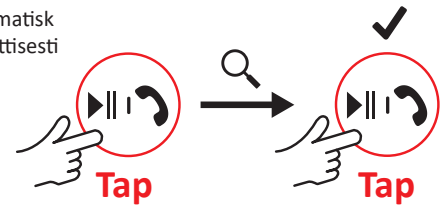

13

AUX in for external devices

AUX IN voor externe apparaten
 AUX IN für externe Geräte
 AUX IN pour appareils externes
 Conexión AUX IN para dispositivos externos
 AUX IN til eksterne apparater
 AUX IN -liitäntä ulkoisille laitteille

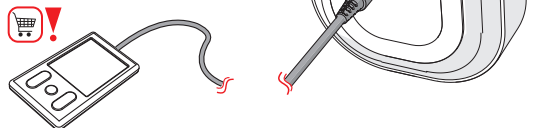

14

Insert a microSD card

Plaats een microSD kaart
 Legen Sie eine microSD-Karte ein
 Introduisez une carte microSD
 Inserte una tarjeta microSD
 Indsæt et microSD-kort
 Aseta microSD-kortti



Specifications

Speaker output: 3W
 FM Radio:
 87,5-108 MHz
 MicroSD
 AUX IN
 Micro USB
 Bluetooth: max. 10m
 Battery: 3h
 Weight: 157 g
 Dimensions:
 84x84x40 mm
 Warranty: 24 months

Specificaties

Luidspreker output: 3W
 FM Radio:
 87,5-108 MHz
 MicroSD
 AUX IN
 Micro USB
 Bluetooth: max. 10m
 Batterij: 3h
 Gewicht: 157 g
 Afmetingen:
 84x84x40 mm
 Garantie: 24 maanden

Technische Daten

Lautsprecher-Output: 3W
 FM Radio:
 87,5-108 MHz
 MicroSD
 AUX IN
 Micro USB
 Bluetooth: max. 10m
 Batterie: 3h
 Gewicht: 157 g
 Abmessungen:
 84x84x40 mm
 Garantie: 24 Monate

Spécifications

Sortie haut-parleur: 2x3W
 Radio FM:
 87,5-108 MHz
 MicroSD
 AUX IN
 Micro USB
 Bluetooth: max. 10m
 Batterie: 3h
 Poids : 157 g
 Dimensions :
 84x84x40 mm
 Garantie: 24 mois

Especificaciones

Salida-altavoz: 3W
 Radio FM:
 87,5-108 MHz
 MicroSD
 AUX IN
 Micro USB
 Bluetooth: max. 10m
 Batería: 3h
 Peso: 157 g
 Dimensiones:
 84x84x40 mm
 Garantía: 24 meses

Spesifikationer

Højtaler-output: 3W
 FM-radio:
 87,5-108 MHz
 MicroSD
 AUX IN
 Micro USB
 Bluetooth: max. 10m
 Batteri: 3h
 Vægt: 157 g
 Dimensioner:
 84x84x40 mm
 Garanti: 24 måned

Tekniset tiedot

Kaiutinlähde: 3W
 FM-radio:
 87,5-108 MHz
 MicroSD
 AUX IN
 Micro USB
 Bluetooth: max. 10m
 Akku: 3h
 Paino: 157 g
 Mitat:
 84x84x40 mm
 Takuu: 24 kuukautta