




MANUAL

WATER COOKER

MODEL: DSWK30AT

MANUAL
WATER COOKER
MODEL: DSWK30AT

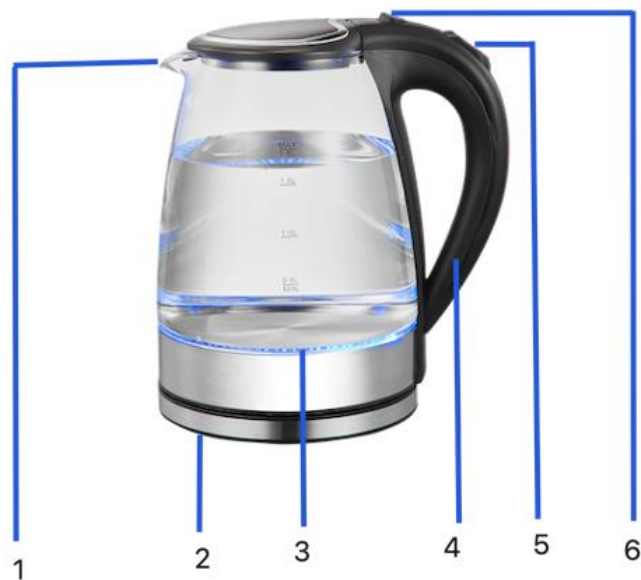

1. Spout
2. Base
3. Pilot lamp
4. Handle
5. ON/Off switch
6. Button for opening lid



This appliance is only to be used for domestic purposes and not for professional use.

Power: 1500W

Voltage AC: 230V/50Hz



Certain parts of this appliance can become hot. Do not touch these parts to prevent any burning.

Do not open the lid while the water is boiling!

SAFETY INSTRUCTIONS



General information

- Read these instructions carefully and keep them in a safe place.
- Only use the appliance as described in this instruction manual.
- Any damage caused by failure to observe this instruction manual will immediately void the warranty. The manufacturer/importer accepts no liability for damages caused by failure to observe this instruction manual, careless use of the appliance or use that is not in accordance with the instructions set out in this instruction manual.
- Keep the appliance out of the reach of children.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities (including children), or anyone lacking sufficient knowledge or expertise, unless supervised by or following instruction from someone responsible for their safety.
- Keep the appliance and its cord out of reach of children below the age of 8 years.
- Children must be strictly supervised to prevent them from treating the appliance like a toy.
- Do not allow unsupervised children to clean or maintain this appliance.
- Always remove the plug socket and allow the appliance to cool down:

- before moving the appliance; before storing the appliance;
- before assembling or disassembling parts;
- before cleaning the appliance or performing maintenance;
- after using the appliance.
- Repairs may only be carried out by a qualified service centre.
Qualified service centre: the manufacturer's or importer's after-sales service department, which is authorized and competent to perform such repairs so that any danger is avoided. In the event of any problems, please return the appliance to this department.



Electricity and heat:

- Before use, check that the mains power voltage is the same as the voltage indicated on the appliance.
- Always plug the appliance into an earthed plug socket.
- Regularly check the power cord for damage.
- Do not use the appliance if the power cord is damaged. Have a damaged power cord replaced by a qualified service centre.
- Do not use any appliance with a damaged cord or plug or after the appliance has shown signs of defects, has fallen or has been damaged in any way. Return the appliance to the manufacturer or the nearest qualified service centre for inspection, repairs or electrical or mechanical modifications.
- Always remove the plug from the power socket before moving the appliance.
- Do not operate the appliance by means of an external time switch or a separate remote control system.
- If an extension lead is required, use a 10 amp cord. Power cords with a lower amp rating may burn out. When positioning the power cord, make sure that it cannot be pulled on or tripped over.
- Avoid overloading by not connecting too many appliances to a group.
- Do not use any other high power appliances in the same group, to avoid overloading.
- Never immerse the appliance, the plug or the housing in water or other liquids, to avoid the risk of electric shock.
- Do not touch the appliance if it has fallen into water. Remove the plug from its socket, turn off the appliance and do not use it again.

- Do not use the appliance close to sources of heat, such as a stove or oven.

General use and warnings:

- This appliance is intended for domestic and similar use.
- Only use this appliance indoors, in dry areas away from water
- Never immerse the appliance or the plug in water or any other liquid. This may result in a fatal electric shock!
- Do not use the appliance outdoors or on wet surfaces, to avoid the risk of electric shock.
- Place the appliance on a stable, level surface from which it cannot fall onto the floor.
- Place the appliance on a heat-resistant surface and not, for example on varnished furniture.
- Place the appliance at least 50 cm from a wall or inflammable materials(such as curtains, candles or cloths).
- Place the appliance on a stable and flat surface, not too close to hot objects or naked flames(such as stovetops or hotplates).
- Remove the plug from its socket when the appliance is not in use and for cleaning.
- Do not allow the power cord to hang over sharp edges and keep it away from hot objects and naked flames.
- Never use the appliance if the power cord or plug show any signs of damage, if the appliance has fallen on the ground or in the event of any other form of damage. In such cases, take the appliance to a qualified person for inspection and, if necessary, have it repaired.
- Never allow unsupervised children to use electrical household appliances. Children are unable to assess the dangers associated with the incorrect use of electrical appliances.
- Children who are close to the appliance or who are using it must always be kept under adult supervision.
- Never leave the appliance unattended whilst it is in use.
- The kettle is intended for boiling water only. Do not use for other fluids or solutions.
- Only pick up the appliance by its handle, certain parts of the appliance become hot during use. You may suffer a serious burn if you touch hot parts of the appliance.
- Pay attention to steam and hot water during use.

OPERATION

This cordless kettle quickly brings 1.8 liter of water to a boil. The kettle is equipped with an indicator lamp, a thermostat and a boil-dry protection.

First time use:

- Remove all packaging from the appliance.
- Clean the appliance according the chapter: 'Cleaning and Maintenance'.
- First boil a full jug of water in accordance with the procedure in 'Using the appliance', in order to clean the jug.
- Dispose of the boiled water. If you then refill the kettle with water, the boil-dry protection cools down and the kettle is again ready for normal use.
- Continue with the procedure in 'Using the appliance'.

Using the appliance:

- Use the kettle only with the supplied base.
- Remove the kettle from its base, to avoid spilling water on the base during filling.
- Open the lid by pressing the button on the handle and keep it pressed down.
- Fill the kettle between the minimum and maximum mark. Too little water will result in the kettle switching off prematurely, and too much water may result in the kettle boiling over
- Close the lid.
- Place the jug on the base.
- Insert the plug in to the mains power socket.
- Switch the appliance on by pressing the on/off switch on handle. The lamp around the base of jug will light. The kettle will switch off automatically as soon as the water boils.
- If desired, boil the water slowly, so that any limescale particles remain behind on the limescale filter in the pouring opening. If the kettle is accidentally switched on whilst empty, the boil-dry protection will automatically switch off again.
- Remove the plug from the mains power socket

Warning! If the kettle is filled above the maximum level, boiling water may splash out

CLEANING AND MAINTENANCE

Clean after every use the appliance and each separate part.

- **Warning:** Before cleaning the appliance, always switch it off, unplug it from the electricity supply and allow it to cool down completely.
- Do not clean the appliance with an aggressive or abrasive cleaner or with a sharp object, such as a hard brush or a knife.
- Clean the exterior of the jug with a damp cloth
- Always clean the base with a dry cloth.



Never immerse the kettle in water or any other liquid and the kettle. must **not** be cleaned in the dishwasher. Regularly descale the appliance. Depending on the hardness of the water, scale deposits may become attached to the inside of the appliance. The harder the water, the more often it is necessary to descale the appliance.

Please note!

Descaling:

- Use a descaling product intended for household appliances (such as coffee makers).
- Follow the instructions on the package.
- Do not switch on the kettle during decaling. The descaler should be applied in cold water.
- After descaling rinse the kettle a few times with the clean water.

Storage:

- Store the appliance in a dry place.

GUARANTEE CONDITIONS

This product has a 24 month guarantee. Your guarantee is valid if the product is used in accordance with the instructions in this user manual and for the purpose for which it is intended. The original purchase receipt (invoice, till receipt or bill) showing the date of purchase, the name of the seller/retailer and the item number of the product must also be submitted. The guarantee only applies to faults arising from manufacturing and/or material defects and is subject to the following

conditions. Repairs carried out under guarantee do not extend the guarantee period.

- 1) Within the stated guarantee period no charge will be made for labor or material costs, provided the fault is due to a manufacturing and/or material defect.
- 2) Defective parts or a defective machine, in the event of exchange, automatically become the property of the manufacturer.
- 3) Guarantee claims must be made by the store from which the appliance was purchased.
- 4) The guarantee applies exclusively to the initial purchase and is non-transferable.
- 5) The guarantee does not apply to damage caused by:
 - a. accidents, incorrect use wear and tear and/or neglect;
 - b. incorrect installation and/or use which is contrary to current statutory, technical or safety standards;
 - c. connection to mains voltage which is different to that stated on the name plate of the appliance;
 - d. an unauthorized adaptation;
 - e. a repair carried out by third parties;
 - f. careless transport without suitable packaging and/or protection.
- 6) No claim can be made against these guarantee provisions in the event of:
 - a. Losses occurring during transport;
 - b. In the removal or alteration of the appliance's serial number.
- 7) Excluded from the guarantee are cables, lights, glass and parts subject to wear and tear.
- 8) The guarantee provides no rights whatsoever to reimbursement for any damage other than the repair or replacement of the defective components. The manufacturer cannot be held liable for any consequential damage or any other consequences arising due to or in relation to the equipment supplied by it.
- 9) Never return anything for guarantee or service. The package may be refused and you will be liable for any costs. Instead, contact your retailer and they will tell you how to package and send the appliance.



INSTRUCTIONS FOR THE PROTECTION OF THE ENVIRONMENT
(WEEE, the waste electrical and electronic equipment directive)



Your product has been manufactured from high quality materials and components which can be recycled and used again. At the end of its life, this product can **not** be disposed of in normal domestic waste, but must be taken to a special collection point for the recycling of electrical and electronic equipment. The waste container marked with a cross symbol on the item, in the user manual and on the packaging informs you of this. The raw materials used are suitable for recycling.

By recycling used appliances or raw materials you are making an important contribution to the protection of our environment. You can find out the location of your nearest collection point from your local council.