



USER'S GUIDE

Focus TAG

Works with FOCUS86 Wi-Fi® Home Video Camera

The features described in this guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Focus TAG!

Thank you for purchasing your new Motorola Focus TAG.

Focus TAG is a BLE device that works as a motion sensor and a presence detector. It is designed as an external sensor for FOCUS86 Wi-Fi® Home Video Camera. If you have always wondered what happens when you are away, wonder no more. Now you can monitor your children, pets or property with this easy to use device. You can install Focus TAG from your iPhone®/iPad® or Android™ devices and receive alerts from your PC or Notebook, as well as from your iPhone®/iPad® or Android™ devices.

Please keep your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

Tel: +49 (0) 1805 938 802 (Europe) E-mail: motorola-mbp@tdm.de Web: www.motorolahome.com/support

This User's Guide has all the information you need to make the most out of your product.

Please read the Safety Instructions on page 4 before you install the unit.

Inside the Box

- 1 x Focus TAG
- · 1 x CR2032 Battery Cell
- · 1 x Focus TAG Opener
- 1 x Battery Door
- · 1 x Quick Start Guide



Table of contents

5 5
6
6
7
8
8
9
9
10
. 10
10
. 11
16



1. Safety Instructions

WARNING

This product is compliant with all relevant electromagnetic field standards and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device

- Adult assembly is required due to small parts. Keep all small parts away from children.
- This product is not a toy. Do not allow children to play with it.
- This product is not a substitute for responsible adult supervision.
- · Keep this User's Guide for future reference.
- Test the product and all its functions so that you are familiar with it prior to
 use.
- Do not install the product near a heat source.
- Only use a battery of the same type. This product uses a replaceable battery (CR2032).
- Do not touch the battery contacts with sharp or metal objects.

CAUTION

There is danger of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to their instructions.

Important guidelines for installing your Focus TAG

- Use of other 2.4 GHz products, such as other wireless networks, Bluetooth® systems or microwave ovens may cause interference with this product. Keep the Focus TAG away from these types of products, or turn them off if they appear to be causing interference.
- · Always ensure that you have a good Wi-Fi® connection available.



2. How it works

As a motion detector

 
Stick Focus TAG on a door or window. When the door or window moves, Focus TAG will send an alert to FOCUS86, which will then send an alert to your AndroidTM or iOS device.

As a presence sensor

Place Focus TAG inside an object, such as a school bag. When your child leaves home with the school bag, FOCUS86 will stop to receive signals from Focus TAG. After about 1 minute, FOCUS86 will send an alert to your Android $^{\mathsf{TM}}$ or iOS device notifying you that your child has left home.

When your child returns home with the school bag, FOCUS86 will start to receive signals from Focus TAG. You will then receive an alert from FOCUS86 notifying you that your child has reached home.

3. Overview of Focus TAG



PAIR button	 Press and hold for 5 seconds to pair Focus TAG with your AndroidTM or iOS device.
LED light	Flashes in blue when Focus TAG is in registration mode.

How it works 5



4. Getting Started

4.1 Install Battery

The device uses a replaceable battery (CR2032).

Battery Life

The average battery life is up to 6 months. You will receive alerts via Hubble App when the batteru is low.

- 1. Remove the battery cover using the supplied opener.
- 2. Slip the opener into the slot on the back of Focus TAG.



Gently twist the opener to pop open the cover. Once the cover starts to open, work your way carefully around the cover until it pops off.



6 Getting Started



 Insert the battery (model: CR2032) with positive pole (+) facing upwards into the battery compartment.





- Position the back cover over the battery compartment and press down around the edges until you hear it click into its place.
- 6. Focus TAG powers on automatically when the battery is installed correctly.

4.2 Power On

Focus TAG powers on automatically when the battery is installed correctly.

Getting Started /



5. Add Focus TAG as a Motion Sensor

- Make sure that you have correctly installed the battery on Focus TAG. (see "Install Battery" on page 6)
- 2. Run Hubble for Motorola Monitors App on your Android™ or iOS device.
- Press and hold the PAIR button on Focus TAG for 5 seconds to begin pairing it with your Android™ or iOS device. (see "Overview of Focus TAG" on page 5 for the location of the PAIR button)
- 4. Select your FOCUS86 Camera.
- 5. Tap to select **Door motion sensor**.
- 6. Enter a name for Focus TAG, such as Front Door, Backyard Door, Bedroom Window, and tap **Continue**.
- Stick Focus TAG to the door.
 Ensure that the door is closed and the distance between the door and FOCUS86 Camera is not more than 91 metres.
- 8. Continue appears at the bottom of the screen and you must click Continue to move on.
- 9. It will take a few minutes to check if motion sensing by Focus TAG can be read by your FOCUS86 Camera.
 - A green tick appears when set up completes successfully.
- 10. If setup fails, tap **Retry** and repeat the steps starting from step 1.
- 11. To activate motion sensing, tap ACTIVATE NOW.

Note

The coverage area for movement detection is approximately 91 metres (300 feet) between FOCUS86 Camera and Focus TAG.

There is a 30-second cool off period after a movement is detected.

There are 5 sensitivity options for movement detection, where "High" is the most sensitive and "Low" is the least sensitive.

5.1 Add another Focus TAG

You can pair up to 5 Focus TAGs with your FOCUS86 Camera in your Hubble Account.

To add another Focus TAG, repeat the steps in 5. "Add Focus TAG as a Motion Sensor".



6. Add Focus TAG as a Presence Detector

- Make sure that you have correctly installed the battery on Focus TAG. (see "Install Battery" on page 6)
- 2. Run Hubble for Motorola Monitors App on your Android™ or iOS device.
- Press and hold the pair button on Focus TAG for 5 seconds to begin pairing it with your Android™ or iOS device.
- 4. Select your FOCUS86 Camera.
- 5. Tap to select **Presence detection**.
- Put Focus TAG inside the object that you wish to track. Ensure that the distance between the object and FOCUS86 Camera is not more than 91 metres (300 feet).
- 7. Enter a name for Focus TAG, such as Amy's school bag and tap Continue.
- 8. Wait for about 10 seconds for Focus TAG to complete setup.
- It will take a few minutes to check if presence detection by Focus TAG can be read by your FOCUS86 Camera.
 A green tick appears when set up completes successfully.
- 10. If setup fails, tap **Retry** and repeat the steps starting from step 1.
- 11. To activate presence detection, tap ACTIVATE NOW.

Note

The coverage area for presence detection is approximately 91 metres (300 feet) between FOCUS86 Camera and Focus TAG.

There is a 1 minute delay before a notification will be sent to you when the target object moves out or returns to the coverage area.

6.1 Add another Focus TAG

You can pair up to 5 Focus TAGs with your FOCUS86 Camera in your Hubble Account. To add another Focus TAG, repeat the steps in 6. "Add Focus TAG as a Presence Detector".



7. Using Focus TAG

Presence detection	You will receive alerts on your Android TM or iOS device when the object in which you have placed Focus TAG leaves your house or returns.
Motion sensor	You will receive alerts on your Android™ or iOS device when the door or window on which you have fixed Focus TAG moves.

8. Unpair Focus TAG with your Android™ or iOS Device

- 1. Run Hubble App on your Android™ or iOS® device.
- If you have more than one camera installed, select a camera from the camera list.
- Tap to display a list of Focus TAG currently paired with your Android™ or iOS® device.
- 4. Select the Focus TAG that you wish to remove and tap 📆.

9. Reset Focus TAG

To reset Focus TAG, simply remove the battery and insert it back again. See 4.1 "Install Battery".

10 Using Focus TAG



10. General Information

If your product is not working properly....

- 1. Read this User's Guide.
- 2. Visit our website: www.motorolahome.com/support
- 3. Contact Customer Service at

+49 (0) 1805 938 802 (Europe)

E-mail: motorola-mbp@tdm-de

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International Ltd ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product is manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts.



What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FILL EXTENT THESE DAMAGES MAY BE DISC! AIMED BY I AW

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.



Products Covered	Length of Coverage
Consumer Products	Two (2) years from the date of the
	Products, original purchase by the first
	consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the
	Accessories, original purchase by the
	first consumer purchaser of the
	product.
Consumer Products and Accessories	The balance of the original warranty or
that are Repaired or Replaced	for Ninety (90) days from the date
	returned to the consumer, whichever is
	longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorised service centres, are excluded from coverage.



Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

+49 (0) 1805 938 802 (Europe)

E-mail: motorola-mbp@tdm-de

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorised Repair Centre.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.



BINATONE Electronics International Ltd.

Floor 23A, 9Des Voeux Road West, Sheung Wan, Hong Kong. Tel: +852 28027388 Fax: +852 28028138 Website: www.binatonetelecom.com



EC Declaration of Conformity

We the manufacturer / Importer: BINATONE Telecom PLC

1 Apsley Way, London, NW2 7HF, UK

Declare under our sole responsibility that the following product

2.4Ghz low power device Type of equipment:

the European Community Directive 2006/95/EC relating to Electrical Safety.

Model Name: Focus Tag Country of Origin: China Brand: Motorola

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to Radio Spectrum Matters, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC) and

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

Applicable standards:

EN 301 489-1 V1.9.2:2011 EN 301 489-17 V2.2.1:2012 EN 300 328 V1 8 1:2012 EN 62311-2010

EN 50360:2001/A1:2012

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

Manufacturer / Importer (signature of authorized person)







Position: Product Manager Full Name: Henry Leung Date: 26 Oct 15



11. Technical Specifications

Frequency	2.4Ghz Radio
Transmission range	Up to 50 metres
Power	CR2032 Battery Cell

Technical Specifications



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylised M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. Apple logo and Safari are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., Google Play, Android, and Chrome are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. All other trademarks are the property of their respective owners. © 2015 Motorola Mobility LLC. All rights reserved.

