

Quickstart guide

NDB30
DAB radio

N|I|K|K|E|I





- (EN) For more information see www.nikkei.eu
- (NL) Voor meer informatie zie www.nikkei.eu
- (DE) Für weitere Informationen siehe www.nikkei.eu
- (FR) Pour plus d'informations, veuillez consulter le site www.nikkei.eu
- (ES) Para más información, visite www.nikkei.eu
- (DK) For mere information besøg www.nikkei.eu
- (FI) Lisätietoja löydät osoitteesta www.nikkei.eu



1 Check the contents


Controleer de inhoud
Kontrollieren Sie den Inhalt
Vérifiez le contenu
Revise el contenido
Kontroller indholdet
Tarkista sisältö

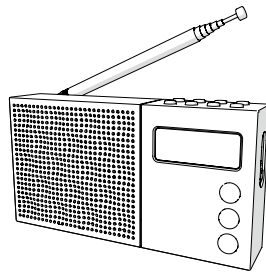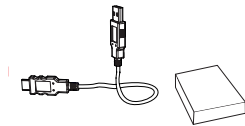

2 The buttons


De knoppen
Die Tasten
Les boutons
Los botones
Knapperne
Painikkeet

1	MODE
2	ALARM
3	PRESET
4	MENU/INFO
5	SCAN
6	SELECT
7	PREV
8	NEXT
9	VOL +
10	VOL -
11	ON/STAND-BY

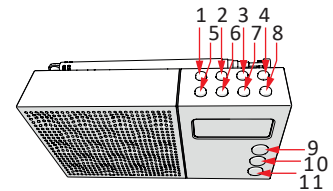


3 Insert the batteries/connect to the mains

Plaats de batterijen / Sluit op het lichtnet aan
Legen Sie die Batterien ein / Schließen Sie Netzspannung an
Placez les piles / Raccordez au réseau électrique
Coloque las pilas / Conecte a la red eléctrica
Sæt batteriet i / Tilslut til lysnettet
Paristojen asettaminen / Kytke verkkovirtaan

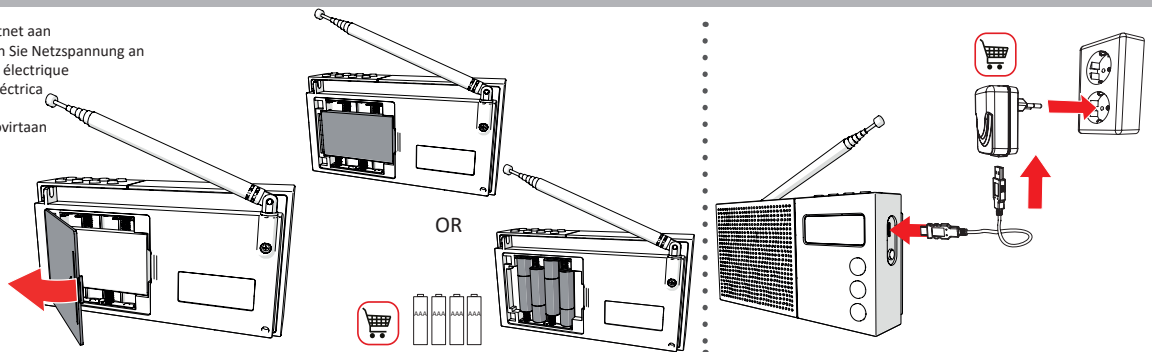


4 Turn the radio ON

Zet de radio aan
Radio einschalten
Allumez la radio
Encender la radio
Tænd for radioen
Kytke radioon virta

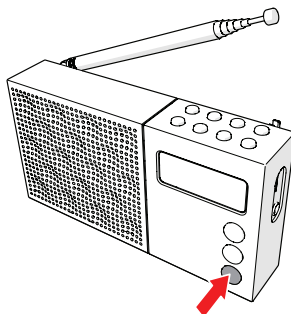

5 The Mode Button


De Mode knop
Mode-Taste
Bouton Mode
Bouton Mode
Mode-knappen
Mode-painike

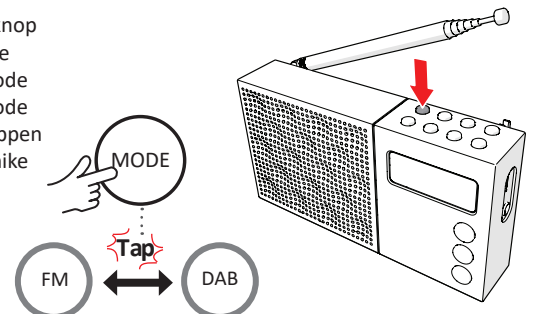

6 Save a radiostation into the memory

Radiosender opslaan in het geheugen
Radiosender im Speicher speichern
Enregistrer la station de radio dans la mémoire
Guardar una emisora de radio en la memoria
Radiosender gemmes i hukommelsen
Tallenna asema muistiin


MAX. 10

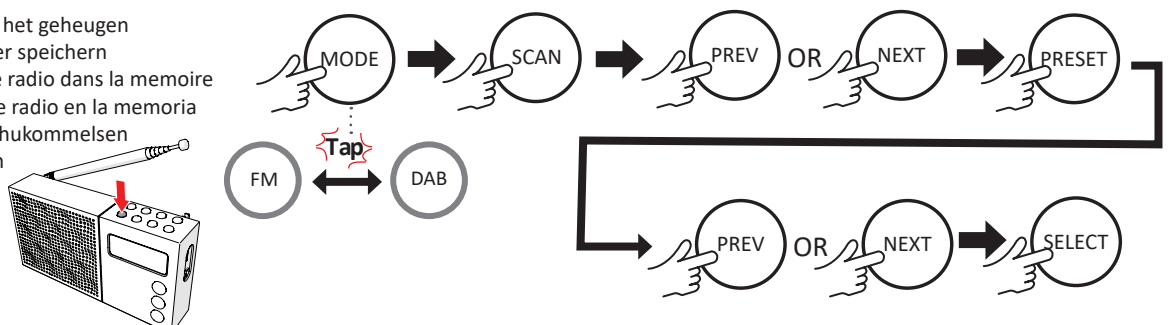

7

Setting the alarm

Het alarm instellen
 Wecker einstellen
 Régler l'alarme
 Ajustar despertador
 Alarmen indstilles
 Herätyksen säätö

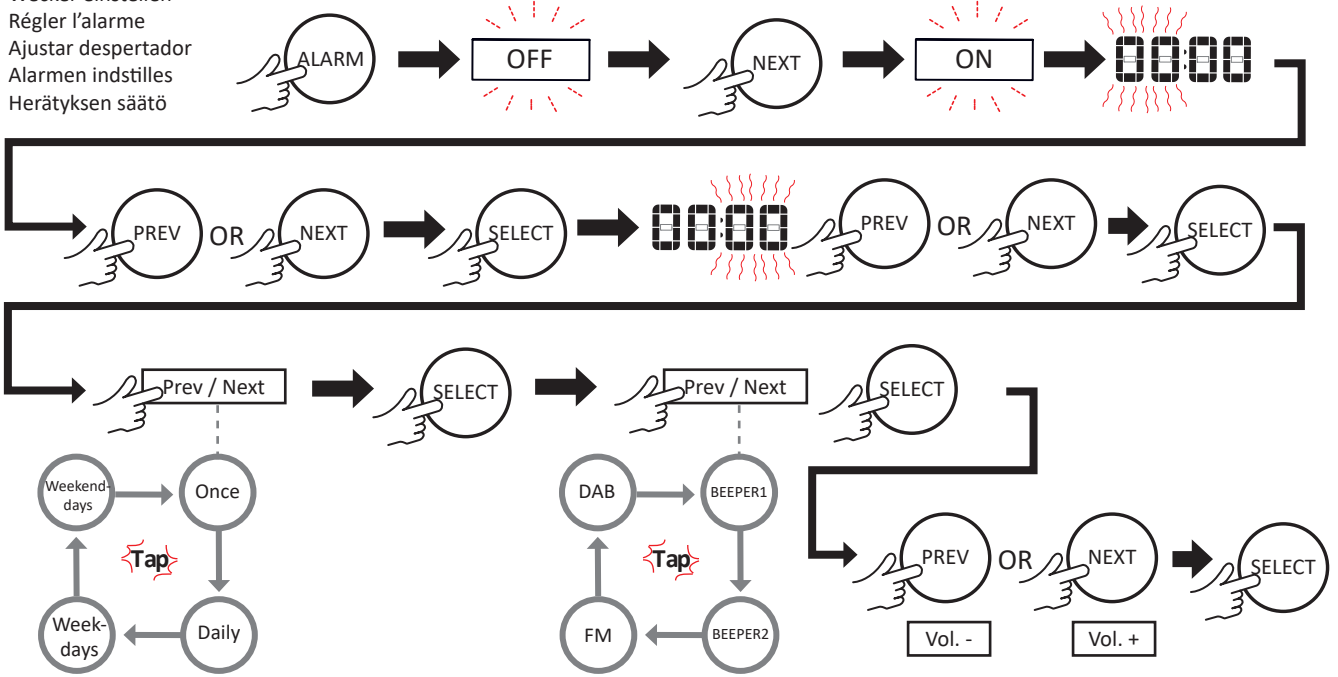

8

Setting the alarm on


Het alarm aan- of uitzetten
 Wecker ein- oder ausschalten
 Mettre en/hors service l'alarme
 Activar/desactivar despertador
 Alarmen slås til eller fra
 Herätyksen kytchentä päälle/pois



9

Switching the alarm Off or Snooze


Het alarm uitzetten of uitstellen
 Wecker abstellen oder ausschalten
 Débrancher ou postposer l'alarme
 Apagar o posponer el despertador
 Alarmen slås til eller slås fra
 Herätyksen kuittaus tai torcku

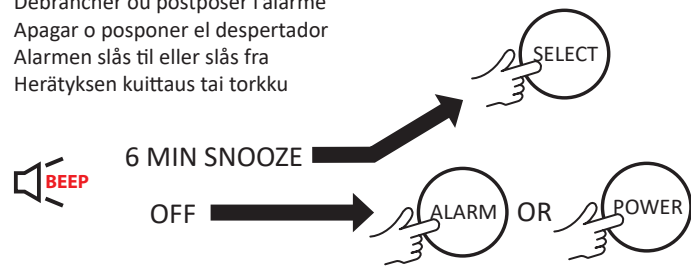

10

Turn the radio OFF

Zet de radio uit
 Radio ausschalten
 Éteignez la radio
 Apaga la radio
 Sluk for radioen
 Sammuta radio

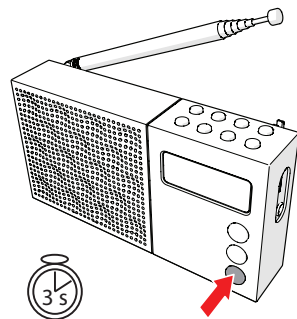

See www.nikkei.eu

11

Recal station presets

Voorkeuzezenders oproepen
 Vorzugssender aufrufen
 Appeler les émetteurs pre-chosis
 Activar estaciones favoritas
 Kald forvalgte stationer
 Suositimpien asemien valinta



Specifications

Power supply:
 AC 220V-240V ~ 50 Hz
 LCD Display
 Earphone jack
 Alarm clock
 DAB+ / FM Radio
 Weight: 732 g
 Dimensions:
 210x130x80 mm
 Warranty: 24 months

Specificaties

Stroomvoeding: AC
 220V-240V ~ 50 Hz
 LCD display
 Hoofdtelefoonaansluiting
 Alarmklok
 DAB+ / FM Radio
 Gewicht: 732 g
 Afmetingen:
 210x130x80 mm
 Garantie: 24 maanden

Technische Daten

Stromzufuhr: AC
 220V-240V ~ 50 Hz
 LCD-Display
 Kopfhörerbuchse
 Wecker
 DAB+ / FM Radio
 Gewicht: 732 g
 Abmessungen:
 210x130x80 mm
 Garantie: 24 Monate

Spécifications

Alimentation électrique:
 AC 220V-240V ~ 50 Hz
 Affichage LCD
 Prise casque
 Horloge alarme
 DAB+ / FM Radio
 Poids: 732 g
 Dimensions:
 210x130x80 mm
 Garantie: 24 mois

Especificaciones

Fuente de alimentación:
 AC 220V-240V ~ 50 Hz
 Pantalla LCD
 Toma de auriculares
 Reloj alarma
 DAB+ / FM Radio
 Peso: 732 g
 Dimensiones:
 210x130x80 mm
 Garantía: 24 meses

Specifikationer

Strømforsyning: AC
 220V-240V ~ 50 Hz
 LCD-display
 Hovedtelefonstik
 Alarmur
 DAB+ / FM Radio
 Vægt: 732 g
 Dimensioner:
 210x130x80 mm
 Garanti: 24 måned

Tekniset tiedot

Syöttövirta: AC
 220V-240V ~ 50 Hz
 Lcdnäyttö
 Kuulokkeen liitin
 Herätyskello
 DAB+ / FM Radio
 Paino: 732 g
 Mitat:
 210x130x80 mm
 Takuu: 24 kuukautta