

## NGB3601 Boombox Fatboy

USER MANUAL

EN



# Content

---

<b>1</b>	<b>Intended use</b>	<b>3</b>
<b>2</b>	<b>Safety</b>	<b>4</b>
2.1	Labels in this manual	4
2.2	General safety instructions	4
<b>3</b>	<b>Preparations for use</b>	<b>6</b>
3.1	Unpacking	6
3.2	Package contents	6
<b>4</b>	<b>Installation</b>	<b>7</b>
4.1	Connecting to the mains	7
<b>5</b>	<b>Functions</b>	<b>8</b>
<b>6</b>	<b>Operation</b>	<b>10</b>
6.1	Radio functions	10
6.2	USB functions	12
6.3	Memory card functions	13
6.4	AUX IN	13
6.5	Bluetooth connection	14
6.6	Playlists	16
6.7	Controlling high-pitched and low-pitched sounds	17
<b>7</b>	<b>Accessories</b>	<b>18</b>
<b>8</b>	<b>Cleaning and maintenance</b>	<b>19</b>
<b>9</b>	<b>Technical specifications</b>	<b>20</b>
<b>10</b>	<b>Disposal of used electric and electronic equipment</b>	<b>21</b>

# 1 Intended use

---




The boombox Fatboy is a portable boombox with a double subwoofer system. The device plays music from USB devices and memory cards (SD MP3). Listen to the radio via the FM function.

- i** Do not use the device in a humid environment.
  
- i** Due the wide variety of products with USB ports, mobile devices and their manufacturer-specific functions we cannot guarantee that all devices will be recognized or all operating options can function.
  
- i** Read the manual carefully before the first use.

## 2 Safety



---

### 2.1 Labels in this manual






-  **WARNING** A warning means that injury is possible if the instructions are not obeyed.
-  **CAUTION** A caution means that damage to the equipment is possible.
-  A note gives additional information, e.g. for a procedure.

### 2.2 General safety instructions

#### General

-  To prevent damage or malfunctions: Please take time and read the general safety instructions. This will avoid fire, explosions, electric shocks or other hazards that may result in damage to property and/or severe or fatal injuries.
-  The manufacturer is not liable for cases of material damage or personal injury caused by incorrect handling or non compliance with the safety instructions. In such cases, the warranty will be voided.

#### WARNING

-  Do not put force on the appliance.
-  Always check that the mains voltage corresponds to the voltage on the rating plate.
-  Only use original accessories from the manufacturer.
-  Do not spill any liquid on the appliance.
-  Never leave children unattended with the packing material. The packaging material represents a danger of suffocation Children frequently underestimate the danger.always keep children away from the packaging material.

**⚠** It is not permitted to open the product yourself or to have it opened, neither is it permitted to repair the product yourself or to have it repaired. This will void the warranties. Please let any maintenance be carried out by certified maintenance personnel.

**⚠** Do not block the ventilation holes.

**⚠** Do not insert any objects in the ventilation holes.

#### **CAUTION**

**⚠** Do not put the appliance near a heat source. This could damage the appliance.

**⚠** Put the appliance on a horizontal flat surface.

**⚠** Keep minimum (50 mm) space around the device for optimal ventilation.

#### **Remarks**

**i** If this appliance is equipped with rubber feet to prevent it from moving: The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.

**i** We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

## 3 Preparations for use

---

 
### 3.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.

**i** We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

### 3.2 Package contents

The following items are included in the received package:

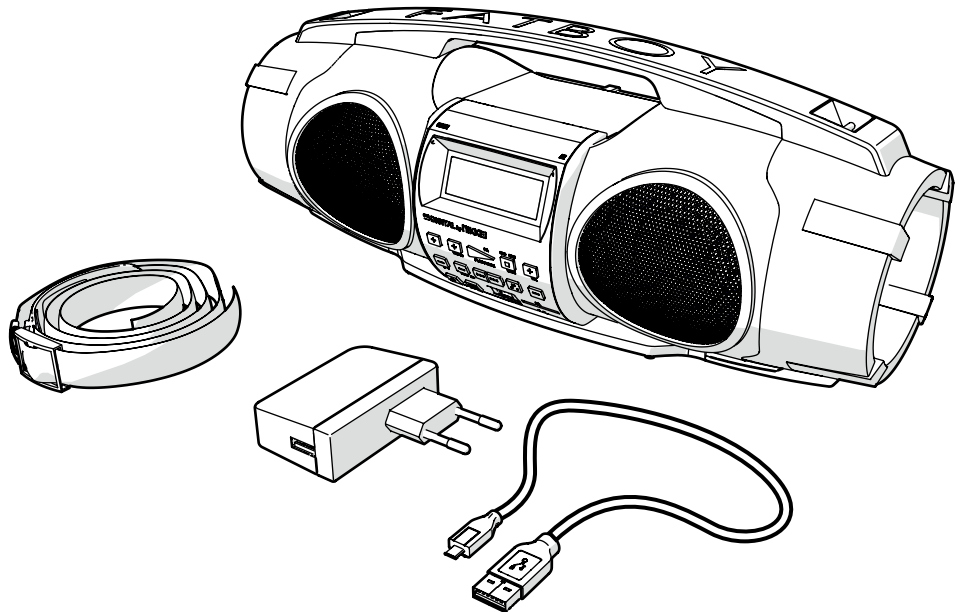


**i** If any item is missing, please contact your reseller.

- 1x boombox Fatboy
- 1x Plug contact
- 1x USB connecting cable
- 1x bandage

## 4 Installation

 
---

### 4.1 Connecting to the mains

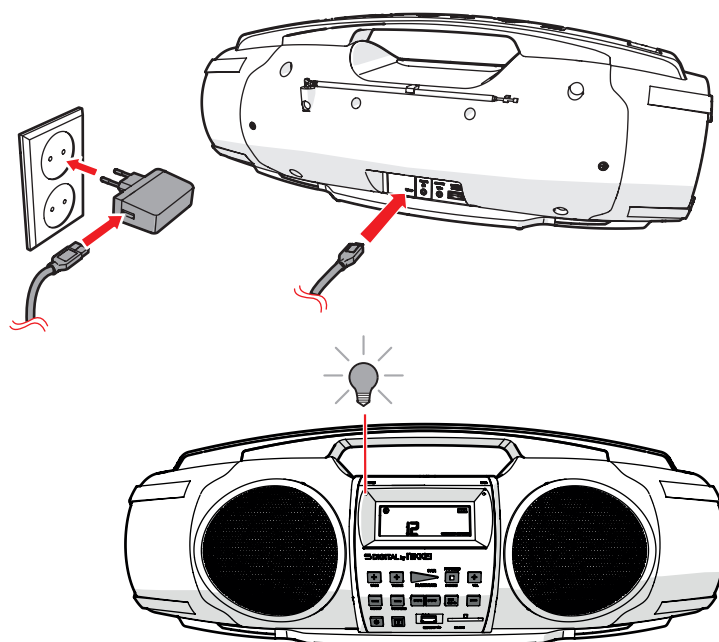

- Connect the mini USB output to the device (27) and put the USB output into the adapter.
- Connect the mains plug to a wall socket.

## 5 Functions

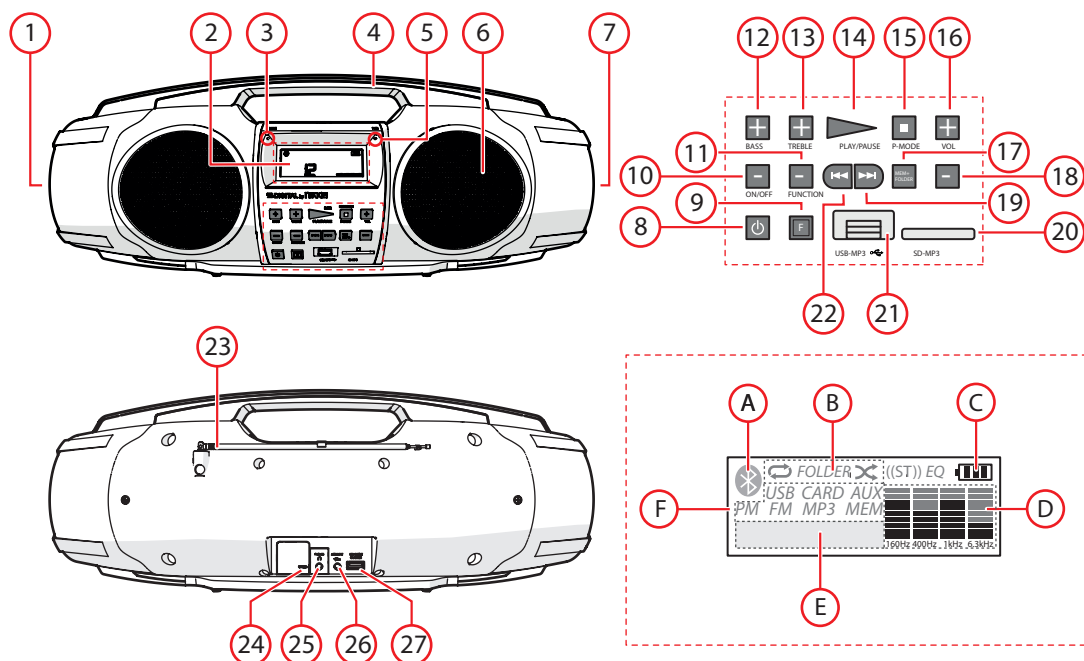 

1. Passive Subwoofer left
2. LCD Display
3. LED : Product is charging
4. Handle
5. LED: BLUETOOTH
6. Speaker
7. Passive Subwoofer right
8. On / Off button
9. Function button
10. Bass (control of low-pitched sounds) -
11. Treble (control of high-pitched sounds) -
12. Bass (control of low-pitched sounds) +
13. Treble (control of high-pitched sounds) +
14. Play/Pause/Pair button
15. Prog/Mem button
16. Volume up button
17. Memory+/Folder+ button
18. Volume down button
19. Station/Next button
20. Slot-in for SD card
21. USB port
22. Station/Previous button
23. FM antenna



24. Power 5V Micro USB-output





25. Headphone jack

26. AUX IN

27. USB output charger

A. Icon

B. Play mode

	Repeat the current track.
	Repeat the current track.
	Repeat all tracks in all folders.
	Shuffle. All tracks are played in random sequence. The repeat function is disabled.

C. Status battery

D. Overview Bass/Treble

E. FM: shows radio frequency

- USB: shows quantity tracks
- CARD: shows quantity tracks
- AUX: shows quantity tracks
- BT: shows set volume

F. The current track or menu


## 6 Operation

 - To switch on the appliance, press the STANDBY button ON/OFF (8).
- To select the source mode (BLUETOOTH), press the FUNCTION button 9.
- You can choose from: FM, USB, SD, AUX, BLUETOOTH.
- Select the desired source.
- Press the button Volume up (16) or the button Volume down (18) to set the volume.

### 6.1 Radio functions

**i** There is only a FM tuner available.

- To switch on the appliance, press the STANDBY button ON/OFF (8).
- Slide out the antenna

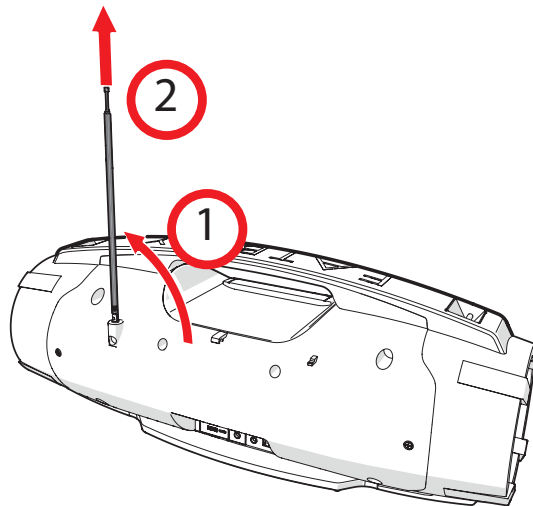

- To select the source mode (FM), press the Function button 9.

#### Automatically adjust the frequency

- To select the desired radio station, press the button PREVIOUS (Station/Next) or keep the button 2 (19) seconds pressed in for a few seconds until you find the desired radio frequency.
- The frequency is shown on the display.

#### Adjust the frequency manually

- To tune to the station of your choice, press the Station/Previous 19 button or the Station/Next 22 button repeatedly until the frequency is found.
- The frequency is shown on the display (E).

### **Save a radiostation into the memory**

**i** You can set max. 20 stations.

- Go to the radio station which needs to be set in the memory.
- Press the Prog/Mem button (15).
- On the display appears "P-01".. "01" flashes. This shows the number of the set memory station.
- Press the Station/Previous 19 or Station/Next (22) key to select a memory location.
- Press Prog/Mem (15) to confirm.
- On the display appears "MEM". This radio frequency is saved in the memory.

### **Activating a stored function**

 
- Press the Memory+/Folder+ button (17).
- On the display appears the number of the saved frequency.
- Press multiple times on the button Memory+/Folder+ (17) to navigate through the stations.

## 6.2 USB functions

### Place the USB stick

**i** The device can only files music from MP3 format.

- To switch on the appliance, press the STANDBY button ON/OFF (8).
- Insert the USB stick.(21)

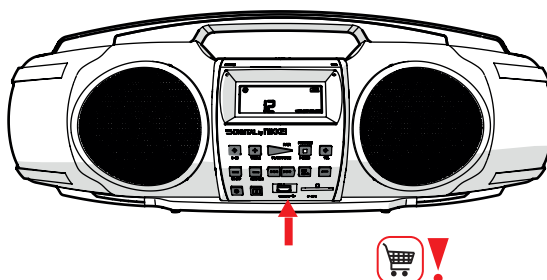

- To select the source mode (USB), press the FUNCTION button 9.
- On the display appears "USB" (F) and the quantity of tracks.
- Press the button Play/Pause/Pair (14) to play the current track or use the buttons Station/Previous (19) and Station/Next (22) to navigate through the folder.

See "Repeat functions" paragraph 6.6 how a track can be repeated.

**i** It can take a few seconds before the device can read the USB stick.

**i** Turn the device off before removing the USB stick.

### Charge devices

**i** The device must be connected with the main plug to a wall socket before charging other devices.

 
- Use the USB output to charge other devices like your MP3-player, mobile phone...
- The red light lights up (3).

### 6.3 Memory card functions

- To switch on the appliance, press the STANDBY button ON/OFF (8).
  - Place a SD memory card in the device.
  - To select the source mode (SD), press the FUNCTION button 9.
  - On the display appears "CARD" ( ) and the quantity of tracks.
- See "Repeat functions" paragraph 6.6 how a track can be repeated.

**i** It can take a few seconds before the device can read the SD memorycard.

**i** Turn the device off before removing the SD memorycard.

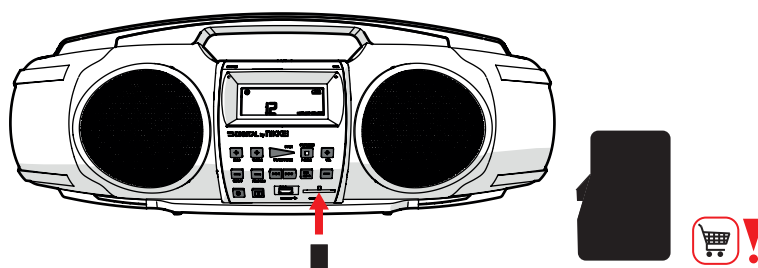


### 6.4 AUX IN

You can connect the boombox Fatboy to different devices like your mobile phone, MP3-player, laptop...

- To switch on the appliance, press the STANDBY button ON/OFF (8).
- To select the source mode (AUX), press the FUNCTION button 9.
- To connect an external audio device, insert the cable plug in the AUX IN jack (26).

 On the display appears "AUX" ( ) and the quantity of tracks.

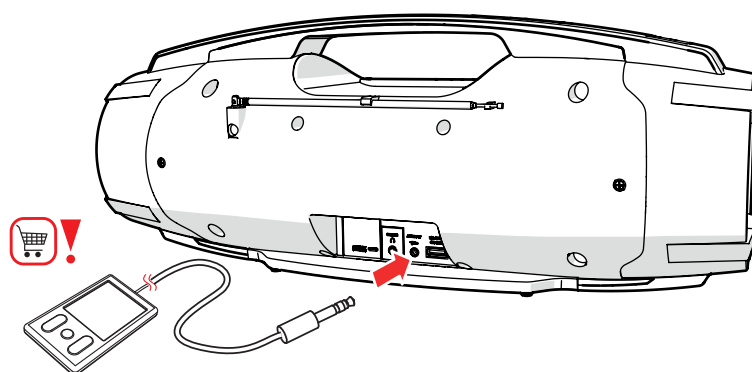

## 6.5 Bluetooth connection

**i** We can not guarantee that all Bluetooth devices are compatible.

**i** In order to prevent disruptions while listening to music using Bluetooth, turn off the Wi-Fi of your device.

### Make a Bluetooth connection

You can wirelessly connect the boombox Fatboy to devices that have Bluetooth.

 
- To switch on the appliance, press the STANDBY button ON/OFF (8).
- To select the source mode (BLUETOOTH), press the FUNCTION button 9.
- The blue LED indicator flashes slowly.
- Turn the Bluetooth on of the device which you want to connect.
- The blue LED indicator flashes fast.

**i** NOTE: your Bluetooth connection has a range of approximately 10 metres

- Connect the device to the boombox Fatboy like a mobile phone. The name of the Bluetooth connection is FATBOY.
- The blue LED indicator lights up but does not flashes.
- The Bluetooth device is connected.

Below a table with an explanation of the function of the LED indicator:

The blue LED indicator lights up but does not flashes.	The Bluetooth device is connected.
The blue LED indicator flashes slowly.	The device search for a Bluetooth connection.
The blue LED indicator flashes fast.	

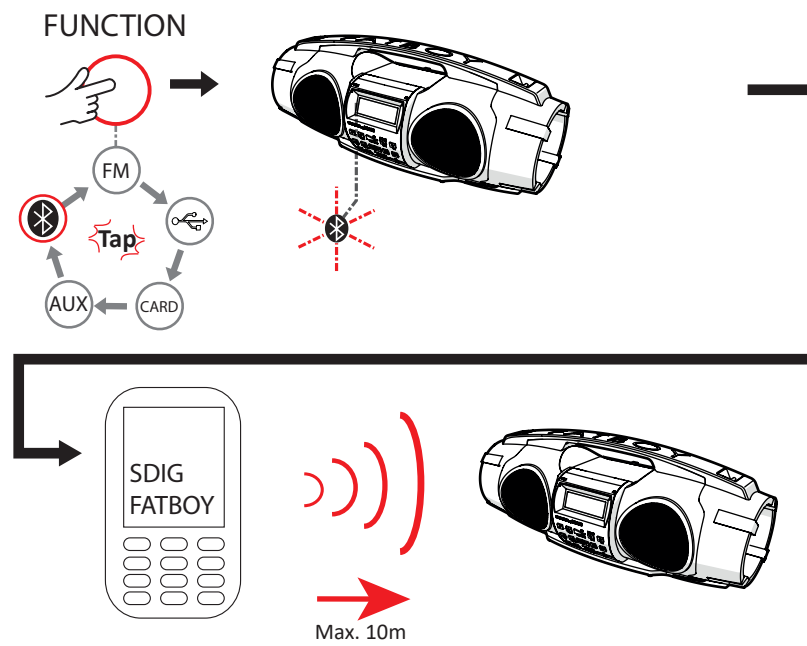

#### Disconnect the bluetooth connection

- Keep key Play/Pause/Pair (14) pressed for 2 seconds.
- The blue LED indicator flashes slowly.
- The Bluetooth connection is disabled.

## 6.6 Playlists

### Program track sequence

You can set the play order of the track.

**i** You can set max. 20 tracks.

**i** To program the order of playback, current playback must be stopped.

- To stop playback, press the Prog/Mem button (15).
- Use the buttons PREVIOUS (22) or the buttons Station/Next (19) to search in the folder.
- On the display appears "P-01".. "01" flashes. This shows the number of the set memory station.
- Press Prog/Mem 15 to confirm.
- Press the button Prog/Mem (15) to programm another track.

### Play the playlist

- Press the button Play/Pause/Pair (14) to play the playlist.

### Delete the playlist

- Press twice on the button Prog/Mem (15) to delete a playlist.





### Repeat functions

You can set the repeat function or shuffle function. Press multiple times on the button ( ).

You can choose from:



In the table below you find an explanation of the icons.

	Repeat the current track.
	Repeat the current track.
	Repeat all tracks in all folders.
	Shuffle. All tracks are played in random sequence. The repeat function is disabled.



## 6.7 Controlling high-pitched and low-pitched sounds

### Setting the bass (low-pitched sounds)

- Use the Bass (10) and (12) buttons to set the bass (low-pitched sounds).
- On the display appears "b:#". # is the set value.
- You can set the bass from -8 to 8.

 
### Setting the treble (high-pitched sounds)

- Use the (11) and (13) buttons to set the treble (high-pitched sounds).
- On the display appears "t:#". # is the set value.
- You can set the treble from -8 to 8.

## 7 Accessories

---

⚠ Only use original accessories from the manufacturer.

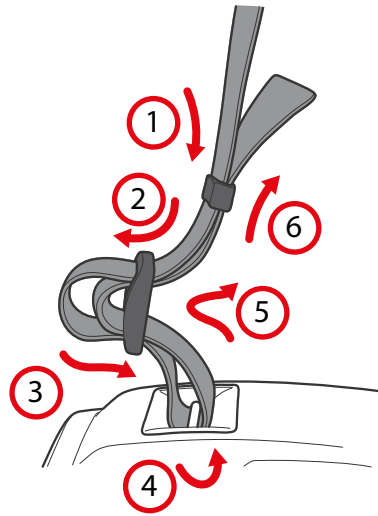

A belt is also included in the received package of the boombox Fatboy. Use this belt to hold the radio.

## 8 Cleaning and maintenance

---

- ⚠ Turn the device off and remove the main plug out the socket before you start cleaning the device.
  
- ⚠ It is not permitted to open the product yourself or to have it opened, neither is it permitted to repair the product yourself or to have it repaired. This will void the warranties. Please let any maintenance be carried out by certified maintenance personnel.
  
- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

## 9 Technical specifications

---

### Specifications

- Voltage: 100 - 240
- Frequency: 50 - 60
- Weight: 1900 gr
- LCD Display
- Sound system: stereo
- Sound enhancement: Treble and bass control, built-in subwoofer
- Equalizer: User EQ
- Media playback formats: MP3
- Media playback functions: FM tuner Bluetooth A2DP [Dropspot3]
- Type audiotuner: digital
- USB output: 5V 1A
- Dimensions main unit: 400 x 110 x 140 mm

### Connectivity

- Ipod/Iphone-connection: via USB
- Audio connection: Headphone jack AUX IN jack [Dropspot3]
- Type USB connection: Micro USB connection for charging, USB connection
- Memory card slot: SD
- Wireless connection: BT Streaming Bluetooth 4.0
- Coax antenna-connection: No
- Automatic "Paire" function: Yes

### Settings

- Automatic channel search
- Number of programmable station presets: 20 stations
- Number of programmable CD memories: 20 tracks

### Accessories

- 1x AC/DC adapter
- 1x Micro-USB kabel voor charging

### Specifications battery

- Built-in battery: max. 5 - 6 hrs
- Battery type: lithium-ion
- Capacity: 2100 mAh

## 10 Disposal of used electric and electronic equipment

---



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: [www.nikkei.eu](http://www.nikkei.eu)