

# **N|I|K|K|E|I**

## **24" HD LED TV**

### **User manual**






**MODEL: NH2414**



 
# IMPORTANT WARNINGS AND SAFETY ADVICE

**We encourage you to read this user guide carefully and completely before installing and using your device.**

It is important that this user guide is kept with the device for any new consultation. If this unit is to be transferred to another person, make sure that the user guide follows the unit so that the new user can be informed of the operation of the unit. In this user guide, the following symbols are used:

	Important information about your personal safety and how to avoid damage to the device
	General information and advice
	Environmental information
	Fire hazard
	Risk of electric shock

**Important safety instructions – please read carefully and keep for future reference**

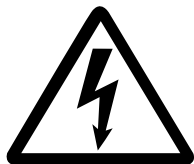

To reduce the risk of fire or electric shock, do not expose this product to water, rain or moisture. To prevent the risk of electric shock, do not remove the cover or back of this product. In case of product failure, only qualified personnel can repair. There are no user-serviceable parts inside.

**CAUTION !**

**Dangerous tension inside the product ! Do not open. Risk of electric shock ! No parts can be repaired by the end-user. Only qualified personnel can repair and maintain this product.**  
If the electric cord is damaged, it must be replaced by the manufacturer or qualified after-sales personnel in order to avoid any danger.

The product must be installed in accordance with local laws. Damaged batteries must be properly disposed. In order to protect the environment, please dispose the batteries properly, in accordance with local laws (information is available at your reseller).

Remote control batteries (not included) shall not be exposed to excessive heat (e.g. from sun or fire).

### **Where to install the product**

- Place the product on a straight, rigid and stable place. Do not place the product on a carpet.
- Do not place the product on top of another that may cause overheating (for example, a receiver or amplifier).
- Do not place anything underneath the product (for example, Cds or magazines).

### **Proper ventilation**

- Place the product in a sufficiently-aerated place to avoid overheating. Allow at least 10cm spacing at the back and top of the product, and 5cm spacing on both sides to prevent overheating.
- Do not place items such as newspapers,tablecloth, curtains, in front of the ventilating openings.

### **Do not expose the product to high temperatures, moisture, water and dust.**

- The apparatus shall not be exposed to dripping or splashing. No object filled with liquids, such as vases, shall be placed on the apparatus.
- Do not place other items close to this product that may damage it (for example, objects containing water or lightened candles).
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

### **Electric supply**

- Please unplug the product in case of prolonged non-use.

- If the supply cable is damaged, it must be replaced by the manufacturer or qualified after-sales personnel to avoid any danger.
- This product must be connected to an electrical supply 100-240V ~ 50/60Hz.
- The mains plug is used as the disconnect device, so the disconnect device shall remain readily operable

## **WARNING**

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be

avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.
- In case this television set is to be relocated to a different location, please keep in mind and apply the above safety instructions.

## **Information about the meaning of the conformity marking**

The CE marking indicates that the product meets the main requirements of the European Directives 2014/35/EU (Low Voltage), 2014/30/EU (Electromagnetic Compatibility), 2011/65/EU (Restriction of the use of certain hazardous substances in electronic equipment), 2014/53/EU (Radio equipment).

**Technical Specification:**

Name: Television Product

Net Weight: 2.4Kg

Operation Temperature: 0°C~40°C

TV Reception System: DVB-T2/C,DVB-S2

**Auto Standby**

In order to save energy, the electricity consumption of this product has been reduced in both operation mode and standby mode. Furthermore, if no operation is carried out for four consecutive hours, the unit will automatically enter standby mode. Simply press the Standby button on the remote control to switch the unit back to operation mode.

**Product Introduction**

Congratulations! You have chosen the latest generation high definition television. Endowed with high display quality and light weight, it is power-saving and radiationless with high sensitivity television reception. The new generation television will bring you safe & comfortable brand new visual experience. Thank you for purchasing and using our products!

 
**Accessories**

User manual x1

Remote control x1



## Safety

Please immediately pull out the AC power plug of adapter if there is abnormal sound or smell or it has sound but no picture, and contact with maintenance station after confirming no abnormality.

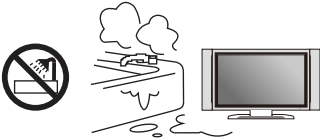

TV should be kept free from rain, damp and dust for prevention of electric shock and short circuit.

  TV should be kept from high temperature heating objects or direct sunlight. TV should be placed with good ventilation.

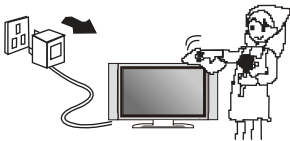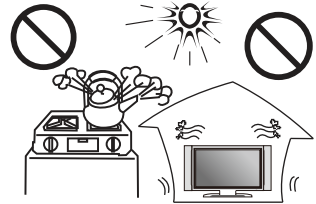


If necessary, you may clean the display with soft and clean cotton after pulling out the power plug, but do not emphatically and repeatedly wipe. Scraping, tapping or striking the display with hard object or wiping the display with grinding object is forbidden.

Do not wipe the machine with naphtha or thinner, which will lead to transformation of enclosure or breakage of coating. It may result in dirt if the machine has been contacting with rubber or ethane for long time.

 
It's forbidden to contact the display with organic solvents such as alcohol or gasoline or chemical solvent such as acid or alkali, etc.



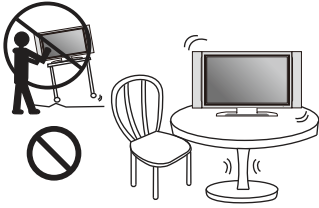



Do not put TV on unstable or shaky place

 Please do not place the power line or signal line across walkway or at place where people usually come and go in case the line to be trampled.  
Do not overload the power line or power socket.

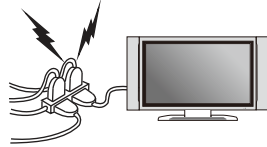

Please do not disassemble the back cover by non professionals as it has high voltage in the machine, in case for electric shock; and the internal adjustment and check should be conducted by professionals.

  Do not put water container such as cosmetics or medicine liquid on TV.  
Please pull out the plug and contact the maintenance station if there are abnormal objects or water in TV.

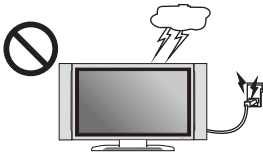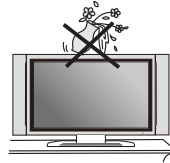

Please pull out the power plug of adapter in lightning strike, and pull out cable TV plug or outdoor antenna plug, in case the TV to be damaged.  
Do not contact the lead-in line of antenna.



## Table Of Contents

Important warnings and safety advice	01
I - Control Panel	09
II - Base Installation Guide	10
III - Wall Mounting instructions	11
IV - Connecting Cables	12
V - Remote Control	13
VI - Antenna Connections	16
VII - Watching Television Programs	17
VIII - First Time Installation	18
A - Channel	22
B - Picture	24
C - Sound	25
D - TIME	26
E - Setup	27
F - LOCK	29
IX - Important Notice	30
X -Troubleshooting	31

This user guide is available in the following languages:

NL (translated from the original)

FR (version originale)

EN (translated from the original)

Any other translation would be a translation of the original version.

 
This user guide, its possible modifications or any new version, is available on our website.

Congratulations! You have chosen the latest generation high definition television. Endowed with high display quality and light weight, it is power-saving and radiationless with high sensitivity television reception. The new generation television will bring you safe & comfortable brand new visual experience.

Thank you for purchasing and using our products!

## I - Control Panel

The command buttons are at the back of the TV.  
Introduction for Each Key

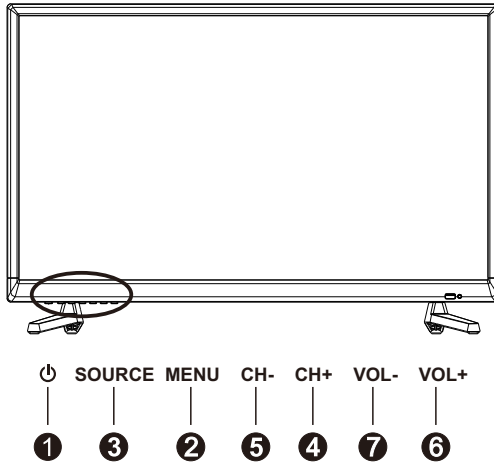

**1** STANDBY

Turn the TV on or enter into standby mode.

**2** MENU

Enter/exit the main menu.

**3** INPUT

Signal source selection button.

**4** CH +

Channel upwards short cut key; skip to next channel no. and select the next option in the menu

**5** CH -

Channel downwards short cut key; skip to previous channel no. and select the previous option in the menu.

**6** VOL +







Volume increasing short cut key; enter into the next menu and adjust OSD options (increasing).

**7** VOL -

Volume decreasing short cut key; enter into the next menu and adjust OSD options (decreasing).



## II - Base Installation Guide
      
### The Way Of Installing Base:

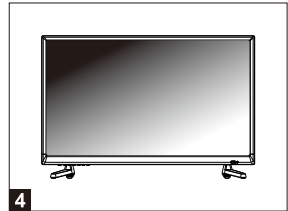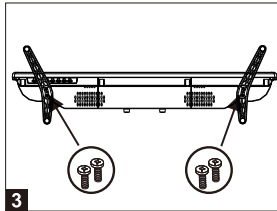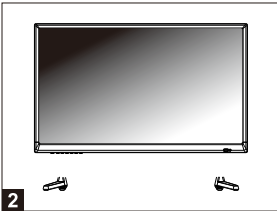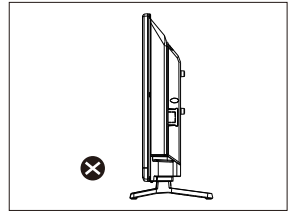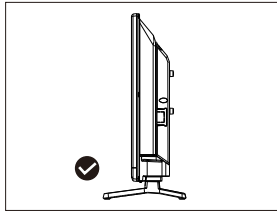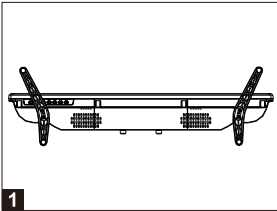

1. Please put the base on the desk as shown figure 1.  
(the stand approximately 180 degrees from horizontal).
2. Put the hole of the base upright into shaft of unit(as shown figure 2).
3. Fix the stand and the screen with 4 screws (figure 3)
4. The rendering after installed (as shown figure 4).

### The Way Of Unloading Base:

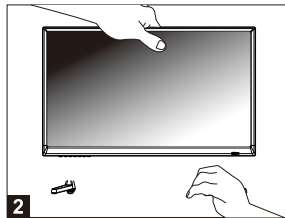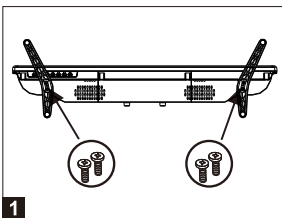  


1. Please remove the screw between the base and shaft (as shown figure 1).
2. Left hand hold the cabinet of the unit, right hand hold the base then remove the stand. (as shown figure 2)

### III - Wall Mounting instructions

 
- Use standard M4x8mm screws (4 pieces, not included) to mount this TV. Using different screws as specified will damage the wall mounting support and will be outside the scope of product guarantee.
- Contact a professional technician for assistance when wall mounting your TV.
- Do not wall mount the TV while TV is turned on.
- Refer to the instruction of your wall mounting bracket.

#### Back of your TV

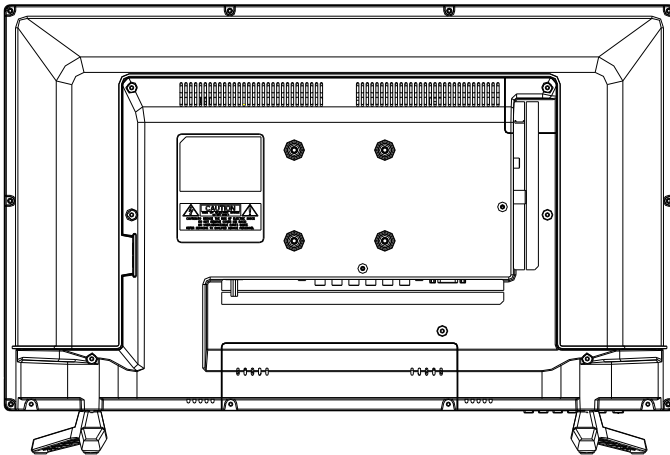

## IV - Connecting Cables

 This TV has digital multimedia performance and can be connected to multiple external devices. The following diagram presents the connections to other video and audio

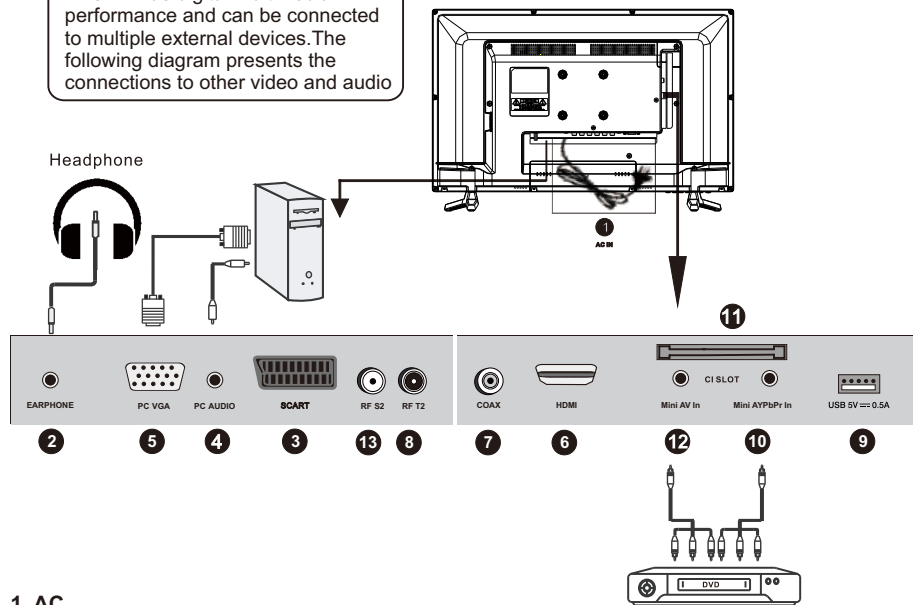

### 1. AC

AC 100-240V~ 50/60Hz

### 2. EARPHONE OUTPUT

### 3. SCART

### 4. PC AUDIO

PC audio input.

### 5. VGA

Connect with the D-sub 15 pin signal cable to your computer.

### 6. HDMI

High-definition multimedia interface (Note: compatible video signal 480P/576P/720P/1080i/1080P)

### 7. COAXIAL

Digital TV sound output.

### 8. RF T2

DVB-T/C.

### 9. USB

Access multi-media files stored in the USB device.

(Note: compatible format includes: \*.dat, \*.vob, \*.ts, \*.mpg, \*.avi, \*.mkv, and \*.mp4 for video, \*.jpg and \*.bmp for photo, \*.mp3 for music. )

### 10. MiniYPbPr IN

Component input terminal.

### 11. CI SLOT

 
Insert a CI (common interface) card.

### 12. MiniAV IN

Connect to the left/right RCAvideo out connection of any vide resource.

### 13. RF S2

DVB-S.

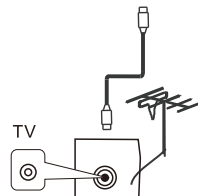

## V - Remote Control

### 1 Power

Press this button to switch on the TV. Press again to enter the mode

### 2 MUTE

Press this button to cancel the output sound. Press again to set the normal audio level.

### 3 0-9

Figures 0-9 are used for directly the number of the input channel.

### 4 TV/RADIO

Switch between DVB-T and RADIO. (Digital radio is not available in countries such as France)

### 5 ↶

Press this button to switch to the current program to the previous one.

### 6 SLEEP

Press this button to set the Delia LCD Television automatic switch-off function.

### 7 NICAM/A2

To choose STEREO, MONO, DUAL in the case of two languages.

### 8 S.MODE

Press repeatedly to scroll through the available audio modes

### 9 P.MODE

Press repeatedly to scroll through the available picture modes

### 10 SOURCE

Displays the list of signal sources in

### 11 CH+/-

Press the keys to scroll through the TV channels.

### 12 VOL+/-

Press the button to increase / decrease the audio level directly.

### 13 INFO

View the system status information set by the active user.

### 14 ASPECT

 
Select the aspect ratio

### 15 FAV

To preview the favorite channel list.


### 16 FAV+/FAV-

Press the keys to scroll through the favorite channels.

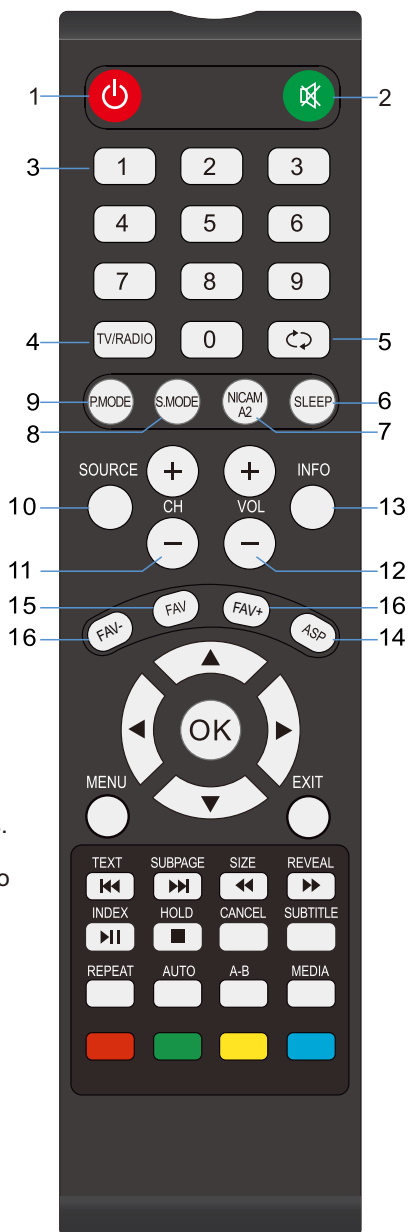

## V - Remote Control

 - 17 OK**  
Select the option previous/next  
▲/▼/◀/▶ Increase / decrease option value.  
Select the option previous/next.
- 18 MENU**  
Select a menu.
- 19 EXIT**  
Return to TV viewing from any menu.
- 20 REVEAL**  
Display the characters hidden.  
▶▶ Fast Forward.
- 21 SIZE**  
Change the size of current page.  
◀◀ Fast Rewind
- 22 SUBPAGE**  
Display the current sub-page.  
▶▶ Go to the next track or chapter
- 23 TEXT**  
Display the teletext on screen.  
◀◀ Go to the next track or chapter
- 24 INDEX**  
Ask for the list of main Tv letter broadcast page number,  
▶▶ Start/Pause
- 25 HOLD**  
Hold the current page and prevent again.  
■ Stop playback
- 26 SUBTITLE**  
Recalls you preferred subtitle in digital mode.
- 27 CANCEL**  
Delete TXT on screen
- 28 MEDIA**  
Enter into the media mode(USB)directly.
- 29 A-B**  
Reproduction of fragments.
- 30 REPEAT**  
Repeated playback(per file in USB).
- 31 AUTO**  
Automatically adjust the PC/VGA screen.
- 32 RED/GREEN/YELLOW/BLUE**  
Available in the following ways:televideo,  
DVB-T e TV.

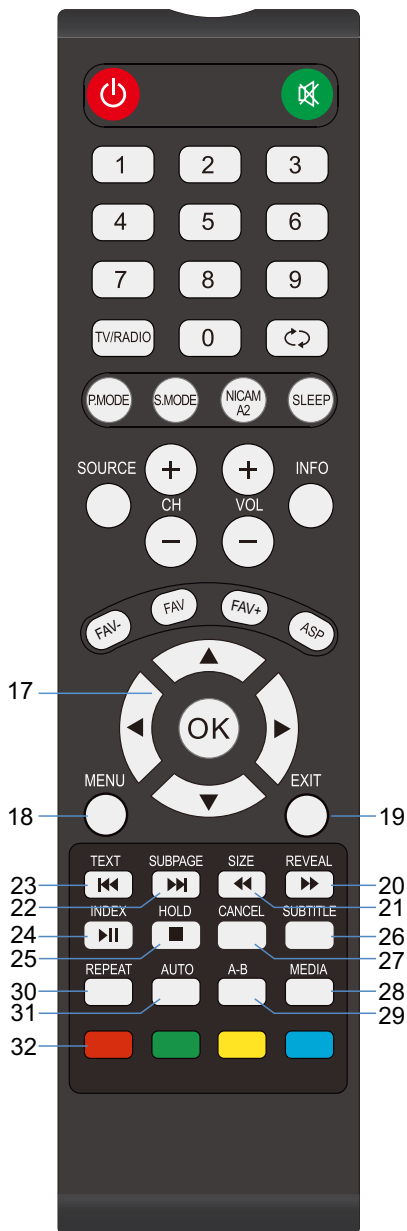

## BATTERY INSTALLATION

Install the batteries as shown in the following figures. Make sure the + and - terminals are positioned as indicated in the battery compartment (Fig. 1)-

### USEFUL DURATION OF BATTERIES

- Normally the batteries last for a year, even if the consumption of the batteries depends on the effective use of the remote control.
- If the remote control does not work when it is used near the appliance, replace the batteries.
- Use two dry type 2xAAA batteries (batteries not included ).

#### **NOTE:**

- Do not drop, step on or otherwise hit the remote control. This could damage the components or cause a malfunction.
- If the remote control is not used for a long time, remove the batteries.


### OPERATION OF THE TV REMOTE

Point the remote control at a distance of no more than 6 m from the remote sensor and within an angle of 60 ° in front of the appliance (Fig. 2).


#### **NOTE:**

- The operating distance may vary depending on the brightness of the environment.
- Do not aim light sources at the remote sensor.
- Do not place any object between the remote control and the remote control sensor..
- Do not use this remote control when using the remote control of another device at the same time.

**Fig. 1**

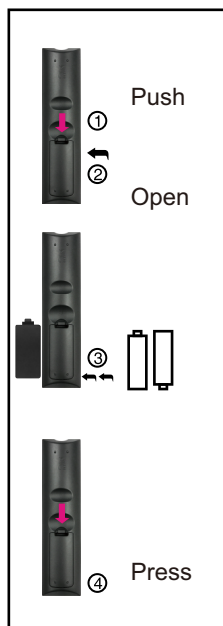 

**Fig. 2**

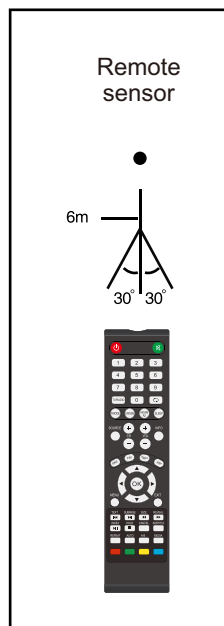 




## VI - Antenna Connections

We recommend you use a 75Ω antenna cable so as to eliminate the disturbance caused by impedance mismatching. The antenna cable shall not be bundled together with the power cord.

Directly insert the 75Ω antenna cable plug into the antenna socket when applying cable television.

 Note: The antenna should be checked periodically. If clear image is not available, shut down the power and then carefully check the antenna.

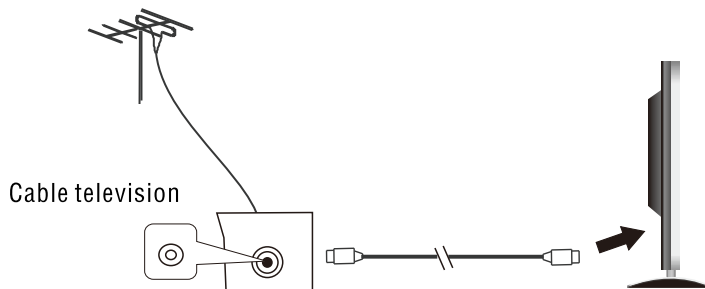

### Power-on/Power-off

1. Make sure all cables are disconnected from the main unit before connecting to the AC power source.
2. Read the instructions carefully before connecting other devices.

Press the standby button again on the remote control for the television the indicating lamp becomes green, and then television image is available.

Press the standby button on the remote controller or the television to enter into standby state.

### Power-saving & protection mode

1. In video or PC state, the television will enter into lower power sleep state (standby state) to conduct power saving and protection after several minutes with no signal inputs.

## VII - Watching Television Programs

MAKE SURE ALL THE EQUIPMENTS AND POWER CORD ARE CONNECTED PROPERLY AND THE UNIT IS SET IN CORRECT MODE BEFORE KINDS OF OPERATIONS.

### BASIC OPERATIONS

- Press POWER button on the unit or remote control to power ON the unit (indicator will glow green); press it again to power OFF (standby mode) the unit (indicator will glow red).
- Press SOURCE button on the unit or remote control to switch the unit to DTV or ATV mode.

#### SELECT DESIRED PROGRAM

1. Press CH+ button to play next channel.
2. Press CH- button to play previous channel.
3. Press number buttons on remote control directly to select desired program.

NOTE: Press +/- button repeatedly to switch the digit.

#### VOLUME CONTROL

- Press VOL+ or VOL- to adjust the level of current volume.
- Available range: 0-100.

#### MUTE CONTROL

- Press MUTE button to mute the sound, press it again to turn on the sound.

#### SOURCE SETTING

- Press SOURCE button on the unit or remote control to display the input source list.
  - Press UP or DOWN navigation button to select desired input source, then press OK button to confirm selection.
- Available options: DTV, ATV, YPbPr, SCART, AV, HDMI, USB, VGA.

#### MULTIAUDIO SATLLITE

- Press AUDIO button on remote control and use navigation buttons to select desired audio language.

NOTE: To enable this function, make sure that the channel you are viewing supports multi-audio languages.

#### INFORMATION DISPLAY

- Press DISPLAY button on remote control to display information of current program.

## VIII - First Time Installation

- The unit contains different setting menus. Once the initial programming is entered, it will be remained in the memory until change, and the unit can always be operated under the same conditions.
- The settings will be remained in the memory until the settings are changed, even after setting the player to standby mode.

Common procedure for initial settings

- Press MENU button on the unit or remote control to display the main menu.
- Press UP/DOWN/LEFT/RIGHT navigation buttons to move the cursor.
- Press OK or RIGHT navigation button to enter submenu.
- Press MENU button to save current setting and return to previous menu page.
- Press EXIT button to exit menu page.

First Time Installation

- Connect to power source and turn on this TV, then below setup page will display on the screen.
- Press UP/DOWN navigation button to move the cursor.
- Press LEFT/RIGHT navigation button to select an option.

Step 1

OSD Language: select the on-screen menu language.

Country: select your country.

Energy Model: select Home or Store mode.

 
 
Step 2

- When Step 1 finished, press OK to enter next page.
- Use UP/DOWN navigation button to highlight an option and press OK to enter subpage.
- Select Tune Type and Digital Type using navigation buttons and press OK to start auto tuning.

NOTE: Items following Digital Type are adjustable only when Digital Type is DVB-T / C / S and these items vary for different digital type.

- Select an available input source.

NOTE: To play an external device, connect it to related terminal on TV back first.

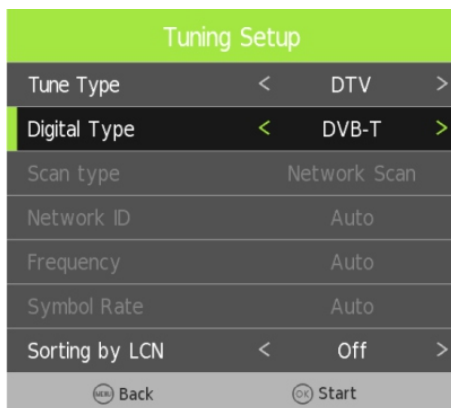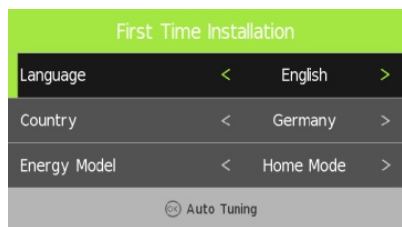

## QUICK SELECT

When viewing an available channel, press CH.LIST button on remote control to enter Channel List menu page.

- Press UP or DOWN navigation button to select preferred channel.
- Press LEFT/RIGHT navigation button to select a channel group.
- Press OK button to confirm selection.

## TELETEXT

- Press TEXT button on remote control to display the available teletext information and press it repeatedly to stop playing the teletext.

 
## TV/RADIO (FOR DTV MODE ONLY)

- Press TV/RADIO button on remote control to switch the unit between TV and radio mode.

## SUBTITLE


- Press SUBTITLE button on remote control repeatedly to select desired subtitle.

NOTE: To enable this function, make sure that the channel you are viewing supports multi-subtitle.

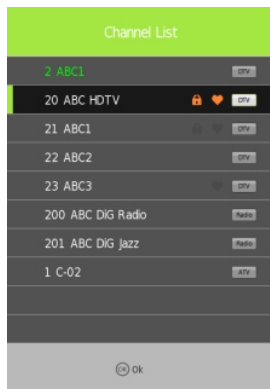


## MEDIA PLAYBACK

 - Press SOURCE button on the unit or remote control to switch the unit to USB mode.
- Insert a USB memory device into USB slot before following operations.
- Press UP/DOWN/LEFT/RIGHT navigation button to move the cursor.
- Press EXIT button to return to previous page.

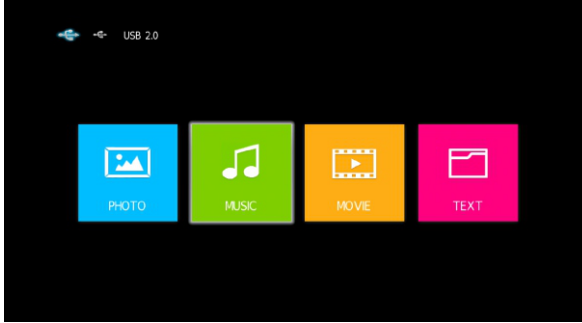


### Photos

 - Press LEFT/RIGHT navigation button to select "Photos" in the main menu and press OK button to enter it.
- Use navigation buttons to select a file and press OK button to add to play list.
- Press ► button to start playback.
- Press DISPLAY button to show / dismiss the tool bar. Use navigation buttons to select desired option and press OK to confirm it.




### 2. Music

 - Press LEFT/RIGHT navigation button to select "Music" in the main menu and press OK button to enter it.
- Use navigation buttons to select a file and press OK button to add to play list.
- Press ► button to start playback.
- Use navigation buttons to select desired option and press OK to confirm it.
- Press EXIT button to return.

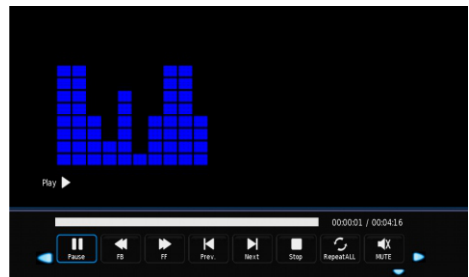

### 3. Movie

 
- Press LEFT/RIGHT navigation button to select "Movie" in the main menu and press OK button to enter it.
- Use navigation buttons to select a file and press OK button to add to play list.
- Press ► button to start playback.
- Press DISPLAY button to show / dismiss the tool bar. Use navigation buttons to select desired option and press OK to confirm it.

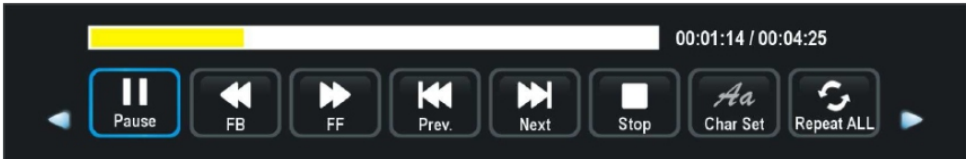

- Press EXIT button to return.

### 4. Text

 - Press LEFT/RIGHT navigation button to select "Text" in the main menu and press OK button to enter it.
- Use navigation buttons to select a file and press OK button to add to play list.
- Press ► button to start playback.
- Press DISPLAY button to show / dismiss the tool bar. Use navigation buttons to select desired option and press OK to confirm it.

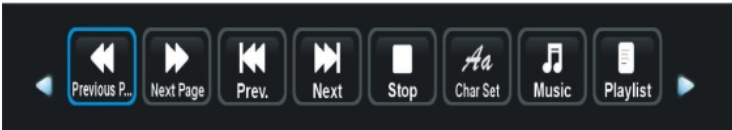

- Press EXIT button to return.



#### Remote operations when playing multimedia files:

  - Press ► / ■ button on remote control to play or pause playing.
- Press ■ button on remote control to stop playing.
- Press ◀◀ button on remote control to move fast backward.
- Press ▶▶ button on remote control to move fast forward.
- Press ◀◀ button on remote control to play previous file.
- Press ▶▶ button on remote control to play next file.

NOTE: To play your multimedia files, make sure you have selected correct icon in the main menu of MEDIA PLAYBACK. That is to say, you can only play Photo files in PHOTO item, Music files in MUSIC item and so on.

## Channel

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "OK" button to select the "Channel" menu.
2. Press the "▶" button to enter the "Channel" menu setting, use "▲ / ▼" to move the menu bar, and then press "▶" button to adjust the value of selected item.
3. Press "MENU" button to return to upper menu.

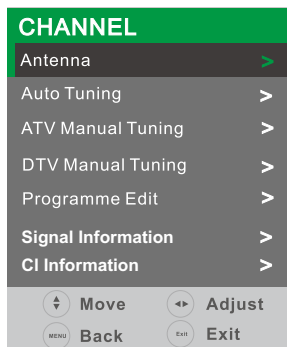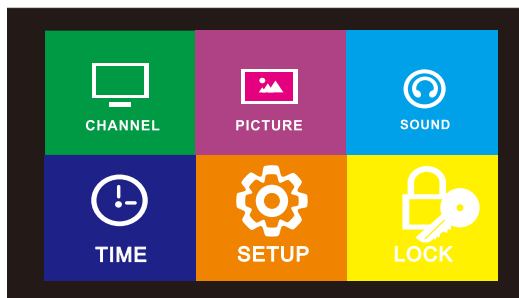

### Antenna

Press "▶" navigation button to select DVB-T or DVB-C.

### Auto Tuning

Press OK or RIGHT navigation button to enter it. Use navigation buttons to set the Country, Tuning Type and LCN.

NOTE: Users can see and set Tune Type and following items only when "Antenna" is DVB-C.

- When finished above settings, highlight "Auto Scan" and press OK to start program tuning.



### ATV Manual Tuning

Press OK or RIGHT navigation button to enter it. Use LEFT/RIGHT navigation button to select the channel. Then press OK button to start searching. Current channel: to select the current channel. Color system: to select the preferred color system. Sound system: to select the preferred sound system. Fine tuning: fine tuning of the frequency. AFC: activate / deactivate automatic control of the



### DTV Manual Tuning

- Press OK or RIGHT navigation button to enter it.
- Use navigation buttons to adjust the select the desired channel number, start the search by pressing the OK button.

### Programme Edit

Press OK or RIGHT navigation button to enter it. Press UP/DOWN navigation button to highlight desired channel.

Press RED button on remote control to delete highlighted channel.

Press YELLOW button on remote control to enter MOVE mode. Then use UP/DOWN navigation button to select preferred position and press YELLOW button again to move it.

Press BLUE button on remote control to skip highlighted channel.

 
press the FAV to add the favorite channels.

### Signal information

This item is used to display signal details, for example: signal quality and strength.

### CI information


When an available CAM (Conditional Access Module) card is connected to the CI slot, the users can view related information or manage your CAM card.

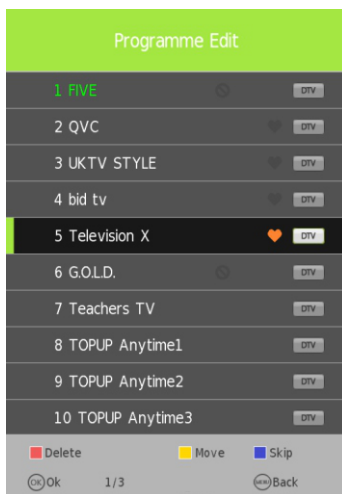



## Picture

 1. Press the "MENU" button on the remote control to enter the OSD menu, then press "▶" button to select the "Picture" menu.
2. Press the "OK" button to enter the "Picture" menu setting, use "▲ / ▼" to move the menu bar, and then press "◀ / ▶" button to adjust the value of selected item.
3. Press "MENU" button to return to upper menu

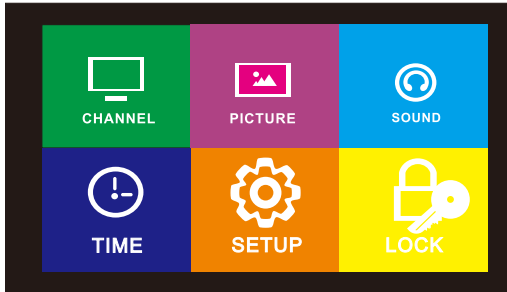

### Picture Mode

Available options: Personal, Mild, Standard, Dynamic.



### Contrast

The contrast value of picture can be adjusted from 0-100.

### Brightness

The brightness value of picture can be adjusted from 0-100.

### Colour

The colour saturation value of picture can be adjusted from 0-100.

### Tint

This item is used to adjust the tone of color in NTSC system from 0-100.

### Sharpness

The sharpness value of picture can be adjusted from 0-10.

**NOTE:** The value of Brightness, Contrast, Color, and Sharpness is adjustable only in User picture mode.

### Colour Temp

This item is used to adjust the optimum colour temperature for suitable viewing.

Available options: Normal, Cold, Warm

### Noise Reduction

This item is used to eliminate the image noise to gain better image effect.

Available options: Off, Low, Medium, High.

### SCREEN

setup the PC.

### Dynamic CR

Dynamic Contrast ON/OFF.

 
### Face Color

Adjust this option if face color displayed on screen looks a little abnormal.

Available value: -50, -40, -30, -20, -10, 0, 10, 20, 30, 40, 50.


## Sound

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "▶" button to select the "Sound" menu.
2. Press the "OK" button to enter the "Sound" menu setting, use "▲ / ▼" to move the menu bar, and then press "◀ / ▶" button to adjust the value of selected item.
3. Press "MENU" button to return to upper menu.

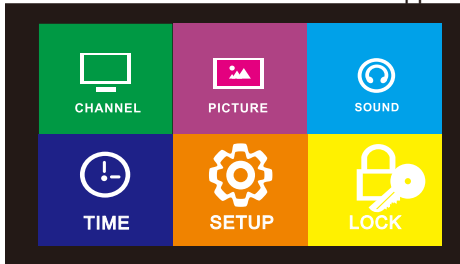

### Sound Mode

 Available options: Standard, Movie, Music, Sports, Personal.

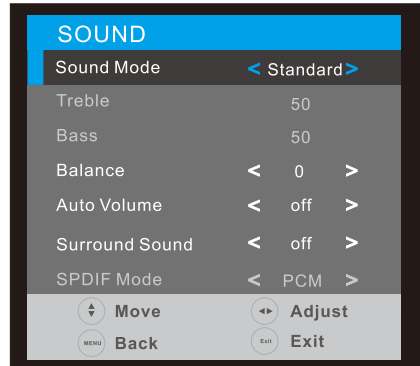

### Treble

This item is used to adjust the level of higher-pitched sounds from 0-100.

NOTE: The value of Bass and Treble is adjustable only in Personal sound mode.

### Bass

This item is used to adjust the level of lower-pitched sounds from 0-100.

NOTE: The value of Bass and Treble is adjustable only in Personal sound mode.

### Balance

This item is used to adjust the audio output between left and right speaker from -50 to 50.

### Auto Volume

An automatic volume control automatically adjusts the volume or loudness, set it "ON" for an ambient volume to make the audio signal better heard.

### Surround Sound

Press the "▲ / ▼" button to select the "Surround Sound" item, and then use "▶" button to turn the surround sound function TruSurround/off.

### SPDIF Mode

Available options: Auto, PCM, Off.

### AD Switch

 
 
This item is used to turn on/off Audio Description function. For Visually Impaired users, this function can help to know a certain scene or action through the narration, instead of see it.

#### NOTES:

- AD Switch function works only when you are viewing programs that contain related narration information.
- The users can adjust AD Volume when AD Switch is on.

## TIME

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "▲ / ▼" button to select the "Time" menu.
2. Press the "OK" button to enter the "Time" menu setting, use "▲ / ▼" to move the menu bar, and then press "▶" button to adjust the value of selected item.
3. Press "MENU" button to return to upper menu.

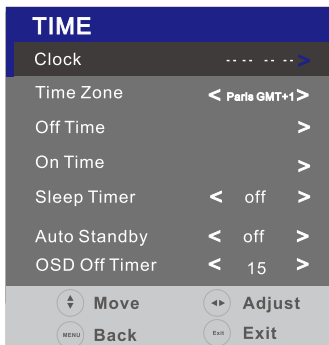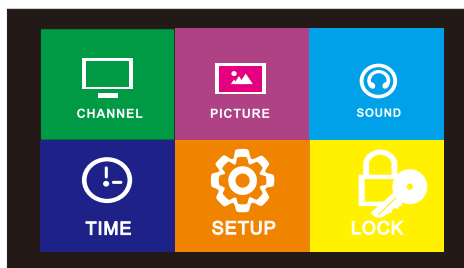

### **Clock**

It displays current system time when an available channel was saved.

### **Time Zone**

This item is used to select desired time zone.

### **Off Time**

This item is used to set the time to turn off the TV.

### **On Time**

This item is used to set the time to turn on the TV.

### **Sleep Timer**

This item is used to set the automatic sleep time when no signals.

Available options: Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min

### **Auto Standby**

This item is used to select desired Auto Sleep (standby) duration when no operations were done through the remote control.

Available options: Off, 3/4/5 hours.

 
 
### **OSD off Timer**

This item is used to select desired OSD menu active time.

Available options: 5/10/15/20/30/35 seconds.

## Setup

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "▲ / ▼" "▶" button to select the "Tine" menu.
2. Press the "OK" button to enter the "Tine" menu setting, use "▲ / ▼" to move the menu bar, and then press "▶" button to adjust the value of selected item.
3. Press "MENU" button to return to upper menu.

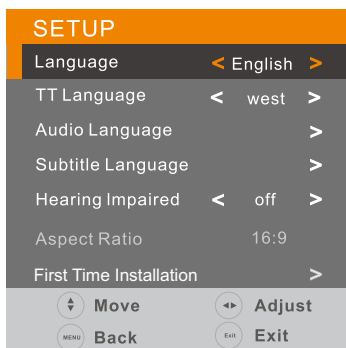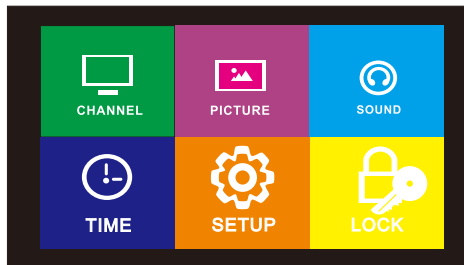

### Language

This item is used to select desired on-screen display language.

### TT Language

This item is used to select desired teletext language.

### Audio Language

This item is used to select desired audio language.

### Subtitle Language

This item is used to select desired subtitle language.

### Hearing Impaired

This item is used to turn on/off Hearing Impaired function. For Hearing Impaired users, this function can assist help to know a certain scene or action through the caption, instead of hearing it.

**NOTE:** Hearing Impaired function works only when you are viewing programs that contain related caption information.

### Aspect Ratio

This item is used to adjust the video size.

Available options: Auto, 4:3, 16:9, Zoom1, Zoom2.

**NOTE:** The available video size may be different for different input source.

### First Time installation

With this option it is possible to call up the first installation menu.

### Energy Mode

This item is used to select Home Mode or Store Mode (the brightness is higher than Home Mode).

### Software Update (USB)

This item is used to update software through the USB memory device.

### Reset

This item is used to recall factory default settings.

### HDMI CEC

Press OK or RIGHT navigation button to enter it.

To use HDMI CEC function:

 
- Make sure the HDMI device (Amplifier, etc.) is connected correctly.
- Press SOURCE button on the unit or remote control to select HDMI input source.

HDMI CEC: turn on/off HDMI CEC.

HDMI ARC: turn on/off ARC function (in HDMI 1 port only).



Auto Pouer: turn on/off TV Auto Power On.

Device Menu: display the root menu of external device connected.

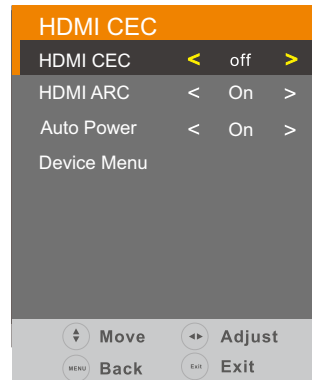

## Lock

  1. Press the "MENU" button on the remote control to enter the OSD menu, then press "▲ / ▼" "▶" button to select the "Lock" menu.
2. Press the "OK" button to enter the "Tine" menu setting, use "▲ / ▼" to move the menu bar, and then press "▶" button to adjust the value of selected item.
3. Press "MENU" button to return to upper menu.

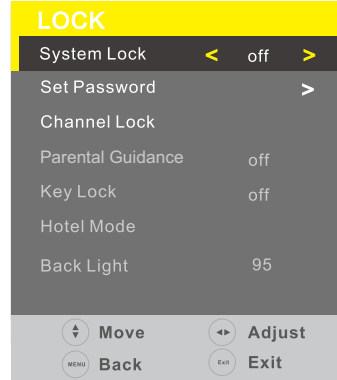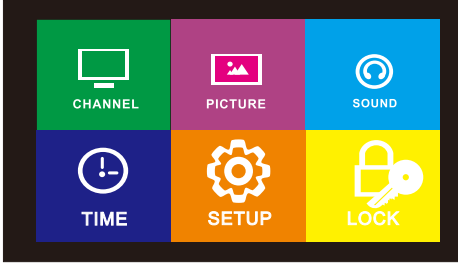

When entered "Lock", input the factory default password "0000" using number buttons on remote control. Press UP/DOWN navigation button to select preferred item.

NOTE: If you forget the password, please use the universal password "8899".

### System Lock

This item is used to turn on/off Lock System.

### Set Password

Input a new password twice using number buttons on remote control to set a new password.

### Channel Lock

Press OK or RIGHT navigation button to enter it.

Press UP/DOWN navigation button to select the channel which you want to lock.

Press GREEN button repeatedly to lock/unlock the highlighted channel.

### Parental Guidance

This item is used to select the range of parental guidance.

### Key Lock

This item is used to turn on/off key lock.

### Hotel Mode

This item is used to clear lock.

Hotel Mode: turn on/off Hotel Mode.

Source Lock: turn on/off the lock of available sources.

Default Source: set the default source.

Default Prog: set the default digital program.

Default Volume: set the default volume level.

Max Volume: set the maximum volume level.

 
CH Table Import: import database from USB device.

CH Table Export: export database to USB device.

Clear Lock: Clear above settings.

### BackLinght

This item is used to adjust the brightness.

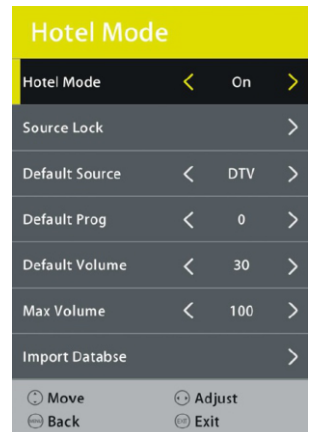

## IX - Important Notice

The display of this television is made up of a large number of colour pixels. Although it has at least 99.999% of effective pixels, some black dots or bright spots (red, green or blue) may appear constantly on the screen. This is a characteristic of the screen (according to industrial standards), and is not a defect.

 





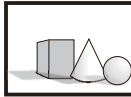 


Sometimes, the screen may include an unlit pixel, which will be seen as a blue, red, green or black dot. This does not affect the functioning of the product and should be considered normal.

### Note on Defective Pixels

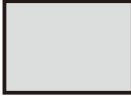Your product has been manufactured with great care. Nevertheless, it is possible that some pixels remain constantly on or unlit. Please refer to the table below about the tolerance level for defective pixels on this product.

Screen Size	Resolution	No. of Bright or Dark Sub-Pixels (Color Pixels)	No. of Bright or Dark Pixels (White or Black)	Continuous Line
24	1366*768	5	2	0

## X - Troubleshooting

<p>No image and voice</p> <div style="text-align: center;">     </div>	<p>Possible causes:</p> <ul style="list-style-type: none"> <li>*Power cord, antenna or input devices are not connected;</li> <li>*The TV set is not powered on.</li> </ul> <p>Solutions:</p> <ul style="list-style-type: none"> <li>*Check Power cord ,antenna and input devices;</li> <li>*Press Power key on the remote control;</li> <li>*Press Power key on the set to power it off for 5 seconds and then re-power it on .</li> </ul>
<p>No voice</p> <div style="text-align: center;">     </div>	<p>Possible causes:</p> <ul style="list-style-type: none"> <li>*The volume is too low;Muted or cancelled;</li> <li>*Incorrect sound system.</li> </ul> <p>Solutions:</p> <ul style="list-style-type: none"> <li>*Press Volume key to turn up the volume;</li> <li>*Press Mute key to cancel Mute mode.</li> <li>Well connect vconnection to the background sound;</li> <li>*Change the sound system in the menu.</li> </ul>
<p>Snows and noises:</p> <div style="text-align: center;">     </div>	<p>Possible causes:</p> <ul style="list-style-type: none"> <li>*The cable is damaged or gets loose;</li> <li>*Incorrect channel preset;</li> <li>*Improper antenna positioning.</li> </ul> <p>Solutions:</p> <ul style="list-style-type: none"> <li>*Check whether the connection of the antenna cable , DVD and the cables is correct;</li> <li>*Reset channels or fine tune the channel;</li> <li>*Adjust the direction of the antenna.</li> </ul>
<p>Achromatic colour</p> <div style="text-align: center;">     </div>	<p>Possible causes:</p> <ul style="list-style-type: none"> <li>*Incorrect Colour system settings;Low chroma level setting ;</li> <li>*Improper antenna positioning.</li> </ul> <p>Solutions:</p> <ul style="list-style-type: none"> <li>*Change the colour system into the local system in the menu ;</li> <li>*Increase chroma level;</li> <li>*Adjust the direction of the antenna.</li> </ul>
<p>Remote control is no effect :</p> <div style="text-align: center;">  </div>	<p>Possible causes:</p> <ul style="list-style-type: none"> <li>*Battery runs up;</li> <li>*Incorrect battery loading;</li> </ul> <p>Solutions:</p> <ul style="list-style-type: none"> <li>*Check the battery electricity or replace the battery;</li> <li>*Check if the poles of the battery are correct.</li> </ul>
<p>Note: To properly watch CANAL + using this product, carry out DVB-T channel search when CANAL + is unsarambled.          Form 12:30 p.m. to 1:30 p.m.          From 7:00 p.m. to 8:30 p.m.</p>	

For any other problem that may occur on your device, please contact Customer Service.