

Quickstart guide

NKS30
PORTABLE SING-A-LONG KID'S
BOOMBOX

NIKKEI




- EN For more information see www.nikkei.eu
- NL Voor meer informatie zie www.nikkei.eu
- DE Für weitere Informationen siehe www.nikkei.eu
- FR Pour plus d'informations, veuillez consulter le site www.nikkei.eu
- ES Para más información, visite www.nikkei.eu
- DK For mere information besøg www.nikkei.eu
- FI Lisätietoja löydät osoitteesta www.nikkei.eu




1 Check the contents

Controleer de inhoud
Kontrollieren Sie den Inhalt
Vérifiez le contenu
Revise el contenido
Kontroller indholdet
Tarkista sisältö

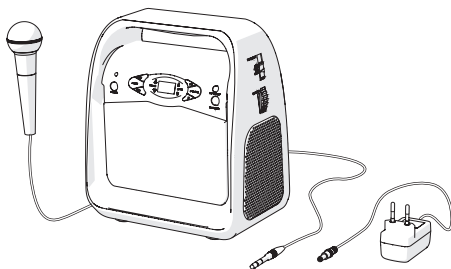


2 Connect to the mains

Sluit aan op de netspanning
Schließen Sie die Netzspannung an
Raccordez au réseau électrique
Conecte a la red eléctrica
Tilslut til lysnettet
Kytke verkkovirtaan

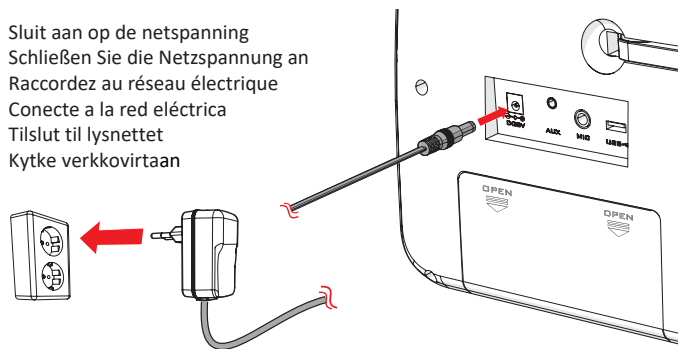

3 Main parts

Belangrijkste onderdelen
Hauptkomponenten
Pièces principales
Partes principales
Hoveddele
Pääosat

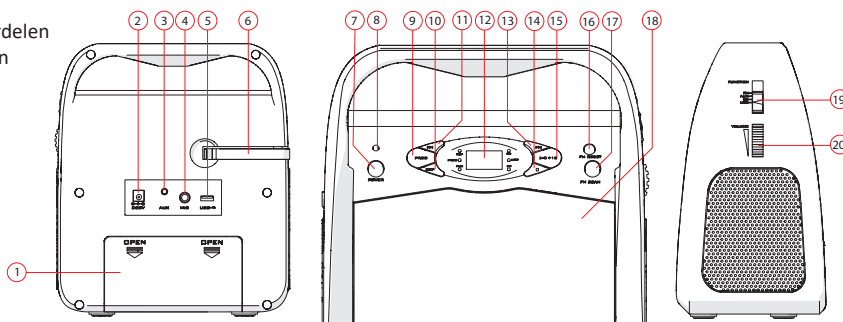

1 BATTERIES	12 DISPLAY
2 DC 9V	13 NEXT
3 AUX	14 STOP
4 MIC	15 PLAY/PAUSE/+10
5 USB	16 FM RESET
6 MIC HOLDER	17 FM SCAN
7 POWER	18 CD HOLDER
8 POWER LED	19 FUNCTION
9 PROGRAM	20 VOLUME
10 REPEAT	
11 PREVIOUS	


4 Turn on the device

Schakel het apparaat in
Schalten Sie das Gerät ein
Mettez l'appareil en marche
Encienda el aparato
Tænd for apparatet
Kytke laite toimintaan



5 Adjust the volume


Pas het volume aan
Passen Sie die Lautstärke an
Réglez le volume
Ajuste el volumen
Indstil volumen
Sääd äänenvoimakkuutta

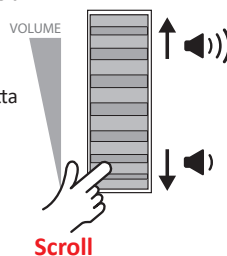

Scroll

6 Select the input



Selecteer de invoer
Wählen Sie den Eingang
Sélectionnez l'entrée
Selecione el input
Vælg indgangen
Valitse tulo

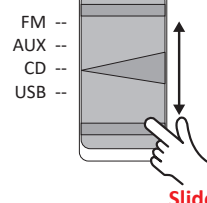

Slide



7 Insert a CD

Plaats een CD
Legen Sie eine CD ein
Insérez un CD
Inserte un CD
Indsæt en CD
Aseta CD

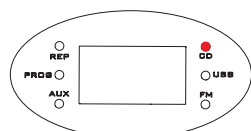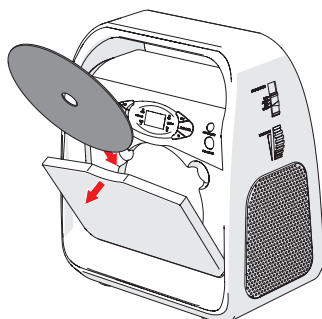

8 Insert a USB drive


Plaats een USB-stick
Legen Sie einen USB-Stick ein
Introduisez une clé USB
Inserte una memoria USB
Indsæt en USB-stick
Aseta USB-asema

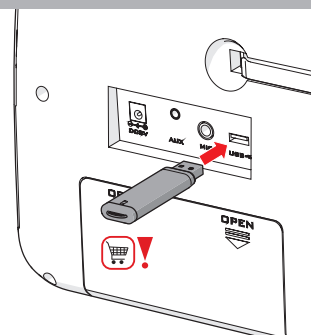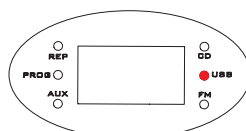

9

Main controls


Hoofdbediening
Hauptsteuer
Opération principale
Control principal
Hovedoperation
Päätoimi

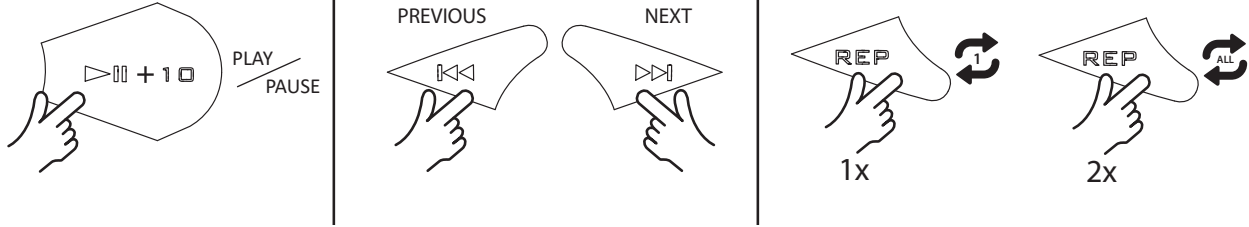

10

Set a playlist



Stel een afspeellijst in
Legen Sie eine Playlist fest
Définir une playlist
Establecer una lista de reproducción
Sæt en spilleliste
Aseta soittolista

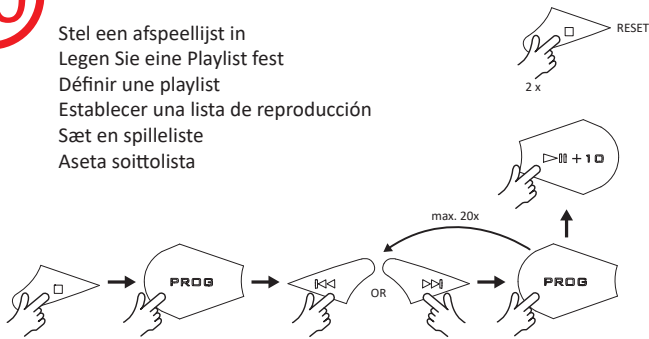

11

FM mode


FM-modus
FM-modus
Mode FM
Modo FM
FM-modus
FM-tilaan

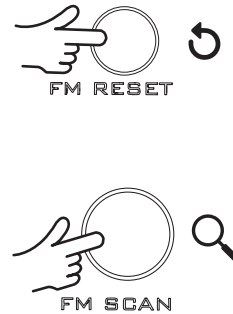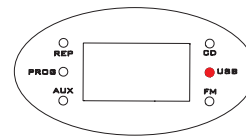

12

Use the microphone

Gebruik de microfoon
Benutze das Mikrofon
Utilisez le microphone
Usa el micrófono
Brug mikrofonen
Käytä mikrofonia

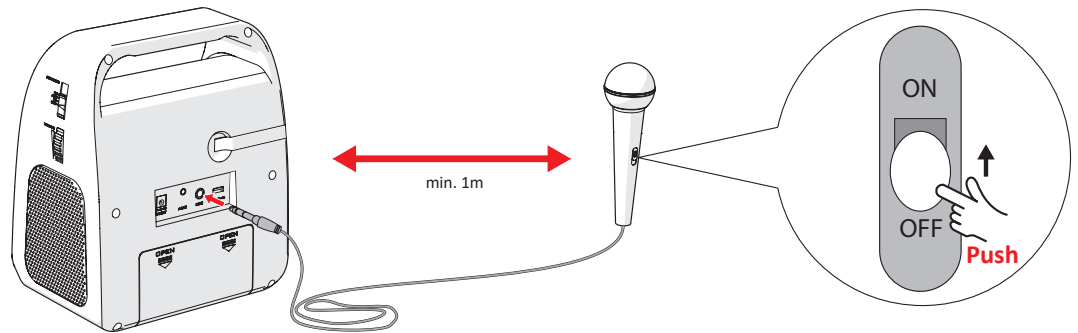

13

AUX IN for external devices


AUX IN voor externe apparaten
AUX IN für externe Geräte
AUX IN pour appareils externes
Conexión AUX IN para dispositivos externos
AUX IN til eksterne apparater
AUX IN -liitäntä ulkoisille laitteille



14

Insert batteries

Plaats batterijen
Legen Sie Batterien ein
Placez les piles
Coloque las baterías
Placer batterie
Aseta paristot

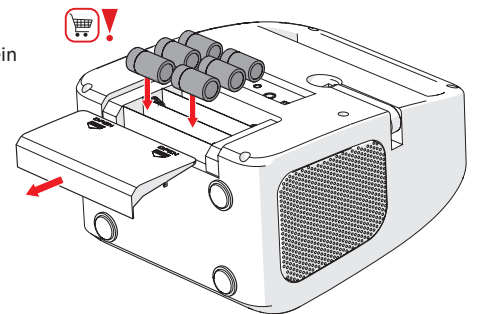

Specifications

Specificaties

Technische Daten

Spécifications

Especificaciones

Specifikationer

Tekniset tiedot

Power supply:
AC~100-240V/50-60Hz/
350mA
Battery supply: 9VDC/6x
C-type/R14
Power consumption: 16W
Output: 9VDC/1A/2x1,2W
Frequency range:
FM 87,5-108 MHz

Stroomvoeding:
AC~100-240V/50-60Hz/
350mA
Batterijvoeding: 9VDC/6x
C-type/R14
Stroomverbruik: 16W
Output: 9VDC/1A/2x1,2W
Frequentiebereik:
FM 87,5-108 MHz

Stromzufuhr:
AC~100-240V/50-60Hz/
350mA
Batterieverorgung: 9VDC-
C/6x C-Typ/R14
Stromverbrauch: 16W
Ausgabe: 9VDC/1A/2x1,2W
Frequenzbereich:
FM 87,5-108 MHz

Distribution
AC~100-240V/50-60Hz/
350mA
Alimentation par batterie:
9VDC/6x Type C/R14
Consommation de
courant: 16W
Sortie: 9VDC/1A/2x1,2W
Plage de fréquence:
FM 87,5-108 MHz
Poids: 1300 g
Dimensions:
218 x 126 x 251 mm
Garantie: 24 mois

Fuente de alimentación:
AC~100-240V/50-60Hz/
350mA
Suministro de batería:
9VDC/6x C-tipo/R14
Consumo de energía: 16W
Salida: 9VDC/1A/2x1,2W
Intervalo de frecuencia:
FM 87,5-108 MHz
Peso: 1300 g
Dimensiones:
218 x 126 x 251 mm
Garantía: 24 meses

Strömforsyning:
AC~100-240V/50-60Hz/
350mA
Batteriforsyning: 9VDC/6x
C-typen/R14
Strömforbrug: 16W
Produktion: 9VDC/1A/2x-
1,2W
Frekvensområde
FM 87,5-108 MHz
Vægt: 1300 g
Dimensioner:
218 x 126 x 251 mm
Garanti: 24 Måneder

Virtalähde:
AC~100-240V/50-60Hz/
350mA
Akun tarjonta: 9VDC/6x
C-tyypinen/R14
Virrankulutus: 16W
Tulostus: 9VDC/1A/2x-
1,2W
Taajuusalue:
FM 87,5-108 MHz
Paino: 1300 g
Mitat:
218 x 126 x 251 mm
Takuu: 24 kuukaudet