





- EN For more information see [www.elmarc.eu](http://www.elmarc.eu)
- NL Voor meer informatie zie [www.elmarc.eu](http://www.elmarc.eu)
- D Für weitere Informationen siehe [www.elmarc.eu](http://www.elmarc.eu)
- F Pour plus d'informations, veuillez consulter le site [www.elmarc.eu](http://www.elmarc.eu)
- E Para más información, visite [www.elmarc.eu](http://www.elmarc.eu)
- DK For mere information besøg [www.elmarc.eu](http://www.elmarc.eu)
- FI Lisätietoja löydät osoitteesta [www.elmarc.eu](http://www.elmarc.eu)





## 1 Connect to the mains

Sluit op het lichtnet aan  
Schließen Sie die Netzspannung an  
Raccordez au réseau électrique  
Conecte a la red eléctrica  
Tilslut til lysnettet  
Kytke verkkovirtaan

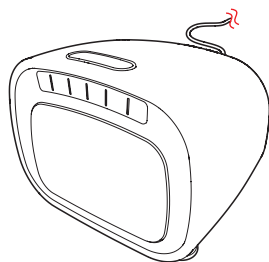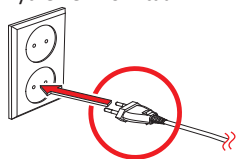


## 2 Insert the batteries

 Plaats de batterijen  
Legen Sie die Batterien ein  
Placez les piles  
Coloque las pilas  
Sæt batteriet i  
Paristojen asettaminen

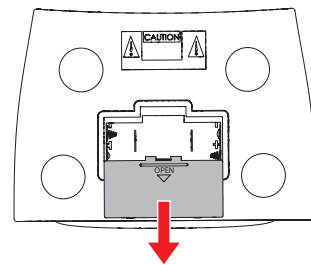

## 3 Buttons

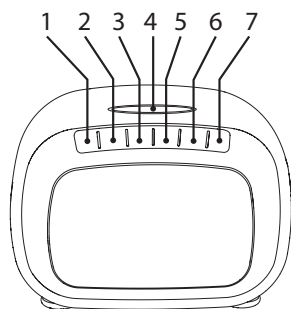


1	MEM/TIME
2	VOL-/AL1
3	VOL+/AL2
4	SNOOZE/DIMMER/SLEEP
5	TUN-/HOUR
6	TUN+/MIN
7	⏻/FUNC

## 4 The FUNCTION button


De toets FUNCTION  
Die Taste FUNCTION  
La touche FUNCTION  
Los botones FUNCTION  
Knappen FUNCTION  
Painike FUNCTION

FUNCTION

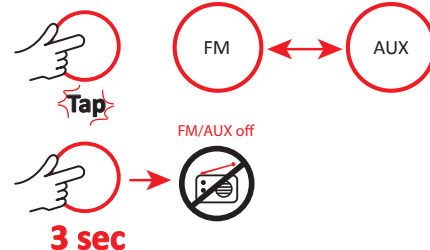

## 5 Setting the time

Tijd instellen  
Zeit einstellen  
Régler l'heure  
Configuración del tiempo  
Indstil tid  
Aseta aika

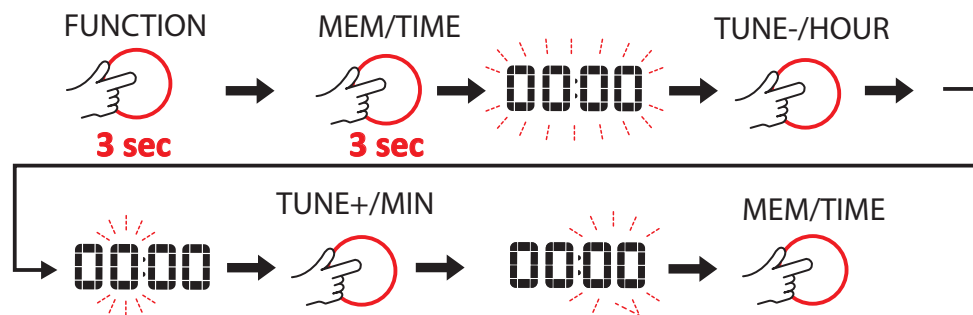

## 6 Adjust frequency automatically

Pas automatisch de frequentie aan  
Ändern Sie die Frequenz automatisch  
Adaptez la fréquence automatiquement  
Ajuste automático de frecuencia  
Indstil frekvensen automatisk  
Säädä taajuus automaattisesti



## 7 Adjust the frequency manually


Handmatig frequentie aanpassen  
Frequenz manuell anpassen  
Régler manuellement la fréquence  
Ajustar frecuencia manualmente  
Frekvensen justeres manuelt  
Säädä taajuus käsin



# 8

## Setting the alarm time 1 & 2


De alarmtijd instellen  
 Einstellen der Alarmzeit  
 Réglage de l'heure de l'alarme  
 Ajuste de la hora de alarma  
 Alarmtidspunktet indstilles  
 Säädä herätysaika

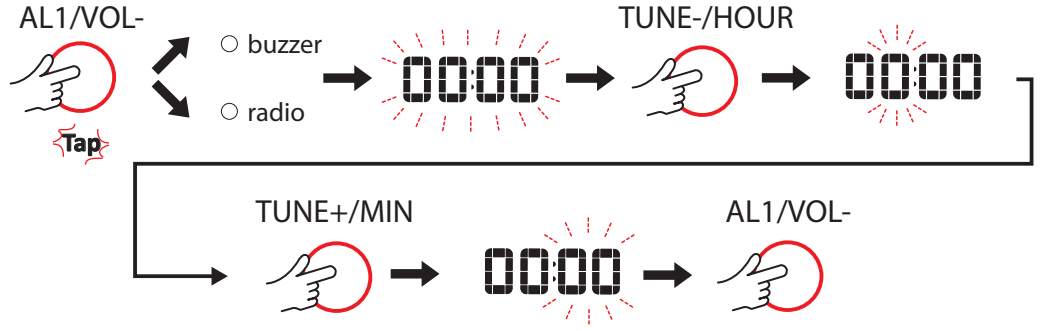

# 9

## Save a radiostation into the memory (max. 20)

Radiozender opslaan in het geheugen (max. 20)  
 Radiosender im Speicher speichern (max. 20)  
 Enregistrer la station de radio dans la mémoire (max. 20)  
 Guardar una emisora de radio en la memoria (max. 20)  
 Radiosender gemmes i hukommelsen (max. 20)  
 Tallenna asema muistiin (max. 20)

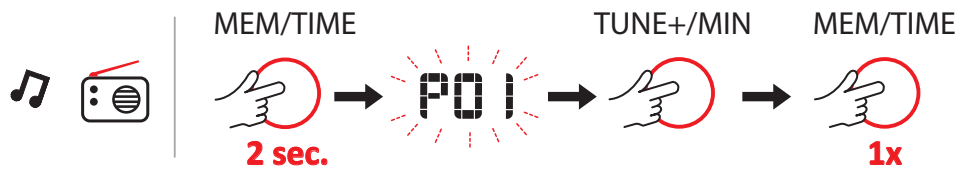


# 10

## AUX IN jack for external devices


AUX IN voor externe apparaten  
 AUX IN für externe Geräte  
 AUX IN pour appareils externes  
 Conexión AUX IN para dispositivos externos  
 AUX IN til eksterne apparater  
 AUX IN -liitäntä ulkoisille laitteille

### FUNCTION

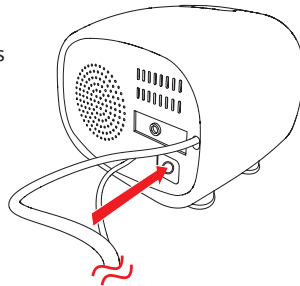

## Snooze function

Sluimeralarm  
 Schlummerfunktion  
 Rappel d'alarme  
 Alarma de repetición  
 Slumrealarm  
 Torkkuherätys

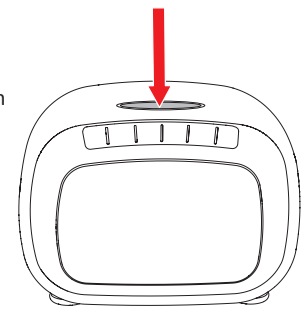


10 min

# 11

## Sleep timer

Slaap timer  
 Sleep-Timer  
 Minuteur de sommeil  
 Temporizador de apagado  
 Dvaletimer  
 Nukahtamistoiminto

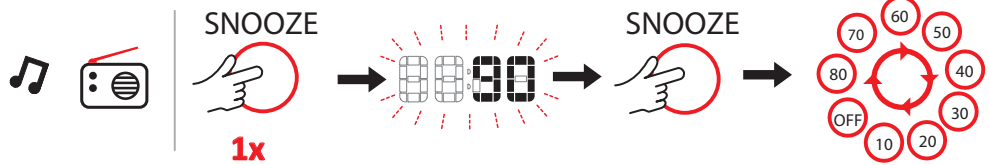

### Specifications

### Specificaties

### Technische Daten

### Spécifications

### Especificaciones

### Specifikationer

### Tekniset tiedot

Power supply: AC 230V ~ 50 Hz	Stroomvoeding: AC 230V ~ 50 Hz	Stromzufuhr: AC 230V ~ 50 Hz	Alimentation électrique: AC 230V ~ 50 Hz	Fuente de alimentación: AC 230V ~ 50 Hz	Strømforsyning: AC 230V ~ 50 Hz	Syöttövirta: AC 230V ~ 50 Hz
LCD Display Line in jack: 3.5 mm	LCD Display Line-in aansluiting: 3,5 mm	LCD-Display Line-in-Buchse: 3,5 mm	Affichage LCD Prise entrée de ligne : 3,5 mm	Pantalla LCD Toma de entrada de línea: 3,5 mm	LCD-display Line-in stik: 3,5 mm	Nestekidenäyttö Linjalitiin: 3,5 mm
Dimensions: 16 x 10 x 7 cm Digital FM Radio Alarm clock Weight: 414 g	Afmetingen: 16 x 10 x 7 cm Digitale FM radio Alarmklok Gewicht: 414 g	Abmessungen: 16 x 10 x 7 cm Digitales FM-Radio Wecker Gewicht: 414 g	Dimensions: 16 x 10 x 7 cm Radio FM numérique Horloge alarme Poids: 414 g	Dimensiones: 16 x 10 x 7 cm Radio FM digital Reloj alarma Peso: 414 g	Dimensioner: 16 x 10 x 7 cm Digital FM-radio Alarmur Vægt: 414 g	Mitat: 16 x 10 x 7 cm Digitaalinen FM-radio Herätyskello Paino: 414 g