

Quickstart guide

SPEAKERBOXX100
PARTY BLUETOOTH SPEAKER

NIKKEI




- (EN) For more information see www.nikkei.eu
- (NL) Voor meer informatie zie www.nikkei.eu
- (DE) Für weitere Informationen siehe www.nikkei.eu
- (FR) Pour plus d'informations, veuillez consulter le site www.nikkei.eu
- (ES) Para más información, visite www.nikkei.eu
- (DK) For mere information besøg www.nikkei.eu
- (FI) Lisätietoja löydät osoitteesta www.nikkei.eu



1 Check the contents


Controleer de inhoud
Kontrollieren Sie den Inhalt
Vérifiez le contenu
Revise el contenido
Kontroller indholdet
Tarkista sisältö

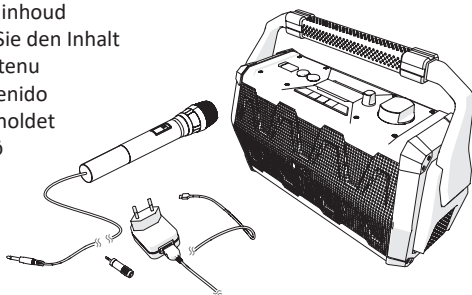

2 The buttons


De knoppen
Los botones
Die tasten
Painikkeet
Les boutons
Knapperne

1	POWER ON/OFF/ BATTERY LEVEL
2	PLAY/PAUSE
3	PREVIOUS
4	NEXT
5	SOURCE
6	MICROPHONE VOLUME KNOB
7	MASTER VOLUME KNOB

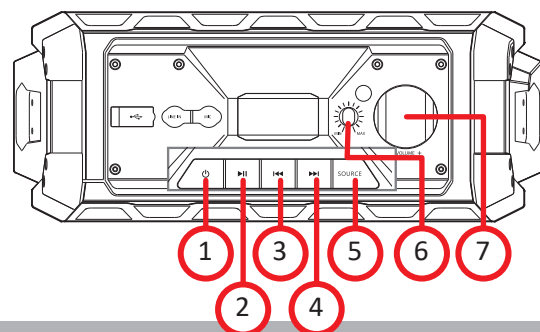


3 Connect to the mains and/or charge the battery

Sluit op het lichtnet aan en laad de batterij op
Schließen Sie die Netzspannung an und laden Sie den Akku
Raccordez au réseau électrique et charge la batterie
Conecte a la red eléctrica, carga la batería
Tilslut til lysnettet, oplader batteriet
Kytke verkkovirtaan, lataa akun

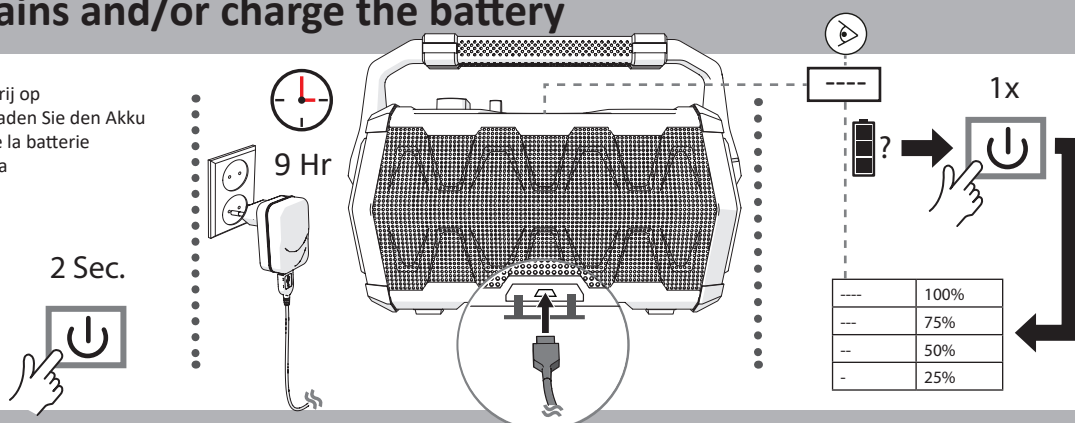


4 The button Source

De Source toets
Die taste Source
La touche Source
La tecla Source
Knapperne Source
Painike Source

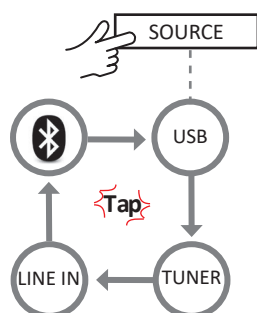


5 Switch to radiomode

Schakel naar de radiomodus
Schalten Sie in den Radiomodus
Basculez en mode radio
Cambio a modo radio
Skift over til radiomodus
Siirry radiotilaan

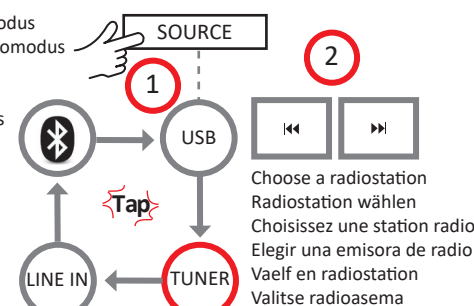

6 Save a radiostation automatically into the memory (max. 30)


Radiosender automatisch opslaan in het geheugen (max. 30)
Radiosender automatisch im Speicher speichern (max. 30)
Enregistrer la station de radio automatiquement dans la mémoire (max. 30)
Guardar una emisora de radio automático en la memoria (max. 30)
Radiosender gemmes i hukommelsen automatisk (max. 30)
Tallenna asema muistiin automaattisesti (max. 30)

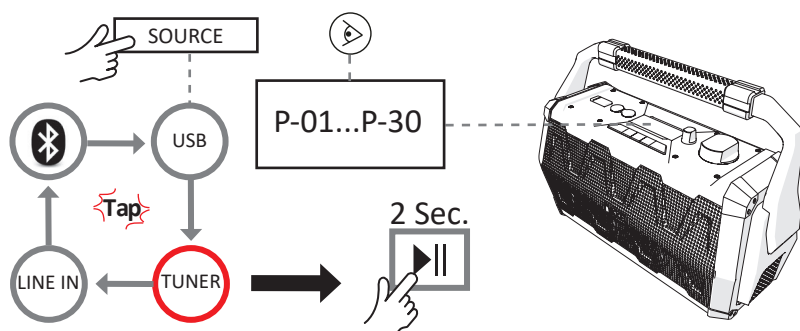

7

Recall station presets


Voorkeuzezenders oproepen
Vorzugssender aufrufen
Appeler les émetteurs pre-chosés
Activar estaciones favoritas
Kald forvalgte stationer
Suosituiimpin asemien valinta

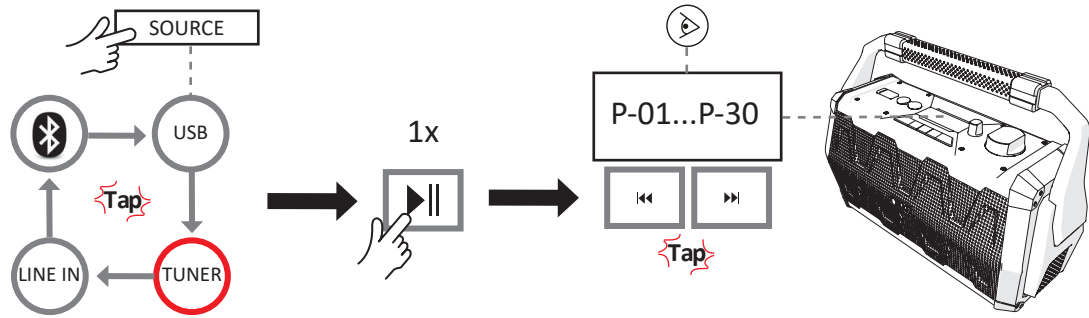

8

USB


USB
USB
USB
USB

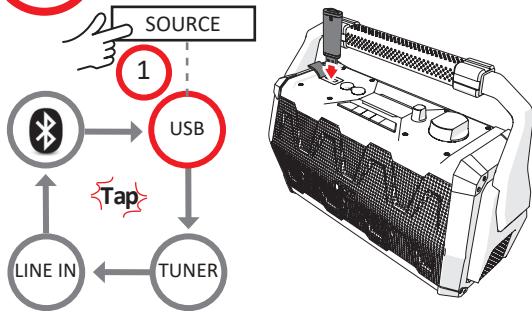

9

Microphone


Microfoon
Mikrofon
Micro
Micrófono
Mikrofon
Mikrofoni

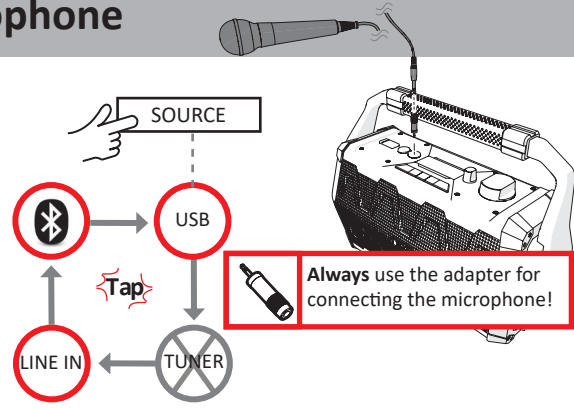

10

Line in


Line in
Line in
Line in
Line in

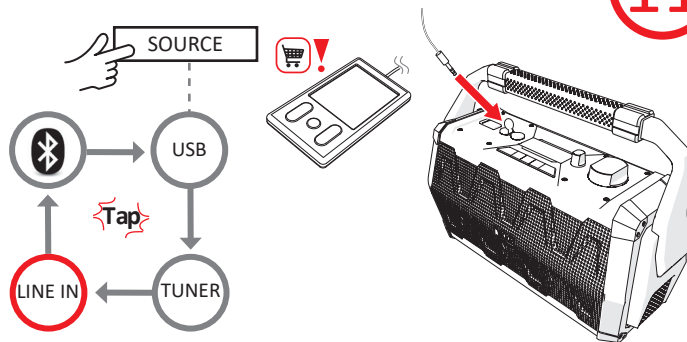

11

Bass function

Bass functies
Bass/Funktionen
Fonctions Bass
Funciones del Bass
Bass/funktioner
Bass/toiminnot

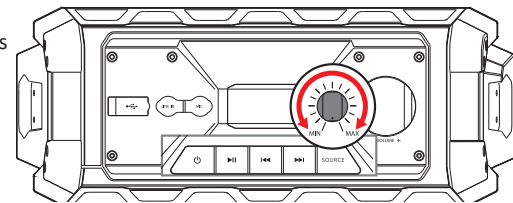


12

Bluetooth connection

Bluetooth-verbinding
Conexion- Bluetooth

Bluetooth-Verbindung
Bluetooth tilslutning

Connexion Bluetooth
Bluetooth-yhteys

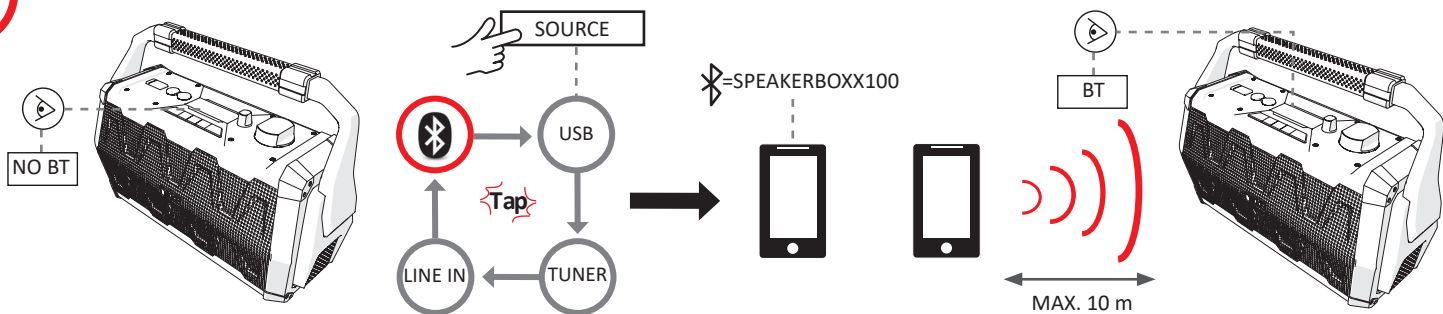

Specifications

Specificaties

Technische Daten

Spécifications

Especificaciones

Specifikationer

Tekniset tiedot

Power supply:
DC IN 5V
Power consumption: 20W

Stroomvoeding:
DC IN 5V
Stroomverbruik: 20W

Stromzufuhr:
DC IN 5V
Stromverbrauch: 20W

Distribution
DC IN 5V
Consommation de
courant: 20W
Plage de fréquence:
FM 87,5-108 MHz
FM Radio

Fuente de alimentación:
DC IN 5V
Consumo de energía: 20W

Strømforsyning: DC IN 5V
Strømförbruk: 20W

Virtalähde: DC IN 5V
Virtrankulutus: 20W

Frequency range:
FM 87,5-108 MHz
FM Radio

Frequentiebereik:
FM 87,5-108 MHz
FM Radio

Frequenzbereich:
FM 87,5-108 MHz
FM Radio

Poids: 2800 g
Dimensions:
275 x 39 x 15 mm
Lithium-ion batterie

Peso: 2800 g
Dimensiones:
275 x 39 x 15 mm
Lithium-ion batería

Vægt: 2800 g
Dimensioner:
275 x 39 x 15 mm
Lithium-ion bateri

Paino: 2800 g
Mitat:
275 x 39 x 15 mm
Lithium-ion akku

Warranty: 24 months

Garantie: 24 maanden

Garantie: 24 Monate

Garantie: 24 mois

Garantía: 24 meses

Garanti: 24 Måneder

Takuu: 24 kuukaudet