

Quickstart guide

SPEAKERBOX300
PARTY BLUETOOTH SPEAKER

NIKKEI




- EN For more information see www.nikkei.eu
- NL Voor meer informatie zie www.nikkei.eu
- DE Für weitere Informationen siehe www.nikkei.eu
- FR Pour plus d'informations, veuillez consulter le site www.nikkei.eu
- ES Para más información, visite www.nikkei.eu
- DK For mere information besøg www.nikkei.eu
- FI Lisätietoja löydät osoitteesta www.nikkei.eu



1 Check the contents


Controleer de inhoud
Kontrollieren Sie den Inhalt
Vérifiez le contenu
Revise el contenido
Kontroller indholdet
Tarkista sisältö

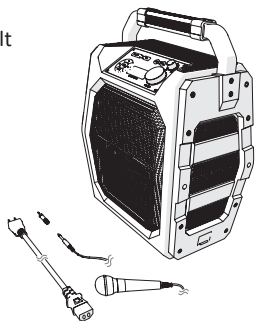

2 The buttons



De knoppen
Los botones
Die tasten
Painikkeet
Les boutons
Knapperne

1	STOP
2	PREVIOUS
3	PLAY/PAUSE
4	SOURCE
5	NEXT
6	MASTER VOLUME KNOB
7	MICROPHONE VOLUME KNOB

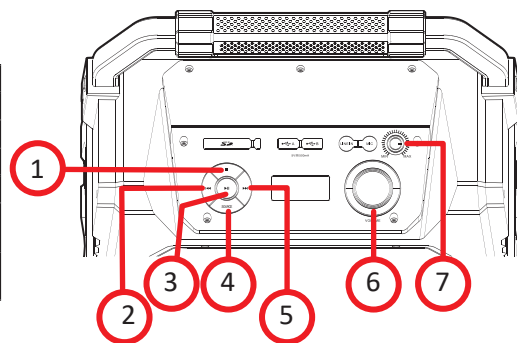


3 Connect to the mains and/or charge the battery

Sluit op het lichtnet aan en laad de batterij op
Schließen Sie die Netzspannung an und laden Sie den Akku
Raccordez au réseau électrique et charge la batterie
Conecte a la red eléctrica, carga la batería
Tilslut til lysnettet, oplader batteriet
Kytke verkkovirtaan, lataa akun

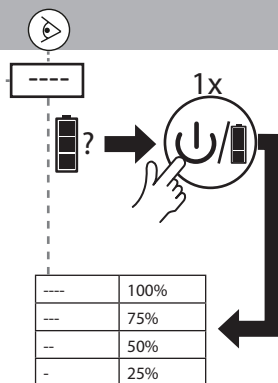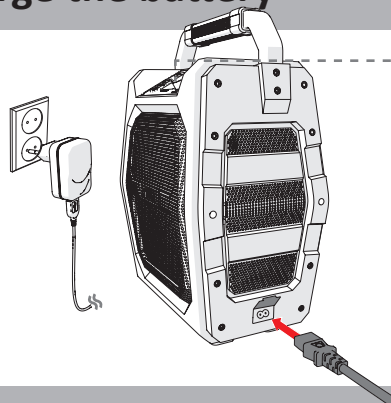

4 The button Source


De Source toets
Die taste Source
La touche Source
La tecla Source
Knapperne Source
Painike Source

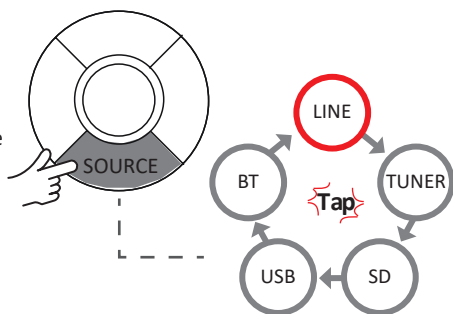

5 Switch to radiomode


Schakel naar de radiomodus
Schalten Sie in den Radiomodus
Basculez en mode radio
Cambio a modo radio
Skift over til radiomodus
Siirty radiotilaan

Choose a radiostation
Radiostation wählen
Choisissez une station radio
Elegir una emisora de radio
Vælf en radiostation
Valitse radioasema

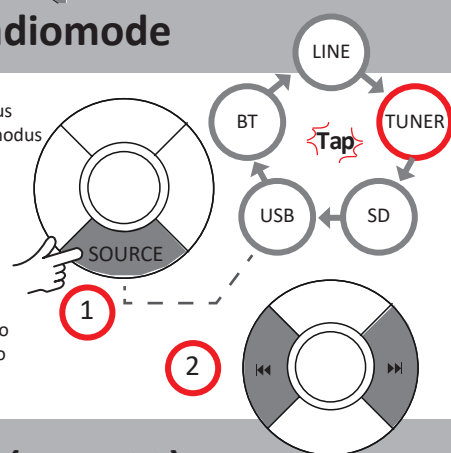

6 Save a radiostation automatically into the memory (max. 30)




Radiozender automatisch opslaan in het geheugen (max. 30)
Radiosender automatisch im Speicher speichern (max. 30)
Enregistrer la station de radio automatiquement dans la memoire (max. 30)
Guardar una emisora de radio automático en la memoria (max. 30)
Radiosender gemmes i hukommelsen automatisk (max. 30)
Tallenna asema muistiin automaattisesti (max. 30)

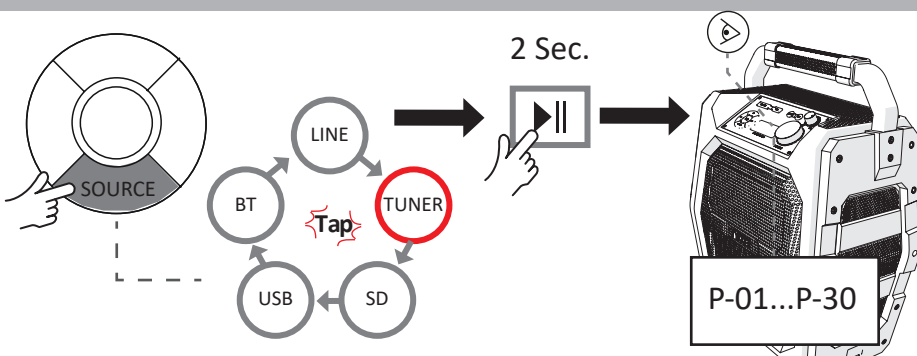

7

Listen to preset radiostations




Voorkeuzezenders oproepen
Vorzugsender aufrufen
Appeler les émetteurs pré-chosés
Activar estaciones favoritas
Kald forvalgte stationer
Suosituimplein asemien valinta

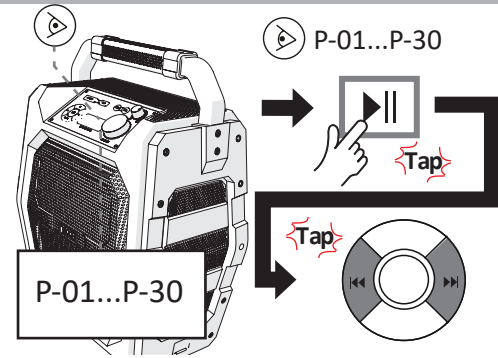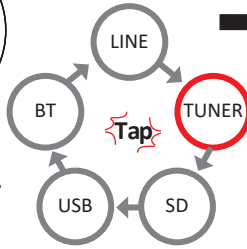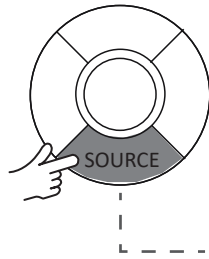

8

USB and SD




USB, SD USB, SD USB, SD
USB, SD USB, SD USB, SD

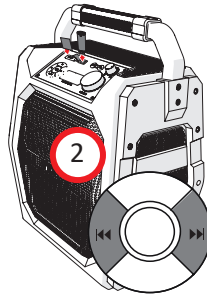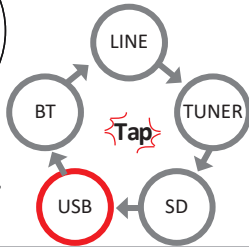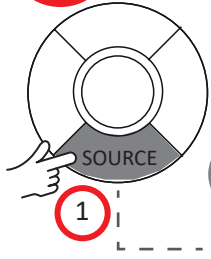

9

Microphone




Microfoon Mikrofon Micro
Micrófono Mikrofon Mikrofon

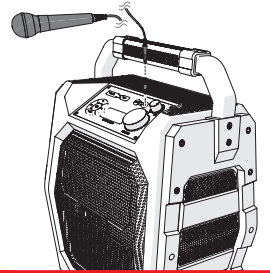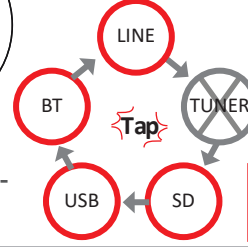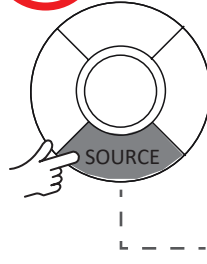

10

Line in


Line in Line in Line in
Line in Line in Line in

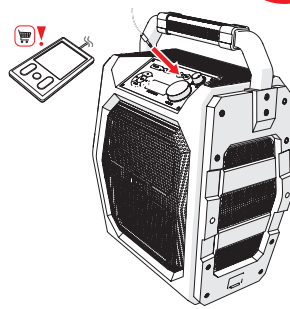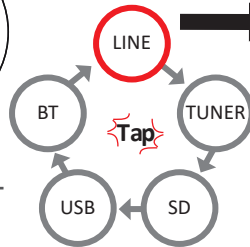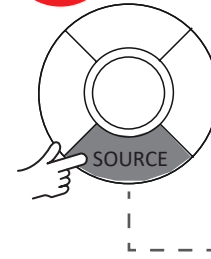

11

Bass function

Bass functies
Bass/Funktionen
Fonctions Bass
Funciones del Bass
Bass/funktioner
Bass/toiminnot

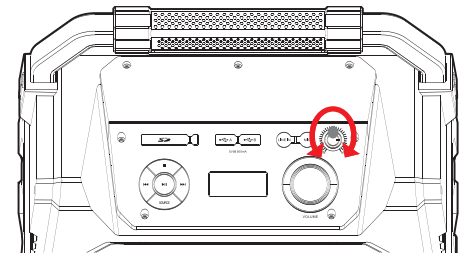






12

Bluetooth connexion

Bluetooth-verbinding
Conexion-Bluetooth

Bluetooth-Verbindung
Bluetooth tilslutning

Connexion Bluetooth
Bluetooth-yhteys

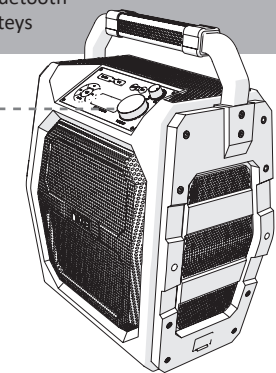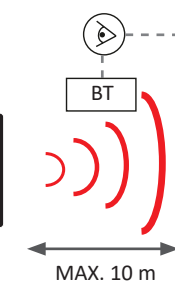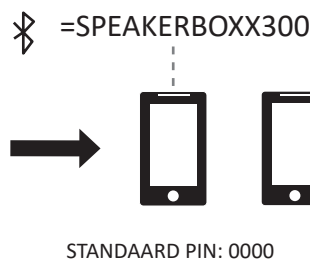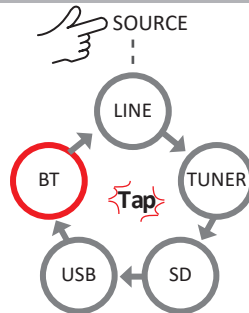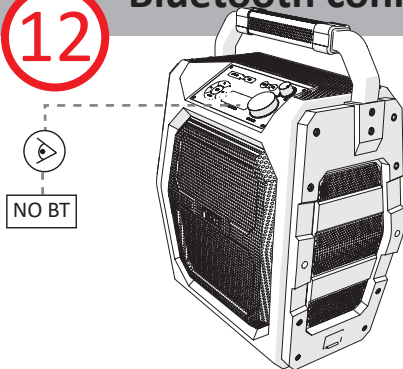

Specifications

Specificaties

Technische Daten

Spécifications

Especificaciones

Specifikationer

Tekniset tiedot

Power supply:
AC~100-240V/50/60Hz
Power consumption: 30W

Stroomvoeding:
AC~100-240V/50/60Hz
Stroomverbruik: 30W

Stromzufuhr:
AC~100-240V/50/60Hz
Stromverbrauch: 30W

Distribution
AC~100-240V/50/60Hz
Consommation de
courant: 30W

Fuente de alimentación:
AC~100-240V/50/60Hz
Consumo de energía: 30W

Strömforsyning:
AC~100-240V/50/60Hz
Strömförbruk: 30W

Virtalähde:
AC~100-240V/50/60Hz
Virrankulutus: 30W

Frequency range:
FM 87,5-108 MHz
FM Radio

Frequentiebereik:
FM 87,5-108 MHz
FM Radio

Frequenzbereich:
FM 87,5-108 MHz
FM Radio

Plage de fréquence:
FM 87,5-108 MHz
FM Radio

Intervalo de frecuencia:
FM 87,5-108 MHz
FM Radio

Frekvensområde
FM 87,5-108 MHz
FM Radio

Taajuusalue:
FM 87,5-108 MHz
FM Radio

Weight: 5700 g
Dimensions:
313 x 41 x 19 mm
Lead-acid battery

Gewicht: 5700 g
Afmetingen:
313 x 41 x 19 mm
Lead-acid batterij

Gewicht: 5700 g
Abmessungen:
313 x 41 x 19 mm
Lead-acid Batterie

Poids: 5700 g
Dimensions:
313 x 41 x 19 mm
Lead-acid batterie

Peso: 5700 g
Dimensiones:
313 x 41 x 19 mm
Lead-acid batería

Vægt: 5700 g
Dimensioner:
313 x 41 x 19 mm
Lead-acid bateri

Paino: 5700 g
Mitat:
313 x 41 x 19 mm
Lead-acid akku

Warranty: 24 months

Garantie: 24 maanden

Garantie: 24 Monate

Garantie: 24 mois

Garantía: 24 meses

Garanti: 24 Måneder

Takuu: 24 kuukaudet