



OK OAP 3040-8

INSTRUCTION MANUAL



DRAWINGS AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Table of Contents

Features	3
Precautions	3
Warning	3
Buttons & Controls.....	4
Main menu	5
Music	6
Movie.....	8
Record Mode	9
Voice	10
FM mode.....	11
Picture.....	12
SYS Setup	13
TEXT	14
Video Conversion Tool.....	14
Video Conversion Steps	14
Troubleshooting.....	16

Features

- 1.8-inch TFT display
- 128x160 pixel display resolution
- Earphones included
- Plays AVI (128x160) and AMV video file format
- Plays MP3, WMA and WAV audio file formats
- Picture browsing of JPEG file format
- Built-in Micro-SD card slot, supports up to 16GB
- Built-in 350mAh Li-poly battery
- Built-in FM radio
- Supports TXT e-book format
- Multi-language support
- Available in a wide range of attractive colours

Precautions


Please follow these tips to preserve the operational lifespan of your Digital Media Player:

- It is recommended that you allow the battery to charge fully before using the device for the first time. Do not recharge unattended for longer than 4 hours.
- Do not hang the player by its earphones or cables
- Never force any cable connectors into the ports of your Digital Media Player or computer. Always make sure that your cable connectors are identical in shape and size before attempting to connect.
- When disconnecting your digital media player from a computer, use the Safely Remove Device function on your computer. Do not disconnect your digital media player whilst transmitting data.

Warning

- Do not use this player in extreme temperatures. Keep away from extremely hot, cold, dry or damp areas. Also keep away from water, fire and radiation.
- Do not dismantle your digital media player.
- Do not allow young children to use your player unsupervised.
- Do not install unknown/foreign software onto your digital media player.

Buttons & Controls

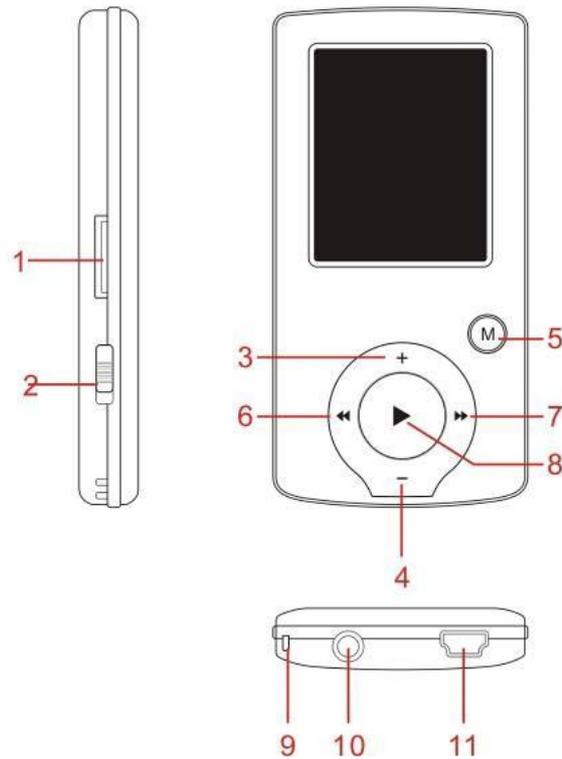

1. Micro SD Card slot
2. ON/OFF power switch
3. VOL+
4. VOL-
5. Enter menu and exit sub-menu, confirm selection (under any status, hold [MENU] and you will enter main menu)
6. Previous/ Back
7. Next/Forward
8. Play/Pause, Power ON/ OFF
9. Hand strap hole (hand strap not included)
10. Earphone socket
11. USB socket

Basic Operation

Power on & Power off:

Power on: Hold the ▶ (play/stop) button for 3 seconds to switch the player on.

Power off: Hold the ▶ (play/stop) button for 3 seconds to turn the player off.

Please note: when the battery power is low, the device will power off automatically.

Adjust volume: With MP3 mode, AMV/AVI mode or Voice mode, press [VOL-] or [VOL+] to decrease/increase the volume in one step, or hold the [VOL-] or [VOL+] button to decrease/increase continuously.

Expansion Card:

Insert the TF card into the Micro SD card slot. The Card folder can be viewed in the menu. If not with the TF card, no card folder is available in the menu.

Charge/Connect/Disconnect from PC

Connect the device to your PC by USB Cable to use it as a Removable Disk.

To charge the device or disconnect the device, press “Menu button” under USB connected.


Main menu

Hold [MENU] to enter the main menu. Press [PRE] or [NEXT] to switch modes.



Music

Select "Music" in the main menu

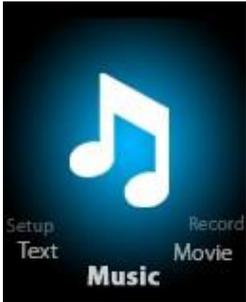

Press [MENU] to confirm your selection then press the PLAY/STOP [>II] button to play the song. Whilst the music is playing, press the [MENU] button to enter the sub-menu:



Select the MUSIC mode in the main menu, press [MENU] to confirm your selection and then press the PLAY/STOP [>II] button to play the song. Whilst music is playing, press the [MENU] button to enter the sub-menu:



All Songs	Display all the songs		
Album list	Display the album		
Artists	Display the singer of the song		
Genre	Display the genre of the song		
Create Playlist	Create a playlist		
Setting	Repeat		Normal; Repeat one; Folder; Repeat Folder; Repeat All; Random; Intro.
	Equalizer		NATURAL, ROCK, POP, CLASSIC, SOFT, JAZZ, DBB
	Replay mode	Replay	A-B repeat, when “A” in the  icon blinks, press [NEXT] to confirm starting point, press [NEXT] to confirm “B” point. The player will replay from A to B according to the setting in the replay times. (Return
			to A-B replay mode by pressing the [PRE] button to such a status)
		Replay times	Set how many times the A-B point should replay. The maximum is 10 times (1-10)
		Replay gap	Set the replay time gap between each replay
Exit	Exit sub-menu		

This device supports the Lyrics display. To fully display the contents of the song, you must make sure that the name of the song under the music folder is exactly the same as the one under the LRC file. For example, if you put a “song.mp3” in the music folder; the same name “song.lrc” should be placed under the LRC file.


Local folder	Indicate the folder of the file currently playing
Delete file	Delete the song currently playing
Delete All	Delete all songs

If you want to delete a song whilst it is playing, press [>II] to stop playing, then press the Mode button). Select “Delete file”, choose the file you want to delete, confirm “Delete”, then the screen below will appear:



Movie

Select “Movie” in the main menu

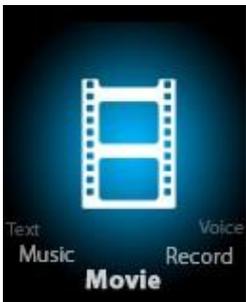

Press [MENU] to confirm selection and then press the PLAY/STOP [>II] button to play the video. Whilst playing the video, Press the [MENU] button to enter the sub-menu.

This works the same as for Music.

Record Mode



Press the [MENU] button to select Record mode in the main menu, then press [MENU] again to enter into the recording sub-menu.



Local folder	Indicate the folder of the file currently recording
REC type:	32K BPS、 64K BPS、 128K BPS、 256K BPS
Exit	Exit sub-menu

After setting, press [>II] to start recording. Only [>II] (play/stop) and [MENU] can be used during recording. To start a new file recording, please press the [>II] (play/stop) button briefly to save the file currently recording.

Please note that this device supports the storage of 99 voice recording files in each directory. If the screen displays “out of space”, which indicates that the current directory has already saved 99 voice recording files, the user must switch to a new directory.

Voice

Press [PRE] or [NEXT] to select the Voice mode, then press [MENU] to confirm the selection and press [>II] to play the recording file.



Press the [>II] button to pause playback, then press the [PRE] or [NEXT] button to select recording files.



Sub-menu whilst device is playing:

Repeat	Refers to “repeat” in music mode
Replay mode	Refers to “replay” in music mode
Exit	Exit sub-menu

Sub-menu whilst device is stopped:

Local folder	Indicate the folder of file currently recording
Delete	Delete recording song
Delete All	Delete all recording files
Exit	Exit sub-menu

FM mode

Select the [PRE] or [NEXT] button to choose FM mode and press [MENU] to confirm.



Press [>II] (play/stop) to save the channel. If no channel has been saved, you can search for channels by auto or manual searching. Press [MENU] again to bring up the sub-menu below:



Save	Save currently tuned frequency
Record	Record current pre-set channel
Delete	Delete current pre-set channel
Delete All	Delete all saved channels
Auto Search	Auto search FM channel
Normal Band	Frequencies from 87.5MHz-108MHz
Japanese Band	Frequencies from 76.5MHz-90MHz
Exit	Exit FM sub-menu

Auto search: Holding the [PRE] button or [NEXT] button for two seconds will tune the frequency upward or downward until a radio station has been located. It will then stop automatically.

Manual search: press the [PRE] or [NEXT] button to search one channel upward or downward. Please note: Normal band and Japanese band can store 20 pre-set channels respectively.

Picture

Select the [PRE] or [NEXT] button to select Picture mode, then press [MENU] to confirm.



Press the [MENU] button again to enter the sub-menu:



Local folder	Select the folder where the picture is saved
Playback set	Manual play or auto play (there is a time gap for auto play from 1-10 seconds)
Delete file	Delete picture
Delete All	Delete all pictures
Exit	Exit sub-menu


Press the [>II] (play/stop) button to display the picture automatically or manually according to previous play setting.

SYS Setup

Press the [PRE] or [NEXT] button to select SYS Setup, then press [MENU] to confirm.



Press the [MENU] button again to enter the sub-menu:

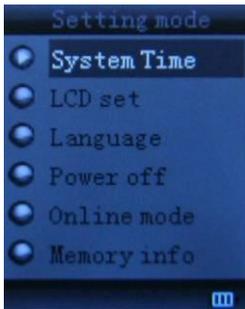

Record time	Press [MENU] to edit the recording time. Press the [NEXT] button to increase the digit of the year; press the [VOL+] button to edit the next digit, press the [PRE] or [NEXT] button to adjust the digit. Press [MENU] to confirm the setting.
LCD set	Always lit 10 seconds 20 seconds 30 seconds
Language	Simple Chinese, English, Traditional Chinese, Japanese, French, German, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Danish, Polish etc.
Power off	Off time: set self-power off time when the player has stopped and no button is pressed. The time unit is seconds. 0 means the function is switched off. Sleep time: set self-power off time once the last key has been pressed, regardless of whether the player is active or has stopped. The time unit is minutes.
Online mode	Multi Drive; Normal only; Encrypted only
Memory info.	Check the memory size and the remaining memory

Firmware version	Display the player's version of firmware
Firmware upgrade	Firmware can be upgraded by connecting to PC
Exit	Exit sub-menu

TEXT

Press the [PRE] or [NEXT] button to select Text, then press [MENU] to confirm.



Enter TEXT mode by pressing the Mode button. The item can then be read and edited in the device. The device can only recognise the article in “txt.” format. Press the [MENU] button again to enter the sub-menu:

Local folder	Select the folder where the picture is saved
Playback set	Manual play or auto play (there is a time gap for auto play from 1-10 seconds)
Delete file	Delete picture
Delete all	Delete all pictures
Exit	Exit sub-menu

Video Conversion Tool

Please follow the steps below to install the video conversion tool.

Unzip the “Video Conversion Tool .rar” which is stored in the device’s internal memory. Click on Run Setup.exe to start the installation process. If you find a tool named “AMV/AVI convert tool”, click and open it. A window will then appear. Choose the file you want to convert, then choose the folder you want to put the new converted file in. It is then OK to click “start converting”.

Video Conversion Steps


- 1) Unzip the file, double click the **Setup.exe** and install it.
- 2) Double click the **Amvtransform.exe**.
(folder: Program Files\Media Player Utilities 4.41\AMVConverter)
- 3) The following should then appear:



4) Click on the **Input file** and select the video which you need to convert.

5) Click  for settings.
Select the AMV and the resolution 160x120.

6) Click  for conversion.

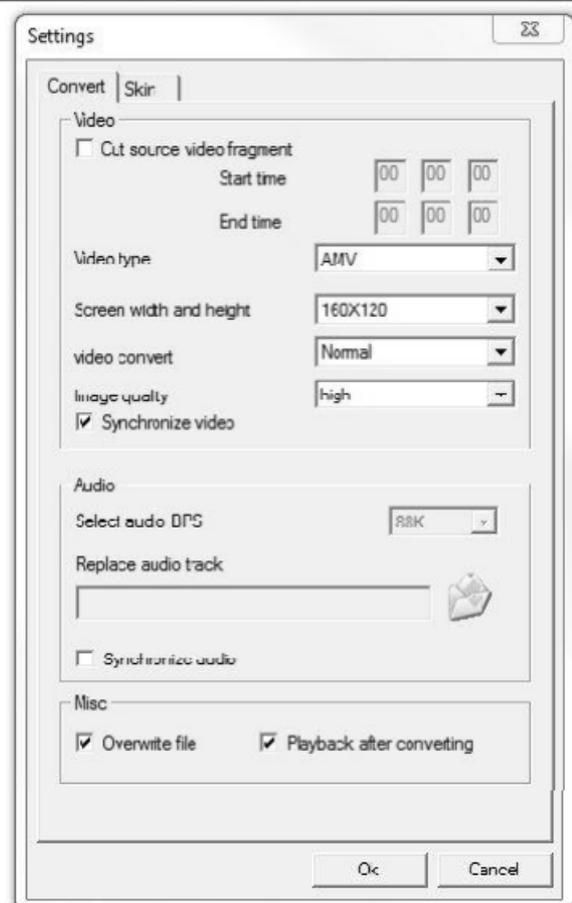

Troubleshooting

No power	Check battery level.
	Recharge as per instructions in User Manual.
Unable to locate or play files	Check that the file is in a compatible format.
	Check to see whether the file is stored in a different directory.
No music is heard in the earphones	Check the volume level.
	Check the connection (earphone to the earphone jack).
	Check whether your music file is compatible with your MP3 player.
Not charging	Check to make sure that your Digital Media Player is connected to a USB port on your computer.
Unable to download music	Check whether you have enough space on your Digital Media Player to download the music file.
	Check to make sure that the USB cable is connected to the PC and to the Digital Media Player.
Computer not recognising Digital Media Player	Check that the USB cable is connected to your computer properly.

	Try plugging the USB cable into one of the back ports on your computer.
--	---