




OBS1040-BK  
Bluetooth Speaker




## 1 Check the contents

Controleer de inhoud  
Kontrollieren Sie den Inhalt  
Vérifiez le contenu  
Revise el contenido  
Kontroller indholdet  
Tarkista sisältö

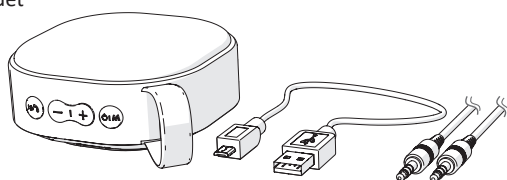



## 2 USB connection to charge device

USB aansluiting om apparaat te laden  
USB-Anschluss, um Gerät zu laden  
Connexion USB pour charger un appareil  
Conexión USB para cargar el aparato  
USB til at lade apparatet op  
USB-liitäntä laitteen lataamista varten

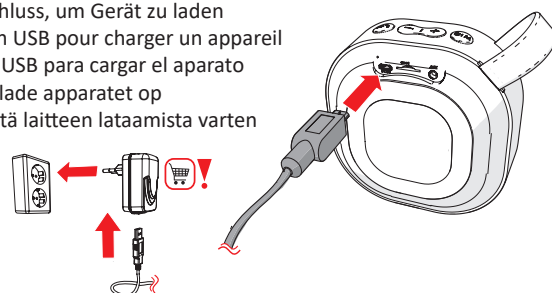

## 3 Main parts


Belangrijkste onderdelen  
Hauptkomponenten  
Pièces principales  
Partes principales  
Hoveddele  
Pääosat

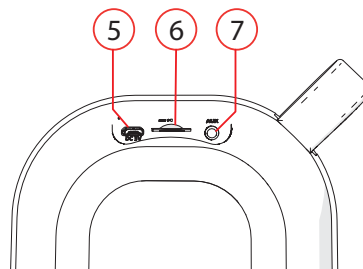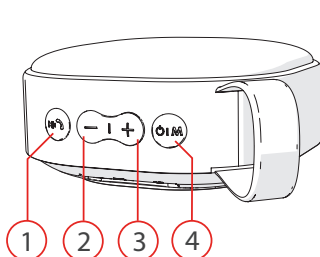

1	PLAY/PAUSE/CALL
2	VOLUME DOWN/PREVIOUS
3	VOLUME UP/NEXT
4	POWER/MODE
5	MICRO USB
6	MICRO SD SLOT
7	AUX IN


## 4 Turn on the device

Schakel het apparaat in  
Schalten Sie das Gerät ein  
Mettez l'appareil en marche  
Encienda el aparato  
Tænd for apparatet  
Kytke laite toimintaan

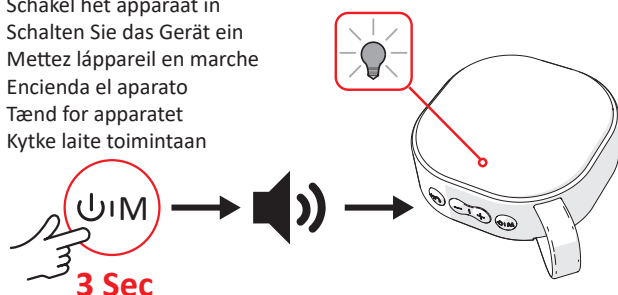

## 5 Bluetooth connection

Bluetooth verbinding  
Bluetooth-Verbindung  
Connexion Bluetooth  
Conexión Bluetooth  
Bluetooth tilslutning  
Bluetooth-yhteys

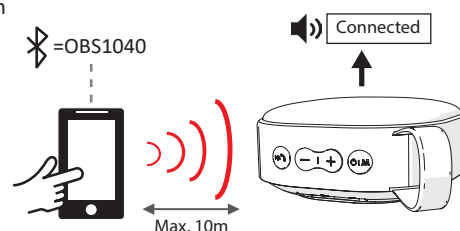


## 6 Play/pause

Afspelen/pauzeren  
Wiedergabe/pause  
Lecture/pause  
Jugar/pausar  
Spille/pause  
Pelata/tauko



## 7 Select a song


Selecteer een nummer  
Wählen Sie einen Song  
Sélectionnez une chanson  
Selecciona una canción  
Vælg en sang  
Valitse kappale

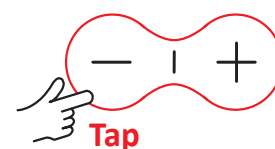

8

## Adjust the volume


Pas het volume aan  
 Passen Sie die Lautstärke an  
 Régler le volume  
 Ajuste el volumen  
 Indstil volumen  
 Säädä äänen voimakkuutta

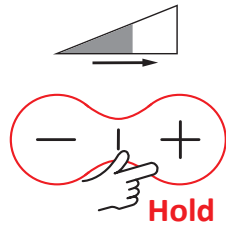

9

## Answer incoming calls


Inkomende oproepen beantwoorden  
 Beantworten Sie eingehende Anrufe  
 Répondre aux appels entrants  
 Responda las llamadas entrantes  
 Besvar indgående opkald  
 Vastaa tuleviin puheluihin

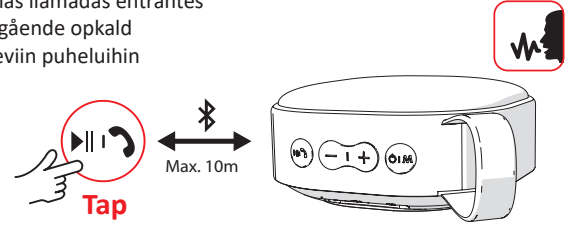

10

## Switch between modes


Schakelen tussen modi  
 Wechseln zwischen den Modi  
 Basculer entre les modes  
 Alternar entre modos  
 Skift mellem tilstande  
 Vaihtaa tilat

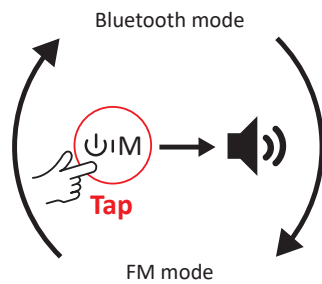

11

## FM mode

FM-modus  
 FM-modus  
 Mode FM  
 Modo FM  
 FM-modus  
 FM-tilaan

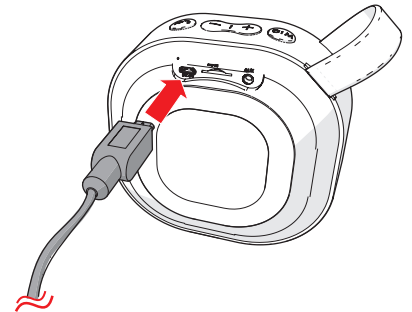


! FM mode only works with charging cable as antenna

12

## Adjust the frequency manually


Handmatig frequentie aanpassen  
 Frequenz manuell anpassen  
 Régler manuellement la fréquence  
 Ajustar frecuencia manualmente  
 Frekvensen justeres manuelt  
 Säädä taajuus käsin

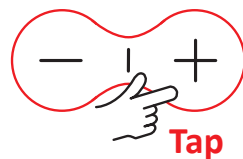

OR

## Adjust the frequency automatically


Pas automatisch de frequentie aan  
 Ändern Sie die Frequenz automatisch  
 Adaptez la fréquence automatiquement  
 Ajuste automático de frecuencia  
 Indstil frekvensen automatisk  
 Säädä taajuus automaattisesti

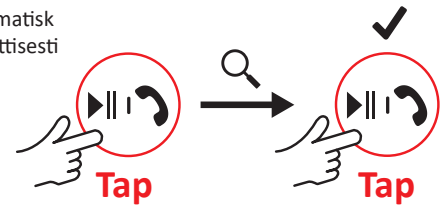

13

## AUX in for external devices

AUX IN voor externe apparaten  
 AUX IN für externe Geräte  
 AUX IN pour appareils externes  
 Conexión AUX IN para dispositivos externos  
 AUX IN til eksterne apparater  
 AUX IN -liitäntä ulkoisille laitteille

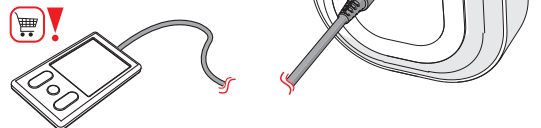

14

## Insert a microSD card

Plaats een microSD kaart  
 Legen Sie eine microSD-Karte ein  
 Introduisez une carte microSD  
 Inserte una tarjeta microSD  
 Indsæt et microSD-kort  
 Aseta microSD-kortti



### Specifications

Speaker output: 3W  
 FM Radio:  
 87,5-108 MHz  
 MicroSD  
 AUX IN  
 Micro USB  
 Bluetooth: max. 10m  
 Battery: 3h  
 Weight: 157 g  
 Dimensions:  
 84x84x40 mm  
 Warranty: 24 months

### Specificaties

Luidspreker output: 3W  
 FM Radio:  
 87,5-108 MHz  
 MicroSD  
 AUX IN  
 Micro USB  
 Bluetooth: max. 10m  
 Batterij: 3h  
 Gewicht: 157 g  
 Afmetingen:  
 84x84x40 mm  
 Garantie: 24 maanden

### Technische Daten

Lautsprecher-Output: 3W  
 FM Radio:  
 87,5-108 MHz  
 MicroSD  
 AUX IN  
 Micro USB  
 Bluetooth: max. 10m  
 Batterie: 3h  
 Gewicht: 157 g  
 Abmessungen:  
 84x84x40 mm  
 Garantie: 24 Monate

### Spécifications

Sortie haut-parleur: 2x3W  
 Radio FM:  
 87,5-108 MHz  
 MicroSD  
 AUX IN  
 Micro USB  
 Bluetooth: max. 10m  
 Batterie: 3h  
 Poids : 157 g  
 Dimensions :  
 84x84x40 mm  
 Garantie: 24 mois

### Especificaciones

Salida-altavoz: 3W  
 Radio FM:  
 87,5-108 MHz  
 MicroSD  
 AUX IN  
 Micro USB  
 Bluetooth: max. 10m  
 Batería: 3h  
 Peso: 157 g  
 Dimensiones:  
 84x84x40 mm  
 Garantía: 24 meses

### Spesifikationer

Højtaler-output: 3W  
 FM-radio:  
 87,5-108 MHz  
 MicroSD  
 AUX IN  
 Micro USB  
 Bluetooth: max. 10m  
 Batteri: 3h  
 Vægt: 157 g  
 Dimensioner:  
 84x84x40 mm  
 Garanti: 24 måned

### Tekniset tiedot

Kaiutinlähde: 3W  
 FM-radio:  
 87,5-108 MHz  
 MicroSD  
 AUX IN  
 Micro USB  
 Bluetooth: max. 10m  
 Akku: 3h  
 Paino: 157 g  
 Mitat:  
 84x84x40 mm  
 Takuu: 24 kuukautta