 


OBS2040-BL Bluetooth Speaker




1 Check the contents

Controleer de inhoud
Kontrollieren Sie den Inhalt
Vérifiez le contenu
Revise el contenido
Kontroller indholdet
Tarkista sisältö




2 USB connection to charge device

USB aansluiting om apparaat te laden
USB-Anschluss, um Gerät zu laden
Connexion USB pour charger un appareil
Conexión USB para cargar el aparato
USB til at lade apparatet op
USB-liitäntä laitteen lataamista varten

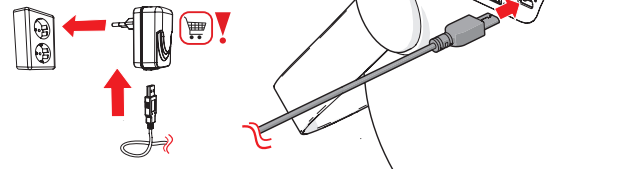

3 Main parts


Belangrijkste onderdelen
Hauptkomponenten
Pièces principales
Partes principales
Hoveddele
Pääosat

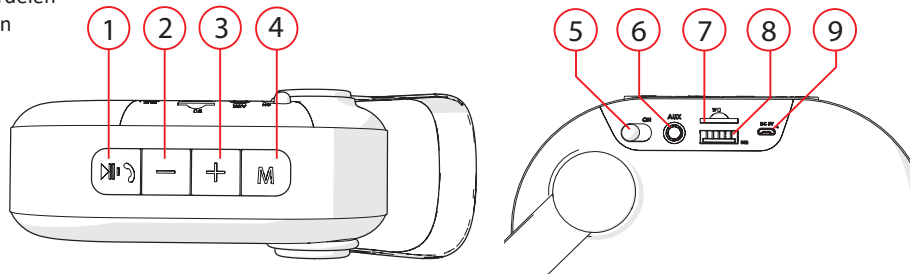

1	PLAY/PAUSE/CALL
2	VOLUME DOWN/PREVIOUS
3	VOLUME UP/NEXT
4	TOGGLE MODES
5	ON/OFF
6	AUX IN
7	MICRO SD SLOT
8	USB
9	MICRO USB


4 Turn on the device

Schakel het apparaat in
Schalten Sie das Gerät ein
Mettez l'appareil en marche
Encienda el aparato
Tænd for apparatet
Kytke laite toimintaan

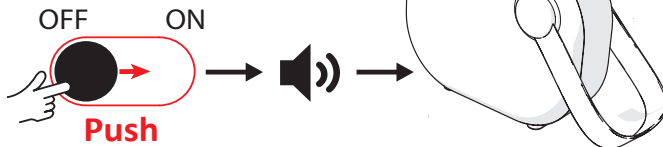


5 Bluetooth connection

Bluetooth verbinding
Bluetooth-Verbindung
Connexion Bluetooth
Conexión Bluetooth
Bluetooth tilslutning
Bluetooth-yhteys

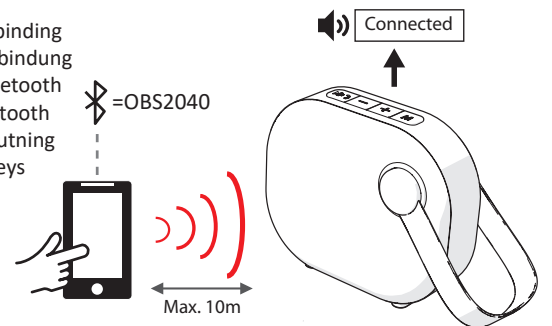


6 Play music

Muziek afspelen
Musik abspielen
Jouer de la musique
Tocar música
Afspille musik
Soita musiikkia

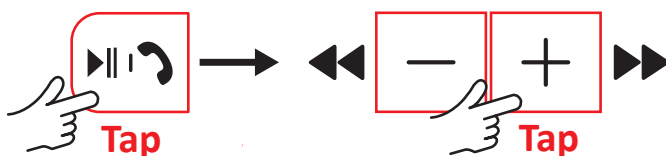

7 Adjust the volume


Pas het volume aan
Passen Sie die Lautstärke an
Réglez le volume
Ajuste el volumen
Indstil volumen
Säädä äänen voimakkuutta

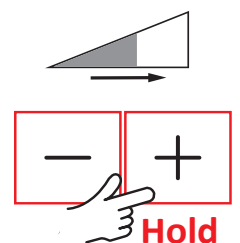

8

Answer incoming calls


Inkomende oproepen beantwoorden
 Beantworten Sie eingehende Anrufe
 Répondre aux appels entrants
 Responda las llamadas entrantes
 Besvar indgående opkald
 Vastaa tuleviin puheluihin

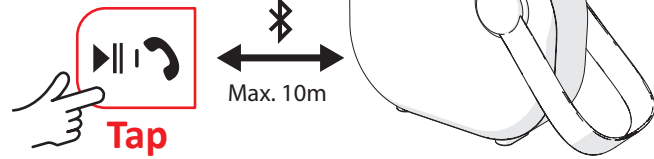

9

AUX IN for external devices


AUX IN voor externe apparaten
 AUX IN für externe Geräte
 AUX IN pour appareils externes
 Conexión AUX IN para dispositivos externos
 AUX IN til eksterne apparater
 AUX IN -liitäntä ulkoisille laitteille

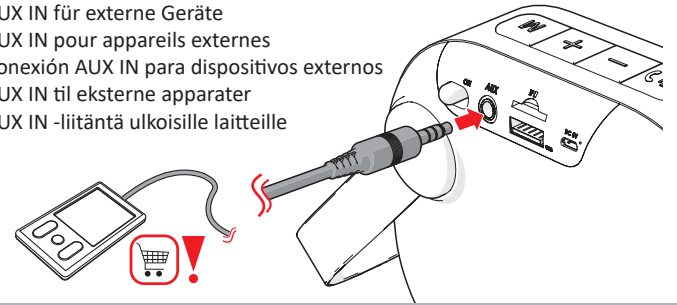

10

Switch between modes


Schakelen tussen modi
 Wechseln zwischen den Modi
 Basculer entre les modes
 Alternar entre modos
 Skift mellem tilstande
 Vaihtaa tilat

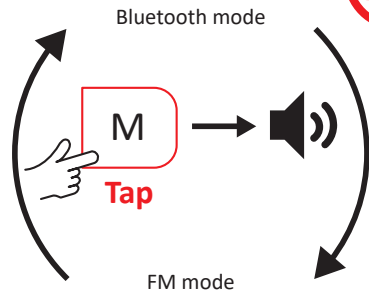

11

FM mode

FM-modus
 FM-modus
 Mode FM
 Modo FM
 FM-modus
 FM-tilaan

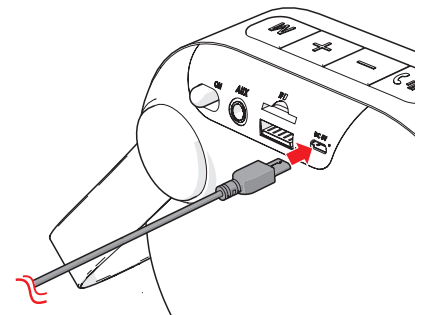


! FM mode only works with charging cable as antenna

12

Adjust the frequency manually


Handmatig frequentie aanpassen
 Frequenz manuell anpassen
 Régler manuellement la fréquence
 Ajustar frecuencia manualmente
 Frekvensen justeres manuelt
 Säädä taajuus käsin

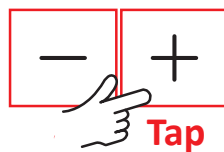

OR

Adjust the frequency automatically


Pas automatisch de frequentie aan
 Ändern Sie die Frequenz automatisch
 Adaptez la fréquence automatiquement
 Ajuste automático de frecuencia
 Indstil frekvensen automatisk
 Säädä taajuus automaattisesti

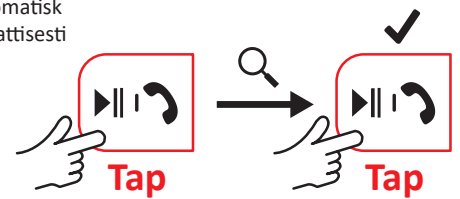

13

Insert a USB drive

Plaats een USB-stick
 Legen Sie einen USB-Stick ein
 Introduisez une clé USB
 Inserte una memoria USB
 Indsæt en USB-stick
 Aseta USB-asema

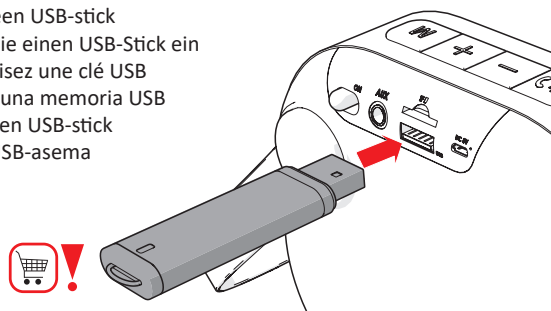

14

Insert a microSD card

Plaats een microSD kaart
 Legen Sie eine MicroSD-Karte ein
 Introduisez une carte MicroSD
 Inserte una tarjeta MicroSD
 Indsæt et MicroSD-kort
 Aseta MicroSD-kortti



Specifications

Specificaties

Technische Daten

Spécifications

Especificaciones

Spesifikationer

Tekniset tiedot

Power supply: 5V DC
 Speaker output: 2x3W
 FM Radio: 87,5-108 MHz
 MicroSD
 AUX IN
 USB/Micro USB
 Bluetooth: max. 10m
 Battery: 3h
 Weight: 329 g
 Dimensions: 140x114x48 mm
 Warranty: 24 months

Stroomvoeding: 5V DC
 Luidspreker output: 2x3W
 FM Radio: 87,5-108 MHz
 MicroSD
 AUX IN
 USB/Micro USB
 Bluetooth: max. 10m
 Batterie: 3h
 Gewicht: 329 g
 Afmetingen: 140x114x48 mm
 Garantie: 24 maanden

Stromzufuhr: 5V DC
 Lautsprecher-Output: 2x3W
 FM Radio: 87,5-108 MHz
 MicroSD
 AUX IN
 USB/Micro USB
 Bluetooth: max. 10m
 Batterie: 3h
 Gewicht: 329 g
 Abmessungen: 140x114x48 mm
 Garantie: 24 Monate

Alimentation électrique: 5V DC
 Sortie haut-parleur: 2x3W
 Radio FM: 87,5-108 MHz
 MicroSD
 AUX IN
 USB/Micro USB
 Bluetooth: max. 10m
 Batterie: 3h
 Poids : 329 g
 Dimensions : 140x114x48 mm
 Garantie: 24 mois

Fuente de alimentación: 5V DC
 Salida-altavoz: 2x3W
 Radio FM: 87,5-108 MHz
 MicroSD
 AUX IN
 USB/Micro USB
 Bluetooth: max. 10m
 Bateria: 3h
 Peso: 329 g
 Dimensiones: 140x114x48 mm
 Garantía: 24 meses

Strømforsyning: 5V DC
 Højttaler-output: 2x3W
 FM-radio: 87,5-108 MHz
 MicroSD
 AUX IN
 USB/Micro USB
 Bluetooth: max. 10m
 Batteri: 3h
 Vægt: 329 g
 Dimensioner: 140x114x48 mm
 Garanti: 24 måned

Syöttövirta: 5V DC
 Kaiutinlähtö: 2x3W
 FM-radio: 87,5-108 MHz
 MicroSD
 AUX IN
 USB/Micro USB
 Bluetooth: max. 10m
 Akku: 3h
 Paino: 329 g
 Mitat: 140x114x48 mm
 Takuu: 24 kuukautta